

100% MONEY BACK GUARANTEE
BUY IT NOW!
Click Here To Order

000

TANG

Buy Now



DEMO

This DEMO contains only a few pages of the entire manual/product.

Not all Bookmarks work on the Demo, but they do on the full version.

Features:

- Searchable text
- Printable pages
- Bookmarked for easy navigation
- High Resolution images
- Zoom to see exact details
- Money back Guarantee
- Available on USB and eBook download



WIRING DIAGRAMS

**Official
Licensed
Product**

License #84356800

Copyright © 2024, Forel Publishing Company, LLC, Woodbridge, Virginia

All Rights Reserved. No part of this book may be used or reproduced in any manner whatsoever without written permission of Forel Publishing Company, LLC. For information write to Forel Publishing Company, LLC, Woodbridge, VA 22192

2000 Mustang Wiring Diagrams

EAN: 978-1-60371-435-8

ISBN: 1-60371-435-9

Forel Publishing Company, LLC
Woodbridge, VA 22192
Email: sales@ForelPublishing.com
<https://www.ForelPublishing.com>



License #84356800

This publication contains material that is reproduced and distributed under a license from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Note from the Publisher

This product was created from the original Ford Motor Company's publication. Every effort has been made to use the original scanned images, however, due to the condition of the material; some pages have been modified to remove imperfections.

Disclaimer

Although every effort was made to ensure the accuracy of this book, no representations or warranties of any kind are made concerning the accuracy, completeness or suitability of the information, either expressed or implied. As a result, the information contained within this book should be used as general information only. The author and Forel Publishing Company, LLC shall have neither liability nor responsibility to any person or entity with respect to any loss or damage caused, or alleged to be caused, directly or indirectly by the information contained in this book. Further, the publisher and author are not engaged in rendering legal or other professional services. If legal, mechanical, electrical, or other expert assistance is required, the services of a competent professional should be sought.



WE WANT TO HEAR FROM YOU
Your suggestions will help us to improve future editions of this manual.

Instructions:

- Use only one form for each publication
 - Use **separate** form for each concern
 - **Do not** use this form to order publications
 - Mail the completed form to the address on the reverse side
- OR**
- FAX the completed form to (313) 390-8727

Date: _____

- Publication:**
- | | |
|--|--|
| <input type="checkbox"/> Passenger Car Workshop Manual | <input type="checkbox"/> Body Repair Manual |
| <input type="checkbox"/> Owner Guide | <input type="checkbox"/> Truck Workshop Manual |
| <input type="checkbox"/> Wiring Diagram/EVTM | <input type="checkbox"/> PC/ED Manual |

Vehicle Line: _____ Model Year: _____

Please check the area in which the concern is located in the publication:

- | | | |
|---|---|---|
| <input type="checkbox"/> Body | <input type="checkbox"/> Transmission/Transaxle | <input type="checkbox"/> Battery/Charging |
| <input type="checkbox"/> Frame and Mounting | <input type="checkbox"/> Clutch | <input type="checkbox"/> Audio |
| <input type="checkbox"/> Engine | <input type="checkbox"/> Exhaust | <input type="checkbox"/> Lighting |
| <input type="checkbox"/> Suspension | <input type="checkbox"/> Fuel | <input type="checkbox"/> Electrical |
| <input type="checkbox"/> Driveline | <input type="checkbox"/> Climate Control | <input type="checkbox"/> Schematics |
| <input type="checkbox"/> Brakes | <input type="checkbox"/> Instrumental Warning | <input type="checkbox"/> Pinpoint Test |
| <input type="checkbox"/> Steering | | |

Section and Pages: _____

Explain your concern or suggestion below: (Please print)

What do you think is the main cause of your concern?

- Missing Information Inaccurate Information Incomplete Information

Please tell us who you are: (Please print)

Your Name: _____
 Company Name: _____
 Street: _____
 City: _____ State: _____ Zip/Postal Code: _____
 Phone Number: _____ FAX Number: _____

Occupation: (Please mark box)

- | | |
|--|--|
| <input type="checkbox"/> Ford Dealership Technician | <input type="checkbox"/> Ford Dealership Service Manager |
| <input type="checkbox"/> Home Mechanic | <input type="checkbox"/> Engineer |
| <input type="checkbox"/> Technician - Other than Ford Dealership | <input type="checkbox"/> Other: _____ |

Are there features of this publication that you would like to see changed or expanded?

- Organization Technical Detail Format and Style Other: _____


_____ the publication?

DO NOT STAPLE — USE TRANSPARENT TAPE



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 400 DEARBORN, MI

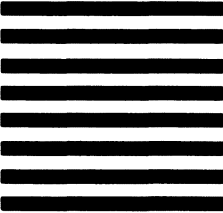

POSTAGE WILL BE PAID BY ADDRESSEE

**Technical Service Publications
Wiring Diagrams
P.O. Box 2592
Dearborn, MI 48123-2592**



100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

WIRING DIAGRAMS

FCS-12121-00

FORD CUSTOMER SERVICE DIVISION

Quality is Job 1

Ford Customer Service Division has developed a new format for the 2000 Mustang Wiring Diagrams . Our goal is to provide accurate and timely electrical information.

2000 Wiring Diagrams Features

- Schematic pages now contain **Component Location** referencmes to full-view illustrations and **Component Descriptions** that describe the system function of a component.
- **"COMPONENT TESTING"** procedures (CELL 149) that tell the user how to perform diagnostic tests on various circuits.
- **Connector End Views** are now located at the end of individual cells and are shown for connectors with five or more cavities; a circuit function chart is provided.
- **NOTES, CAUTIONS and WARNINGS** contain important safety information.
- Full view **"COMPONENT LOCATION VIEWS"** (CELL 151) to help locate on-vehicle components.
- Circuit voltages have been added to schematic pages to help simplify troubleshooting. Nonessential troubleshooting hints have been deleted.
- **Cellular Pagnation:** A specific section (or cell) in all Wiring Diagrams is numbered by cell and starts with page 1. For example: **"HOW TO USE THIS MANUAL"** is CELL 2 and begins with page 2-1.
- **"IN-LINE CONNECTOR FACES"** (CELL 150) has been added for in-line connectors with six or more terminals, to aid in servicing electrical wiring.
- "C" numbers have been assigned for all electrical connectors. "C" numbers are listed in the **"LOCATION INDEX"** (CELL 152).
- **"HARNES CAUSAL PART NUMBERS"** (CELL 153) has been added to aid in identifying warranty concerns.

in a suffix to denote connector "gender" type (F-socket, M-prior blade).

itions contained in this manual were in effect at the time this manual was
otor Company reserves the right to discontinue models at any time, or change
t notice and without incurring any obligation.

ORDERING INFORMATION

Information about how to order additional copies of this publication or other Ford publications may be obtained by writing to Helm, Incorporated at the address shown below or by calling 1-800-782-4356. Other publications available include:

- Workshop Manuals
- Service Specification Books
- Car/Truck Wiring Diagrams
- Powertrain Control/Emissions Diagnosis Manuals

Helm Incorporated
P.O. Box 07150
Detroit, Michigan 48207

All rights reserved. Reproduction by any means, electronic or mechanical, including photocopying, recording, or by any information storage and retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company.

Copyright © 2000, Ford Motor Company



1-1 TABLE OF CONTENTS/INDEX

2000 MUSTANG

Table of Contents

How to Use This Manual	2-1
Grounds	10-1
Fuse Panel/Circuit Protection	11-1
Charging System	12-1
Power Distribution	13-1
Multiplex Communication Network ...	14-1
Starting System	20-1
Ignition System	21-1
Electronic Engine Controls (3.8L)	23-1
Electronic Engine Controls (4.6L 2V) .	24-1
Electronic Engine Controls (4.6L 4V) .	25-1
Transmission Controls (4R70W)	29-1
Speed Control	31-1
Cooling Fan	33-1
Shift Lock	37-1
Anti-lock Brake System (ABS)	42-1
Horn/Cigar Lighter	44-1
Air Bag Restraint System	46-1
Air Conditioner/Heater	54-1
Rear Window Defrost	56-1
Multifunction Electronic	
Control Modules	59-1
Instrument Cluster	60-1
Warning Chime	66-1
Instrument Illumination	71-1
Interval Wiper/Washer	81-1
Headlamps	85-1
Fog Lamps	86-1
Courtesy Lamps	89-1
Daytime Running Lamps (DRL)	97-1
Turn/Stop/Hazard Lamps	90-1
Lamps	92-1
Lamps	93-1
Lamps	100-1
Lamps	102-1
Lamps	110-1

Remote Keyless Entry	111-1
Anti-Theft	112-1
Luggage Compartment	
Lid Release	113-1
Power Seats	120-1
Power Lumbar Seats	122-1
Power Mirrors	124-1
Radio	130-1
Component Testing	149-1
In-Line Connector Faces	150-1
Component Location Views	151-1
Location Index	152-1
Harness Causal Part Number	153-1
Vehicle Repair Location Codes	160-1

POWER POINT	13-3
POWER SEAT	13-4
POWER WINDOWS	13-4
THERM	13-3
Central Junction Box	
Fuse 1	13-7
Fuse 4	85-1
Fuse 5	13-6
Fuse 6	13-5
Fuse 7	13-7
Fuse 10	85-1
Fuse 11	13-6
Fuse 13	13-7
Fuse 15	13-8
Fuse 17	13-6
Fuse 18	13-5
Fuse 19	13-7
Fuse 20	13-5
Fuse 21	13-8
Fuse 23	13-6
Fuse 24	13-5
Fuse 25	13-8
Fuse 26	13-5
Fuse 27	13-9
Fuse 28	13-5
Fuse 29	13-6
Fuse 30	13-5
Fuse 31	13-8
Fuse 32	13-5
Fuse 33	13-9
Fuse 34	13-5
Fuse 35	90-1
Fuse 36	13-5
Fuse 37	13-13
Fuse 38	85-1
Fuse 39	13-9
Fuse 41	90-1

Index

Air Bag Restraint System	46-1
Air Conditioner/Heater	54-1
Anti-Lock Brake System (ABS)	42-1
Anti-Theft	112-1
Battery Junction Box	
ABS 1	13-3
ABS 2	13-3
A/C PRESSURE	13-1
ALT	13-1
AUDIO	13-4
CONV TOP	13-3
DRL, FOG	13-4
FAN	13-1
FUEL PUMP	13-1
HD LPS	13-2
HORN	13-4
HTD BL	13-1
IGN SW	13-2
I/P	13-4
PARK LAMPS	13-2
PCM PWR	13-2

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

TABLE OF CONTENTS/INDEX 1-2

2000 MUSTANG

Fuse 43	13-5
Charging System	12-1
Cigar Lighter	44-2
Component Location Views	151-1
Component Testing	
Driver Seat Control Switch	149-10
Exterior Rear View Mirror	149-11
Ignition Switch	149-2
Introduction	149-1
Main Light Switch	149-1
Master Window/Door Lock	
Control Switch	149-5, 149-6, 149-7, 149-8
Micro ISO Relay	149-13
Mini ISO Relay	149-12
Multifunction Switch	149-3, 149-4
Right Window/Door Lock	
Control Switch	149-9
Convertible Top	102-1
Courtesy Lamps	89-1
Daytime Running Lamps (DRL)	97-1
Defrost (Rear Window)	56-1
Door Locks (Power)	110-1
Electronic Engine Control (3.8L)	23-1
Electronic Engine Control (4.6L 2V)	24-1
Electronic Engine Control (4.6L 4V)	25-1
Exterior Lamps	92-1
Fog Lamps	86-1
Fuse Panel/Circuit Protection	11-1
Gauges	
Fuel	60-1
Oil Pressure	60-1
Speedometer	60-2
Tachometer	60-2
Temperature	60-2
Voltage	60-2
Water Level	60-2
Wiper/Washer	59-1

Grounds	
G101	10-3
G102	10-1
G103	10-3
G104	10-2
G105	10-2
G201	10-4
G203	10-5
G204	10-6
G205	10-5
G300	10-9
G400	10-7
G402	56-1
Harness Causal Part Numbers	153-1
Headlamps	85-1
Horn	44-1
Ignition Switch	13-5, 13-6
Ignition System	21-1
Indicators	
Air Bag	60-2
Anti-Lock	60-1
Anti-Theft	60-2
Brake	60-2
Charge	60-2
Fasten Belts	60-2
High Beam	60-2
Left Turn	60-2
Low Coolant	60-2
Malfunction Indicator Lamp (MIL)	
(Check Engine)	60-2
Right Turn	60-2
Transmission Control Indicator	
Lamp (TCIL) (OD OFF)	60-2
In-Line Connector Faces	150-1
Instrument Cluster	60-1
Instrument Illumination	71-1
Interval Wiper/Washer	81-1

Lamps (Exterior)	
Daytime Running	97-1
Exterior	92-1
Fog	86-1
Hazard	90-1
Headlamps	85-1
License	92-1
Park	
Front	92-1
Rear	92-1
Reversing	93-1
Side	
Front	92-1
Rear	92-1
Stop	90-3
Turn	
Front	90-2
Rear	90-3
Lamps (Interior)	
Courtesy	89-1
Instrument Illumination	71-1
Interior	89-2, 89-3
Luggage Compartment	89-4
Map	89-2, 89-3
Vanity Mirror	89-2, 89-3
Location Index	152-1
Luggage Compartment Lid Release ...	113-1
Main Light Switch	13-13
Mirrors (Power)	124-1
Multiplex Communication Network	14-1
Power Distribution	13-1
Power Door Locks	110-1
Power Lumbar Seat	122-1
Power Mirrors	124-1
Power Windows	100-1
Convertible	100-1
Coupe	100-3



1-3 TABLE OF CONTENTS/INDEX

2000 MUSTANG

Radio	
Premium Sound	130-1
Super Sound	130-3
Rear Window Defrost	56-1
Remote/Keyless Entry	111-1
Reversing Lamps	93-1
Seats (Lumbar)	122-1
Shift Lock	37-1
Speed Control	31-1
Starting System	20-1
Turn/Stop/Hazard Lamps	90-1
Vehicle Repair Location Codes	160-1
Warning Chime	66-1
Windows (Power)	100-1
Wiper/Washer (Interval)	81-1

IMPORTANT SAFETY NOTICE

Appropriate service methods and proper repair procedures are essential for the safe, reliable operation of all motor vehicles, as well as the personal safety of the individual doing the work. This Manual provides general directions for accomplishing service and repair work with tested, effective techniques. Following them will help assure reliability.

There are numerous variations in procedures, techniques, tools, and parts for servicing vehicles, as well as in the skill of the individual doing the work. This Manual cannot possibly anticipate all such variations and provide advice or cautions as to each. Accordingly, anyone who departs from the instructions provided in this Manual must first establish that the choice of methods, tools, or parts does not compromise personal safety or the vehicle integrity.



BUY IT NOW!
Click Here To Order



2-1 HOW TO USE THIS MANUAL

2000 MUSTANG

The purpose of this manual is to show electrical circuits in a clear and simple fashion to make troubleshooting easier. **NOTES**, **CAUTIONS** and **WARNINGS** contain important information.

- **NOTES** describe how switches and other components operate to help complete a particular procedure.
- **CAUTIONS** provide information that could prevent making an error that may damage the vehicle.
- **WARNINGS** provide information to prevent personal injury.

The **WARNINGS** list on page 2-2 contains general warnings to follow when servicing a vehicle.

Components that work together are shown together. All electrical components used in a specific system are shown on one diagram. The circuit breaker or fuse is shown at the top of the page. All wires, connectors, components and splices are shown in the flow of current to ground at the bottom of the page. If a component is used in several different systems, it is shown in several places. For example, the Main Light Switch is electrically a part of many systems and is repeated on many pages.

In some cases, a component may seem (by its name) to belong to a system where it has no electrical connection. For example, Radio Illumination is electrically part of Instrument Illumination, but because it has no electrical connection to the Radio system, it is not shown on the Radio diagram.

Schematic pages contain references to full-view illustrations and description notes for various components. The references are reverse-text blocks on the connector and operation page and

Schematic pages contain circuit voltages to help simplify troubleshooting hints. 12V is used to imply battery voltage on a component connector terminal, and 0V is used to show that there should be continuity to ground on that particular terminal. Conditional voltages such as “12V with the ignition switch in RUN” will also be provided. Troubleshooting hints that can’t be simplified with circuit voltages will be shown at the end of each cell.

Component connector face information specific to a certain cell is found at the end of that cell. A Connector Face Reference List is provided to locate connector faces that are shown in different cells. Component connectors with five or more terminals are illustrated and are accompanied by a pinout chart that lists the function of all circuitry associated with that component.

“**GROUND**S” (Cell 10) contains ground circuitry shown in complete detail. This information is useful for checking interconnections of the ground circuits of different systems.

“**POWER DISTRIBUTION**” (Cell 13) contains power distribution circuitry shown in complete detail. This section displays how the various fuses are powered and, in turn, how each system is powered.

“**COMPONENT TESTING**” (Cell 149) contains testing procedures for various switches. This information includes schematics, component terminal locations and step-by-step procedures.

“**IN-LINE CONNECTOR FACES**” (Cell 150) contains illustrations of all the in-line connectors that have 6 or more terminals. The terminals have pin numbers assigned to them.


“**COMPONENT LOCATION VIEWS**” (Cell 151) contains full-view illustrations which show the location of components and connectors in the vehicle.

The “**LOCATION INDEX**” (Cell 152) provides the base part numbers, locations, connector face references and illustration references for all components, connectors, splices and grounds.

HELPFUL REMINDERS

Before using the wiring diagrams for troubleshooting, refer to these **HELPFUL REMINDERS**:

1. The abbreviation T/O, for take out, used in the Location Index (Cell 152), refers to the point at which a group of wires branch off the harness trunk. Refer to the wiring harness illustration.

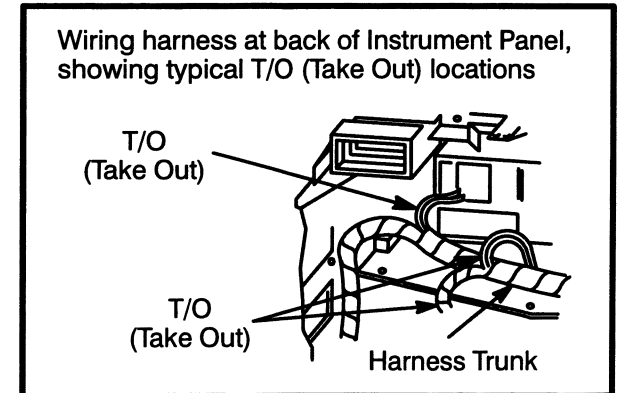

2. If a connector serves the same purpose in two separate versions (e.g., Automatic/Manual), but is physically different, *two* connector numbers are used. However, if a connector serves the same purpose in two separate versions (e.g., Automatic/Manual) and is physically the same, but the wire colors are different, only *one* connector number is used. If the same physical connector is used more than once, then more than *one* connector number is used.

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Cards DISCOVER NOVUS MasterCard VISA

3. Wiring schematics provide a picture of how and under what conditions the circuit is powered, of the current path to circuit components, and of how a circuit is grounded. Each circuit component is named (underlined titles). Wire and connector colors are listed as follows (standard Ford color abbreviations are used):

COLOR ABBREVIATIONS

BU	Blue	NA	Natural
BK	Black	OG	Orange
BN	Brown	PK	Pink
DB	Dark Blue	VT	Purple
DG	Dark Green	RD	Red
GN	Green	SR	Silver
GY	Gray	TN	Tan
LB	Light Blue	WH	White
LG	Light Green	YE	Yellow

Note: Whenever a wire is labeled with two colors, the first color listed is the basic color of the wire, and the second color listed is the stripe marking of the wire.

4. When reporting Vehicle Repair Location Codes to Ford Customer Service Division, refer to Cell 160 (beginning on page 160-1). Note: Do *not* use the illustrations in Cell 151 (beginning on page 151-1) for reporting Vehicle Repair Location Codes.

5. WARNINGS

- *Always wear safety glasses for eye protection.*
- *Use safety stands whenever a procedure requires being under a vehicle.*
- *Be sure that the **Ignition Switch** is always in the OFF position, unless otherwise required by the procedure.*
- *Set the parking brake when working on any vehicle. An automatic transmission should be in PARK. A manual transmission should be in NEUTRAL.*
- *Operate the engine only in a well-ventilated area to avoid danger of carbon monoxide.*
- *Keep away from moving parts, especially the fan and belts, when the engine is running.*
- *To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe, catalytic converter and muffler.*
- *Do not allow flame or sparks near the battery. Gases are always present in and around the battery cell. An explosion could occur.*
- *Do not smoke when working on a vehicle.*
- *To avoid injury, always remove rings, watches, loose hanging jewelry and avoid wearing loose clothing.*

HOW TO FIND ELECTRICAL CONCERNS

TROUBLESHOOTING STEPS

These six steps present an orderly method of troubleshooting.

Step 1. Verify the concern.

- Operate the complete system to check the accuracy and completeness of the customer's complaint.

Step 2. Narrow the concern.

- Using the wiring diagrams, narrow down the possible causes and locations of the concern to pinpoint the exact cause.
- Read the description notes at the components and study the wiring schematic. You should then know enough about the circuit operation to determine where to check for the trouble. Further information can be found by referring to the Service Manual pages listed in the box at the top of the page.

Step 3. Test the suspected cause.

- Use electrical test procedures to find the specific cause of the symptoms.
- The component location reference bars and the pictures will help you find components. The Location Index (at the end of the manual) gives component location information for connectors, diodes, resistors, splices and grounds.

Step 4. Verify the cause.

- Confirm that you have found the correct cause by connecting jumper wires and/or temporarily installing a known good component and operating the circuit.

Step 5. Make the repair.

- Repair or replace the inoperative component.

Step 6. Verify the repair.

- Operate the system as in Step 1 and check that your repair has removed all symptoms without creating any new symptoms.



2-3 HOW TO USE THIS MANUAL

2000 MUSTANG

Some engine circuits may need special test equipment and special procedures. See the *Workshop Manual* and other service books for details. You will find the circuits in this manual to be helpful with those special test procedures.

TROUBLESHOOTING TOOLS

JUMPER WIRE

This is a test lead used to connect two points of a circuit. A Jumper Wire can bypass an open to complete a circuit.

WARNING

Never use a jumper wire across loads (motors, etc.) connected between hot and ground. This direct battery short may cause injury or fire.

VOLTMETER

A DC Voltmeter measures circuit voltage. Connect negative (- or black) lead to ground, and positive (+ or red) lead to voltage measuring point.

OHMMETER

An Ohmmeter shows the resistance between two connected points (Figure 1).

TEST LAMP

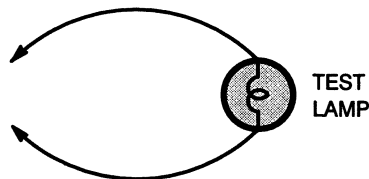


Figure 2 – Test Lamp

A Test Light is a 12-volt bulb with two test leads (Figure 2).

Uses: Voltage Check, Short Check.

SELF-POWERED TEST LAMP

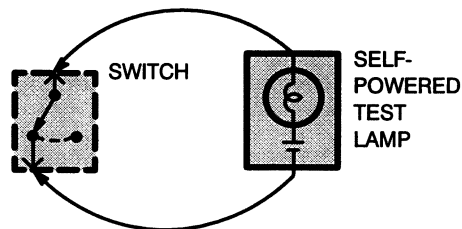


Figure 3 – Continuity Check

The Self-Powered Test Lamp is a bulb, battery and set of test leads wired in series (Figure 3). When connected to two points of a continuous circuit, the bulb glows.

Uses: Continuity Check, Ground Check.

CAUTION

When using a self-powered test lamp or ohmmeter, be sure power is off in circuit during testing. Hot circuits can cause equipment damage and false readings.

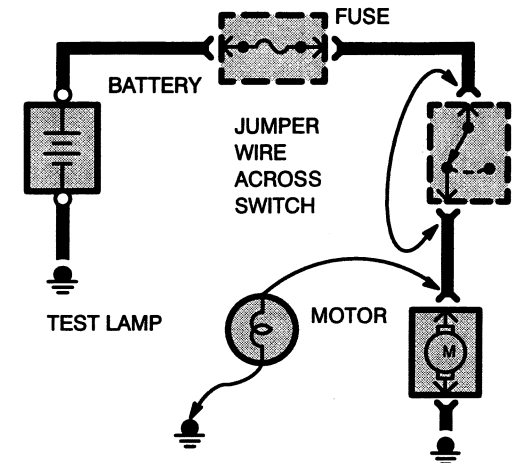


Figure 4 – Switch Circuit Check and Voltage Check

In an inoperative circuit with a switch in series with the load, jumper the terminals of the switch to power the load. If jumpering the terminals powers the circuit, the switch is inoperative (Figure 4).

CONTINUITY CHECK (Locating open circuits)

Connect one lead of Self-Powered Test Lamp or Ohmmeter to each end of circuit (Figure 3). Lamp will glow if circuit is closed. Switches and fuses can be checked in the same way.

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

VOLTAGE CHECK

Connect one lead of test lamp to a known good ground or the negative (-) battery terminal. Test for voltage by touching the other lead to the test point. Bulb goes on when the test point has voltage (Figure 4).

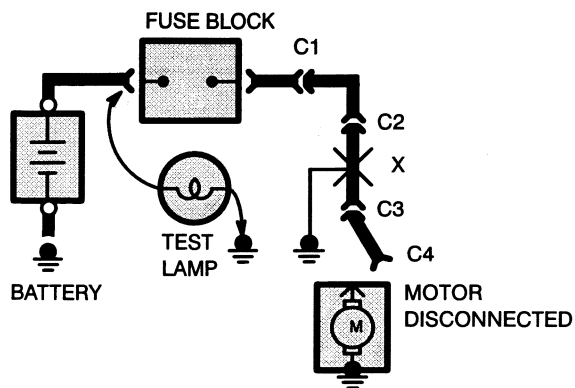


Figure 5 – Short Check

A fuse that repeatedly blows is usually caused by a short to ground. It's important to be able to locate such a short quickly (Figure 5).

1. Turn off everything powered through the fuse.
2. Disconnect other loads powered through the fuse:
 - Motors: disconnect motor connector (Connector C4 in Figure 5).
 - Lights: remove bulbs.

Turn Ignition Switch to RUN (if necessary) to

4. Connect one Test Lamp lead to hot end of blown fuse. Connect other lead to ground. Bulb should glow, showing power to fuse. *(This step is just a check to be sure you have power to the circuit.)*

5. Disconnect the test lamp lead that is connected to ground, and reconnect it to the load side of the fuse at the connector of the disconnected component. (In Figure 5, connect the test lamp lead to connector C4.)

- If the Test Lamp is off, the short is in the disconnected component.
- If the Test Lamp goes on, the short is in the wiring. You must find the short by disconnecting the circuit connectors, one at a time, until the Test Lamp goes out. For example, in Figure 5 with a ground at X, the bulb goes out when C1 or C2 is disconnected, but not after disconnecting C3. This means the short is between C2 and C3.

Turn on power to the circuit. Perform a Voltage Check between the suspected inoperative ground and the frame. Any indicated voltage means that the ground is inoperative (Figure 6).

Turn off power to the circuit. Connect one lead of a Self-Powered Test Lamp or Ohmmeter to the wire in question and the other lead to a known ground. If the bulb glows, the circuit ground is OK (Figure 6).

The circuit schematics in this manual make it easy to identify common points in circuits. This knowledge can help narrow the concern to a specific area. For example, if several circuits fail at the same time, check for a common power or ground connection (see *Power Distribution or Grounds*). If part of a circuit fails, check the connections between the part that works and the part that doesn't work.

For example, if the lo beam headlights work, but the high beams and the indicator lamp don't work, then power and ground paths must be good. Since the dimmer switch is the component that switches this power to the high beam lights and indicator, it is most likely the cause of failure.

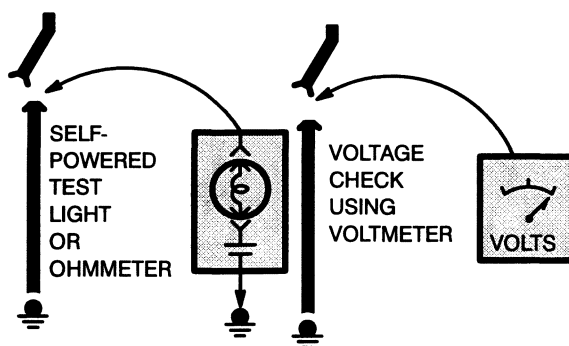


Figure 6 – Ground Check

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


2-5 HOW TO USE THIS MANUAL

2000 MUSTANG


TROUBLESHOOTING WIRING HARNESS AND CONNECTOR HIDDEN CONCERNS

The following illustrations are known examples of wiring harness, splices and connectors that will create intermittent electrical concerns. The concerns are hidden and can only be discovered by a physical evaluation as shown in each illustration.


NOTE: Several components, such as the PCM, utilize gold plated terminals in their connections to the wiring harness. If those terminals need to be replaced, they must be replaced with a gold plated terminal.

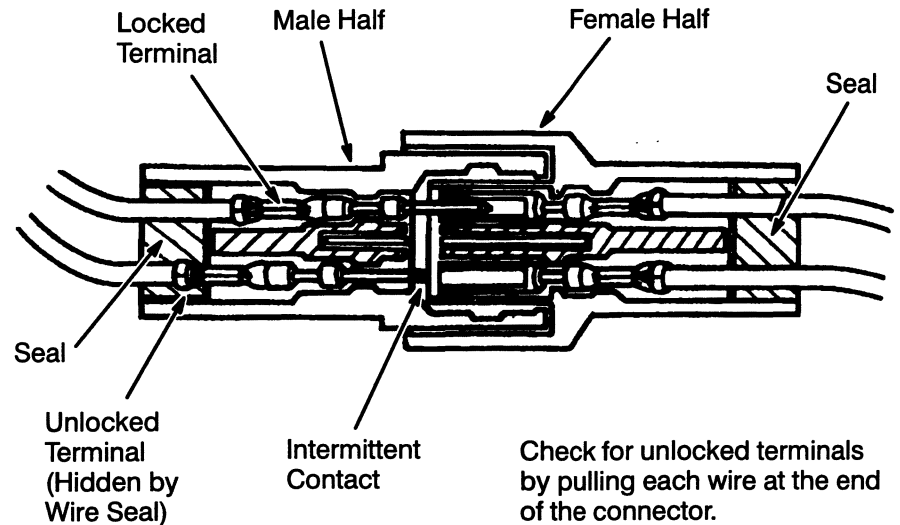

TERMINAL NOT PROPERLY SEATED

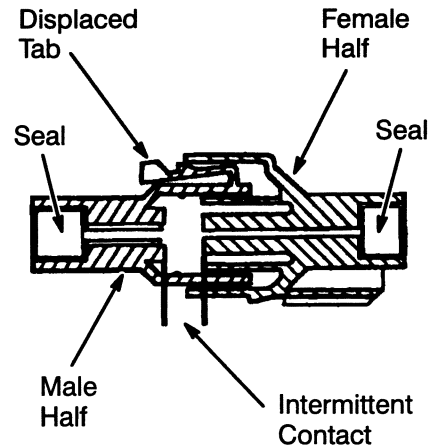


Lock may be displaced into an unlocked position; pull on the connector to verify the lock.

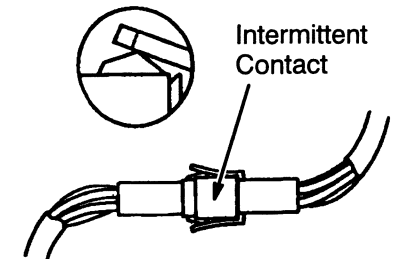

Type A

Type B

PARTIALLY MATED CONNECTORS

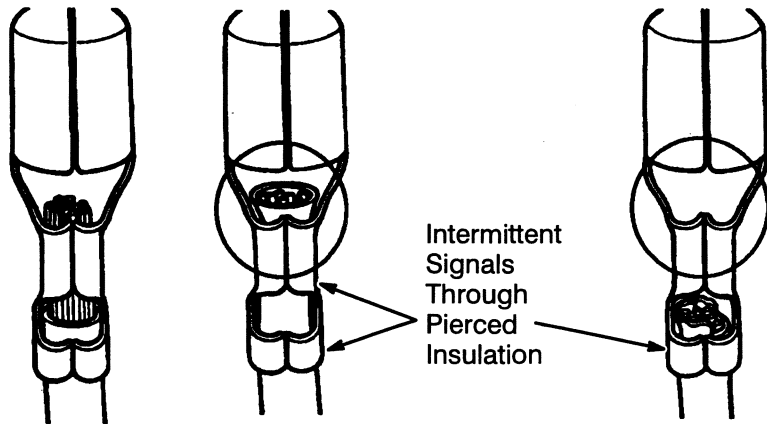

Proper

Insulation


Wire Strands Missing

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

WIRE STRIPPING

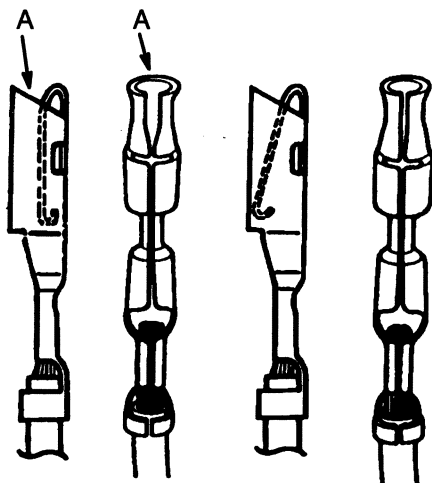

Enlarged


Normal

Any probe entering the terminal may enlarge the contact spring opening creating an intermittent signal. Insert the correct mating terminal (Location A) from the service kit and feel for a loose fit.


DEFORMED (ENLARGED) FEMALE TERMINALS

Solder Coated Wire to Ground

Solder coated wire pierced through the insulation of another circuit.

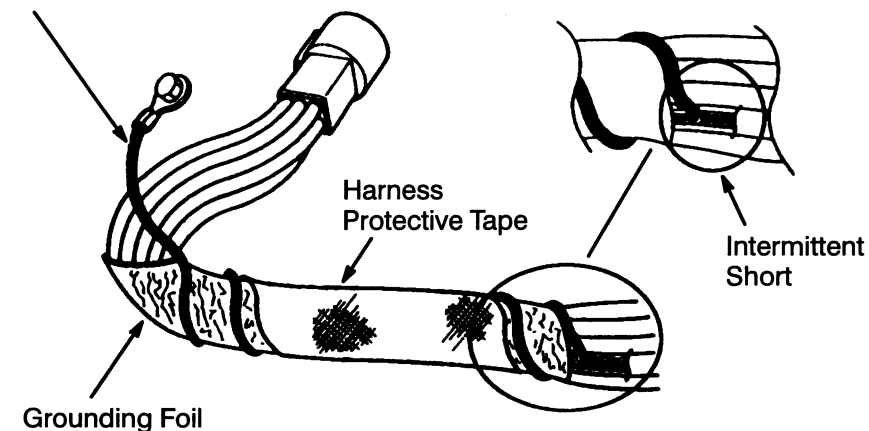


ELECTRICAL SHORT INSIDE THE HARNESS

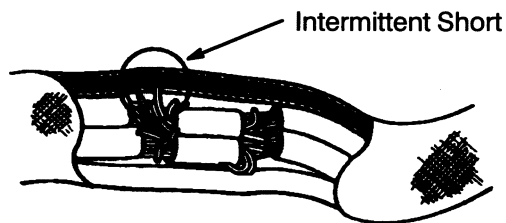


Splice Tape Removed

Operate the system and flex the harness at splice location noted in Section 152.

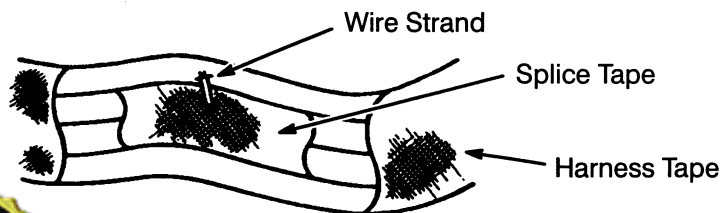

Remove the tape and flex/feel each circuit for a reduction in diameter at break.

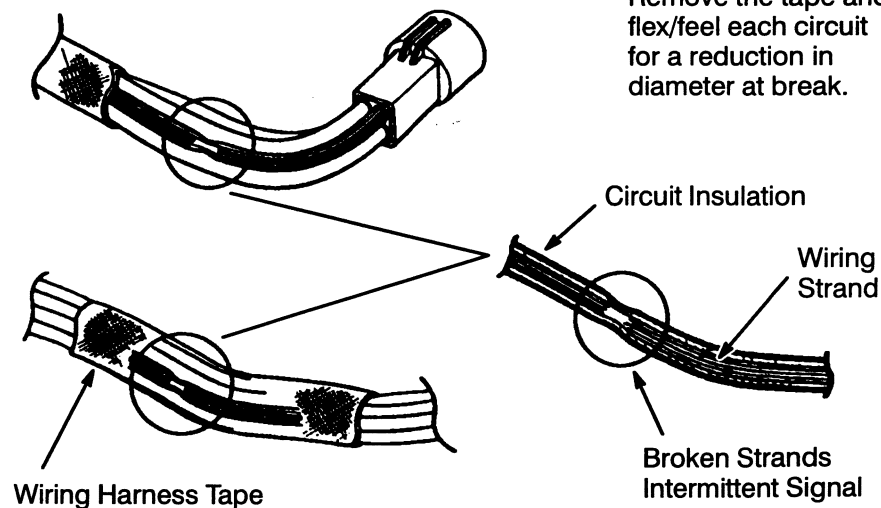

Wiring Harness Tape

Broken Strands Intermittent Signal

BROKEN WIRE STRANDS IN HARNESS

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

WITHIN THE HARNESS

PayPal American Express Discover MasterCard VISA

 
2-7 HOW TO USE THIS MANUAL

2000 MUSTANG


ELECTRICAL SYMBOLS



DASHED COMPONENT BOX
ONLY PART OF THE COMPONENT IS SHOWN ON THE PAGE; THE COMPONENT IS SHOWN COMPLETE IN ANOTHER LOCATION



COMPONENT WITH CONNECTORS

 

BATTERY



SCREW TERMINAL ON COMPONENT



 
SEALED ELECTRONIC COMPONENT
ANY CIRCUITRY SHOWN INSIDE THE BOX IS A FUNCTIONAL

SOLID STATE

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order



FUSE

CURRENT RATING

 
20A



FUSIBLE LINK

WIRE SIZE AND COLOR

 
14 GA DG



MAXI-FUSE or FUSIBLE LINK CARTRIDGE

CURRENT RATING

 
30A



CIRCUIT BREAKER

CURRENT RATING

 
20A



SOLID WIRES

63

 
RD



STRIPED WIRES


981

RD/WH

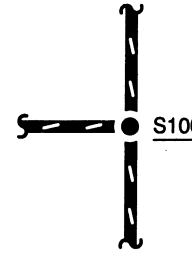

SPLICE OR CRIMP TERMINAL

S100

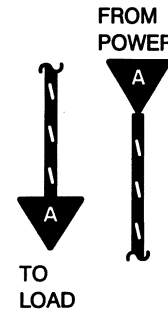

"CUT" WIRES REFERENCED BETWEEN PAGES
ARROWS SHOW CURRENT FLOW FROM POWER TO GROUND


FROM POWER

TO LOAD




REVERSING LAMPS

"REFERENCE" WIRES
COMPLETE WIRING SHOWN ON ANOTHER PAGE



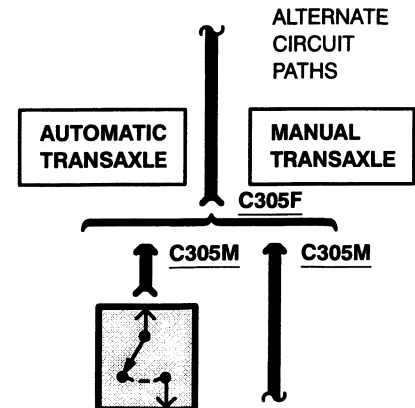


ELECTRICAL SYMBOLS

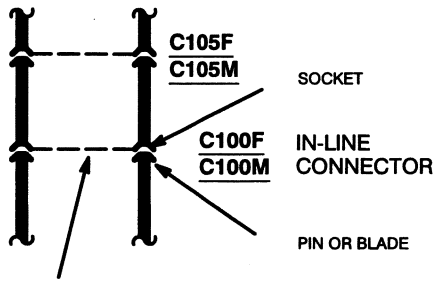

SINGLE DASHED LINE INDICATES THAT WIRE ON LEFT ALSO PASSES THROUGH THE SAME CONNECTOR

 SEE GROUNDS
PAGES 10-1,
10-2

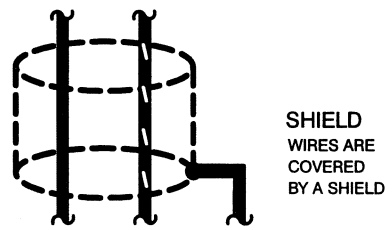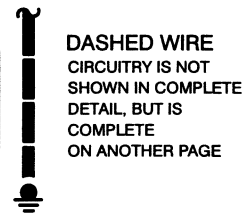

MOTOR



HEATING
ELEMENT



 
THERMISTOR




RHEOSTAT
OR
POTENTIOMETER




SOLENOID




SWITCH

 

 GANGED
SWITCHES
CONTACTS MOVE
AT THE SAME TIME



 
DIODES
CURRENT FLOWS
IN DIRECTION OF
ARROW ONLY



CAPACITOR



 TRANSISTOR




GAUGE




LIGHT
EMITTING
DIODE
(LED)



 LIGHT
BULB



DUAL FILAMENT
LIGHT BULB

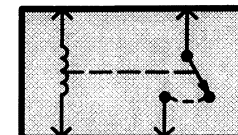

RELAY
CONTACTS
CHANGE POSITION
WITH CURRENT
THROUGH COIL

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

10-1 GROUND

2000 MUSTANG

All wires are
1205 (BK)
unless other-
wise noted.

BATTERY JUNCTION BOX

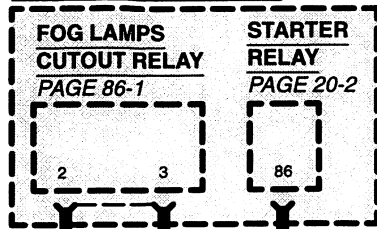

LEFT
FOG
LAMP
PAGE 86-1



C124

LEFT FRONT
PARK/TURN
LAMP
PAGES 90-2,
92-1



C122

LEFT
HEADLAMP
PAGES 85-1,
97-2



 
C120

WINDSHIELD
WASHER
PUMP
MOTOR
PAGE 81-1



C126

SPEED
CONTROL
SERVO
PAGE 31-1




C136

DAYTIME
RUNNING
LAMPS (DRL)
MODULE
PAGE 97-1




C170

 ANTI-LOCK
BRAKE
CONTROL
MODULE
PAGE 42-1



C141

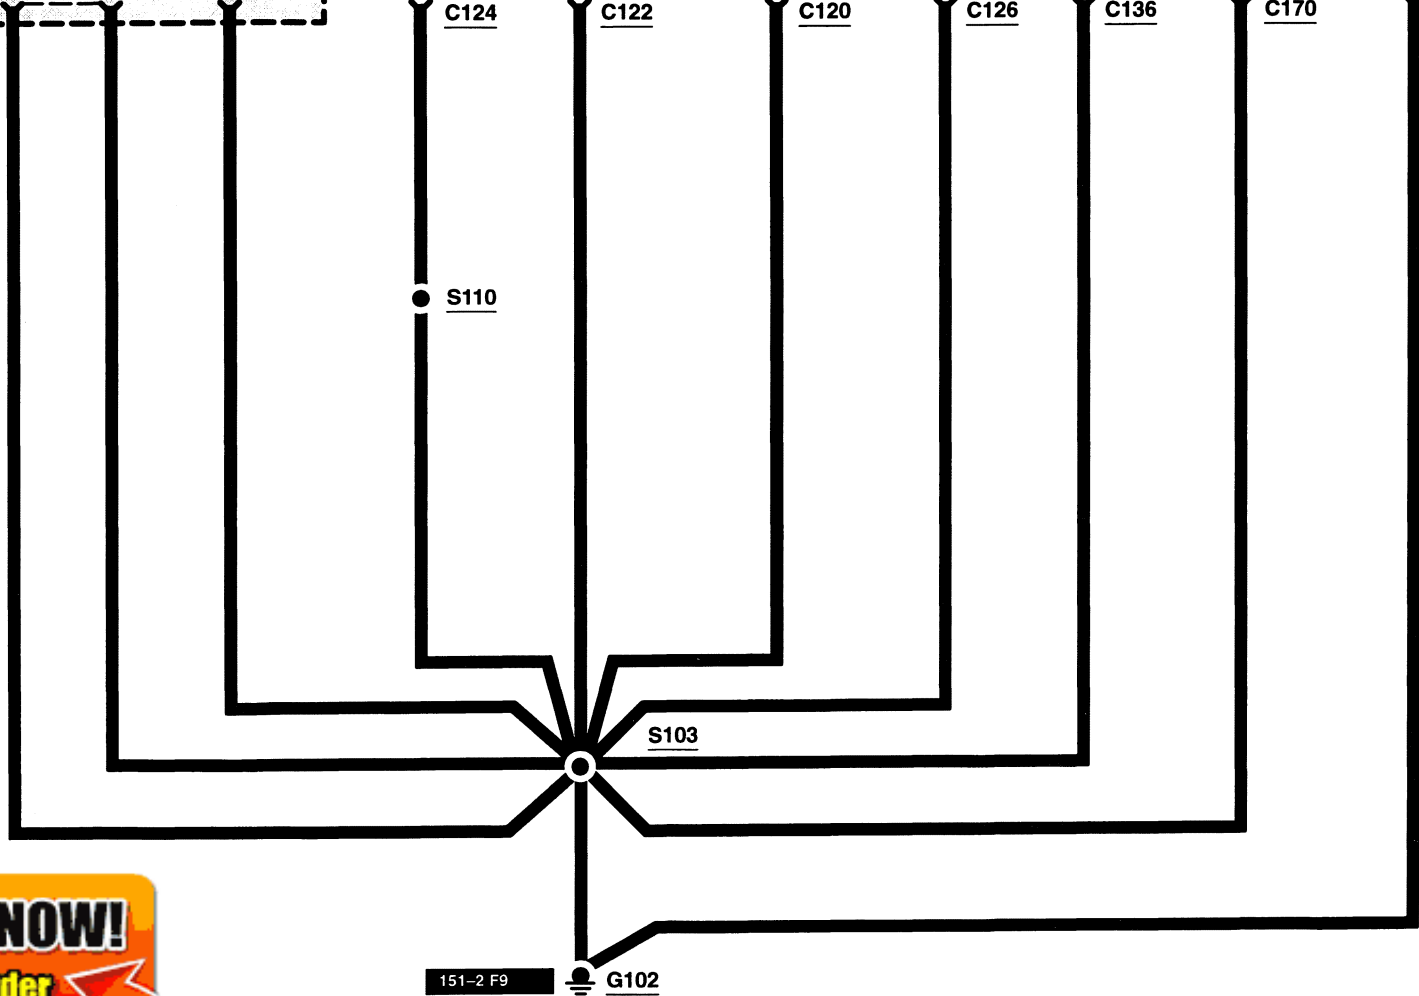

151-2 F9

G102



BUY IT NOW!

Click Here To Order



All wires are 1205 (BK) unless otherwise noted.


* 3.8L
** 4.6L

MASS AIR FLOW (MAF) SENSOR
PAGES 23-1, 24-1, 25-1

POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 24-1, 25-1

CONSTANT CONTROL RELAY MODULE (CCRM)
PAGES 23-9, 24-9, 25-9

DATA LINK CONNECTOR (DLC)
PAGE 14-1

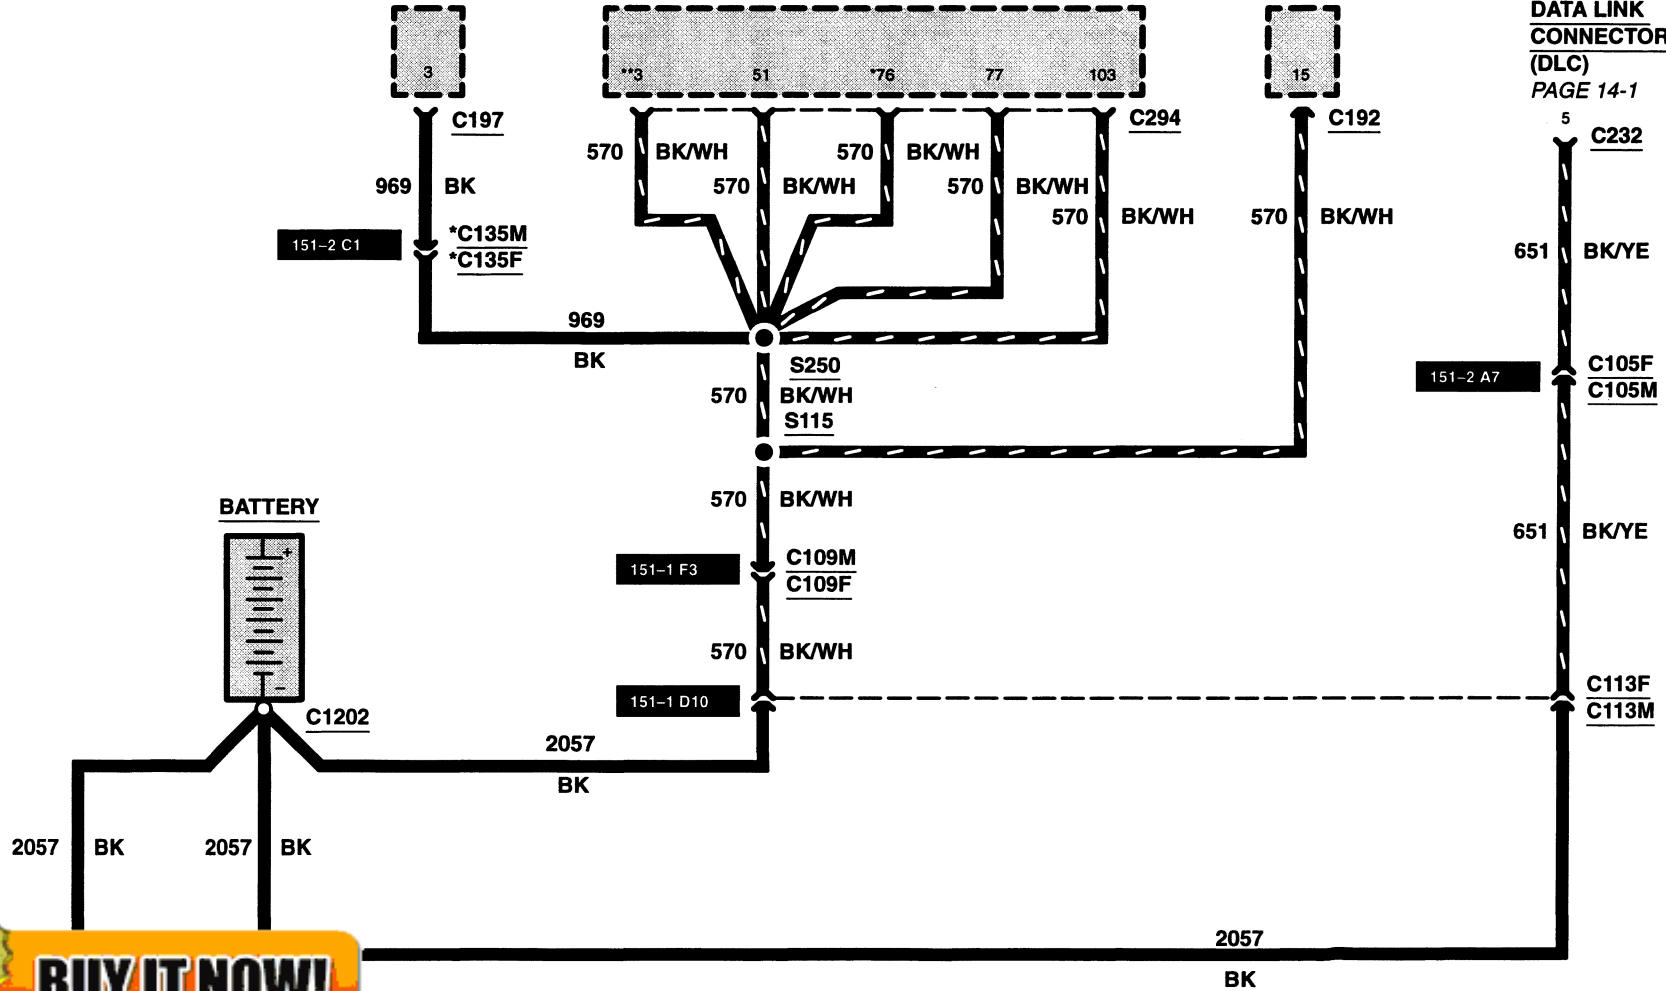

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

PayPal, American Express, Discover, MasterCard, VISA

10-3 GROUNDS

2000 MUSTANG

All wires are 1205 (BK) unless otherwise noted.

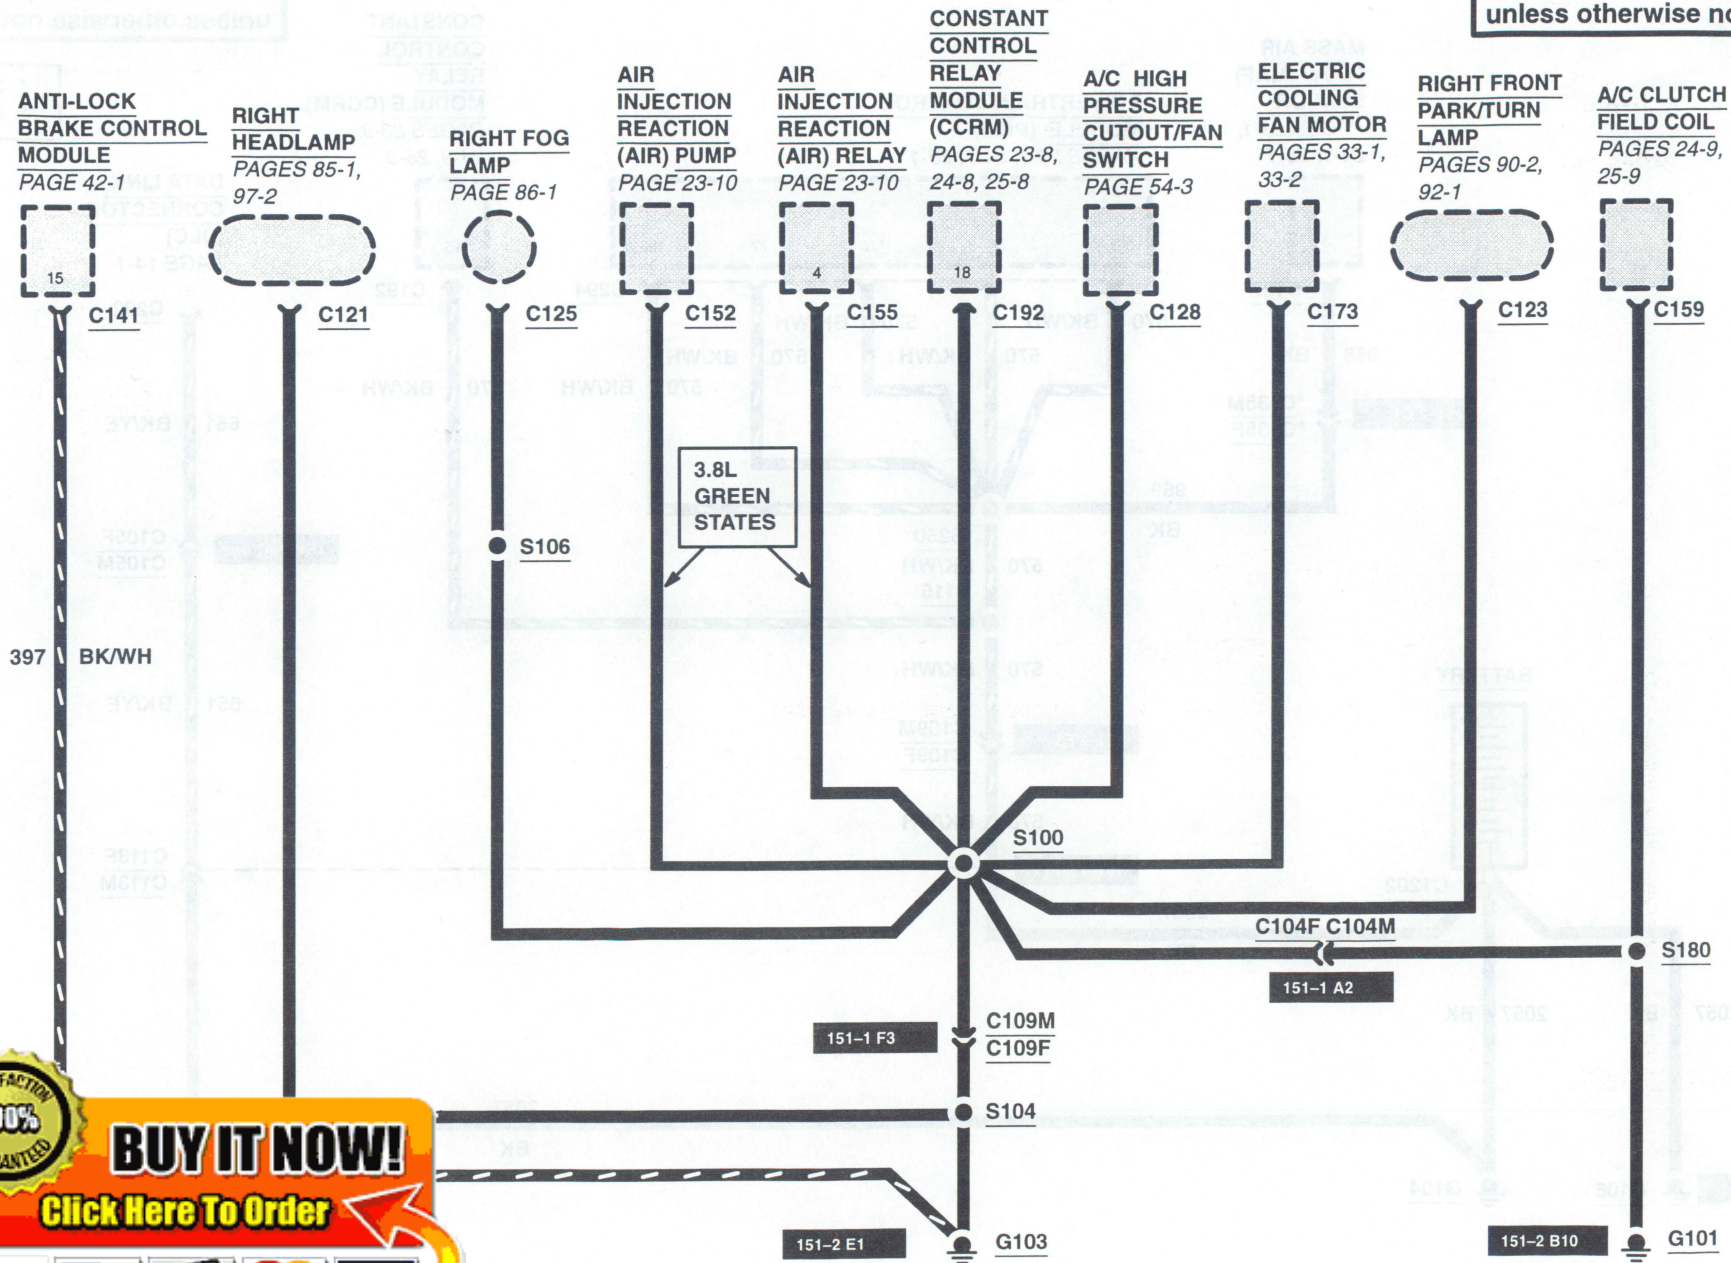


100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

All wires are 1205 (BK) unless otherwise noted.

POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 24-1, 25-1

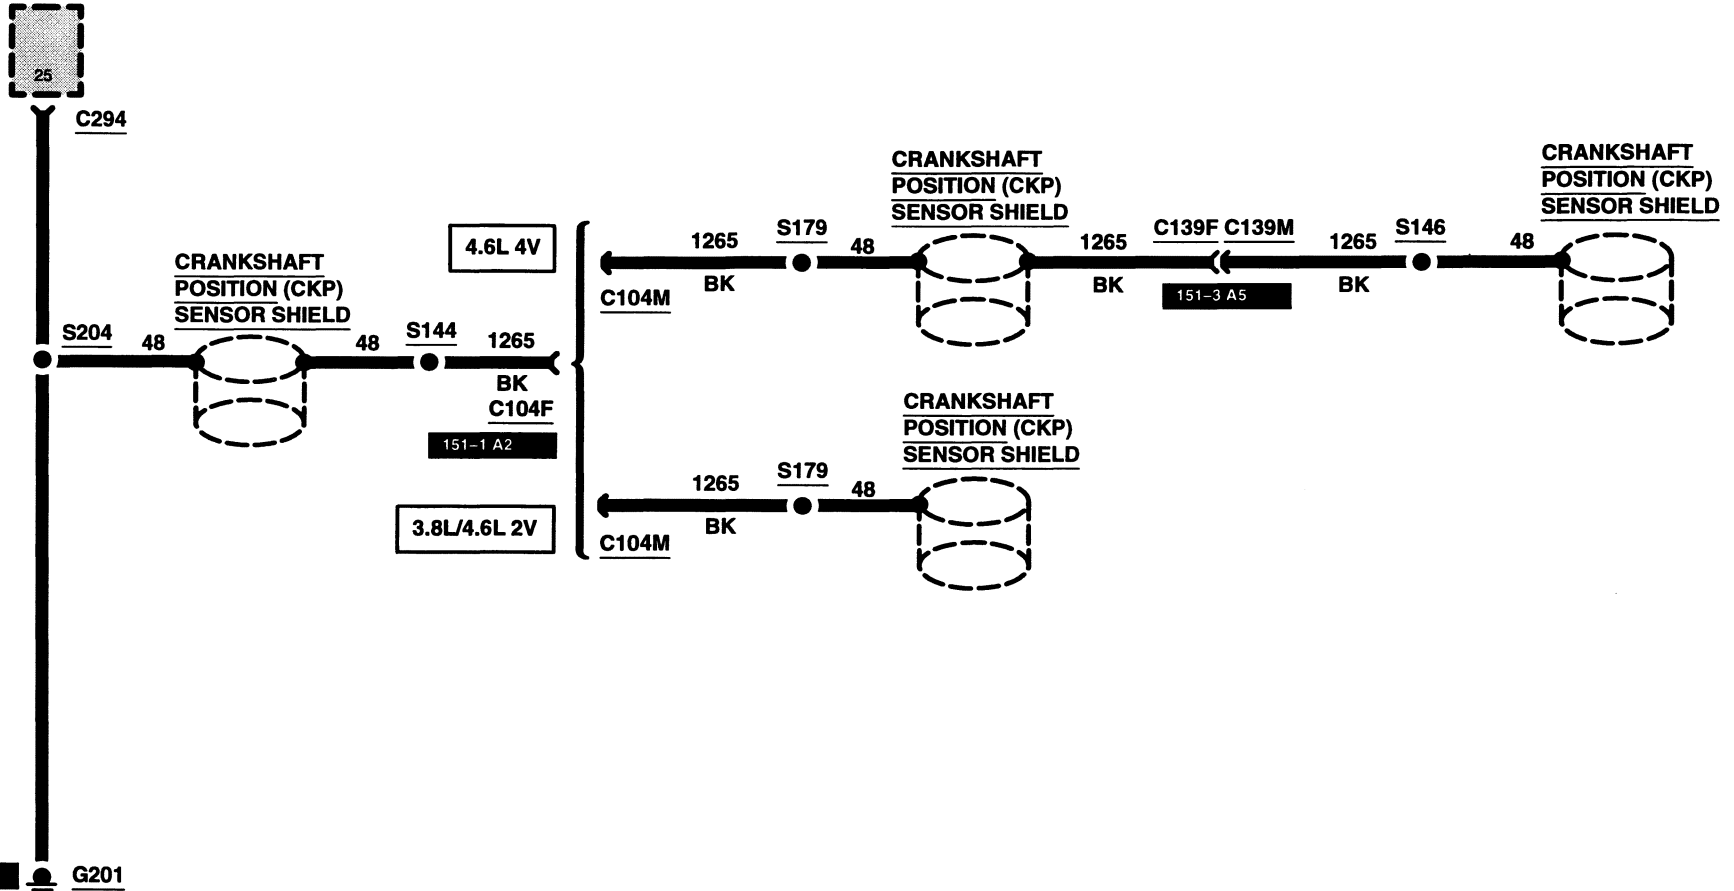

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


PayPal

MasterCard

VISA

10-5 GROUNDS

2000 MUSTANG

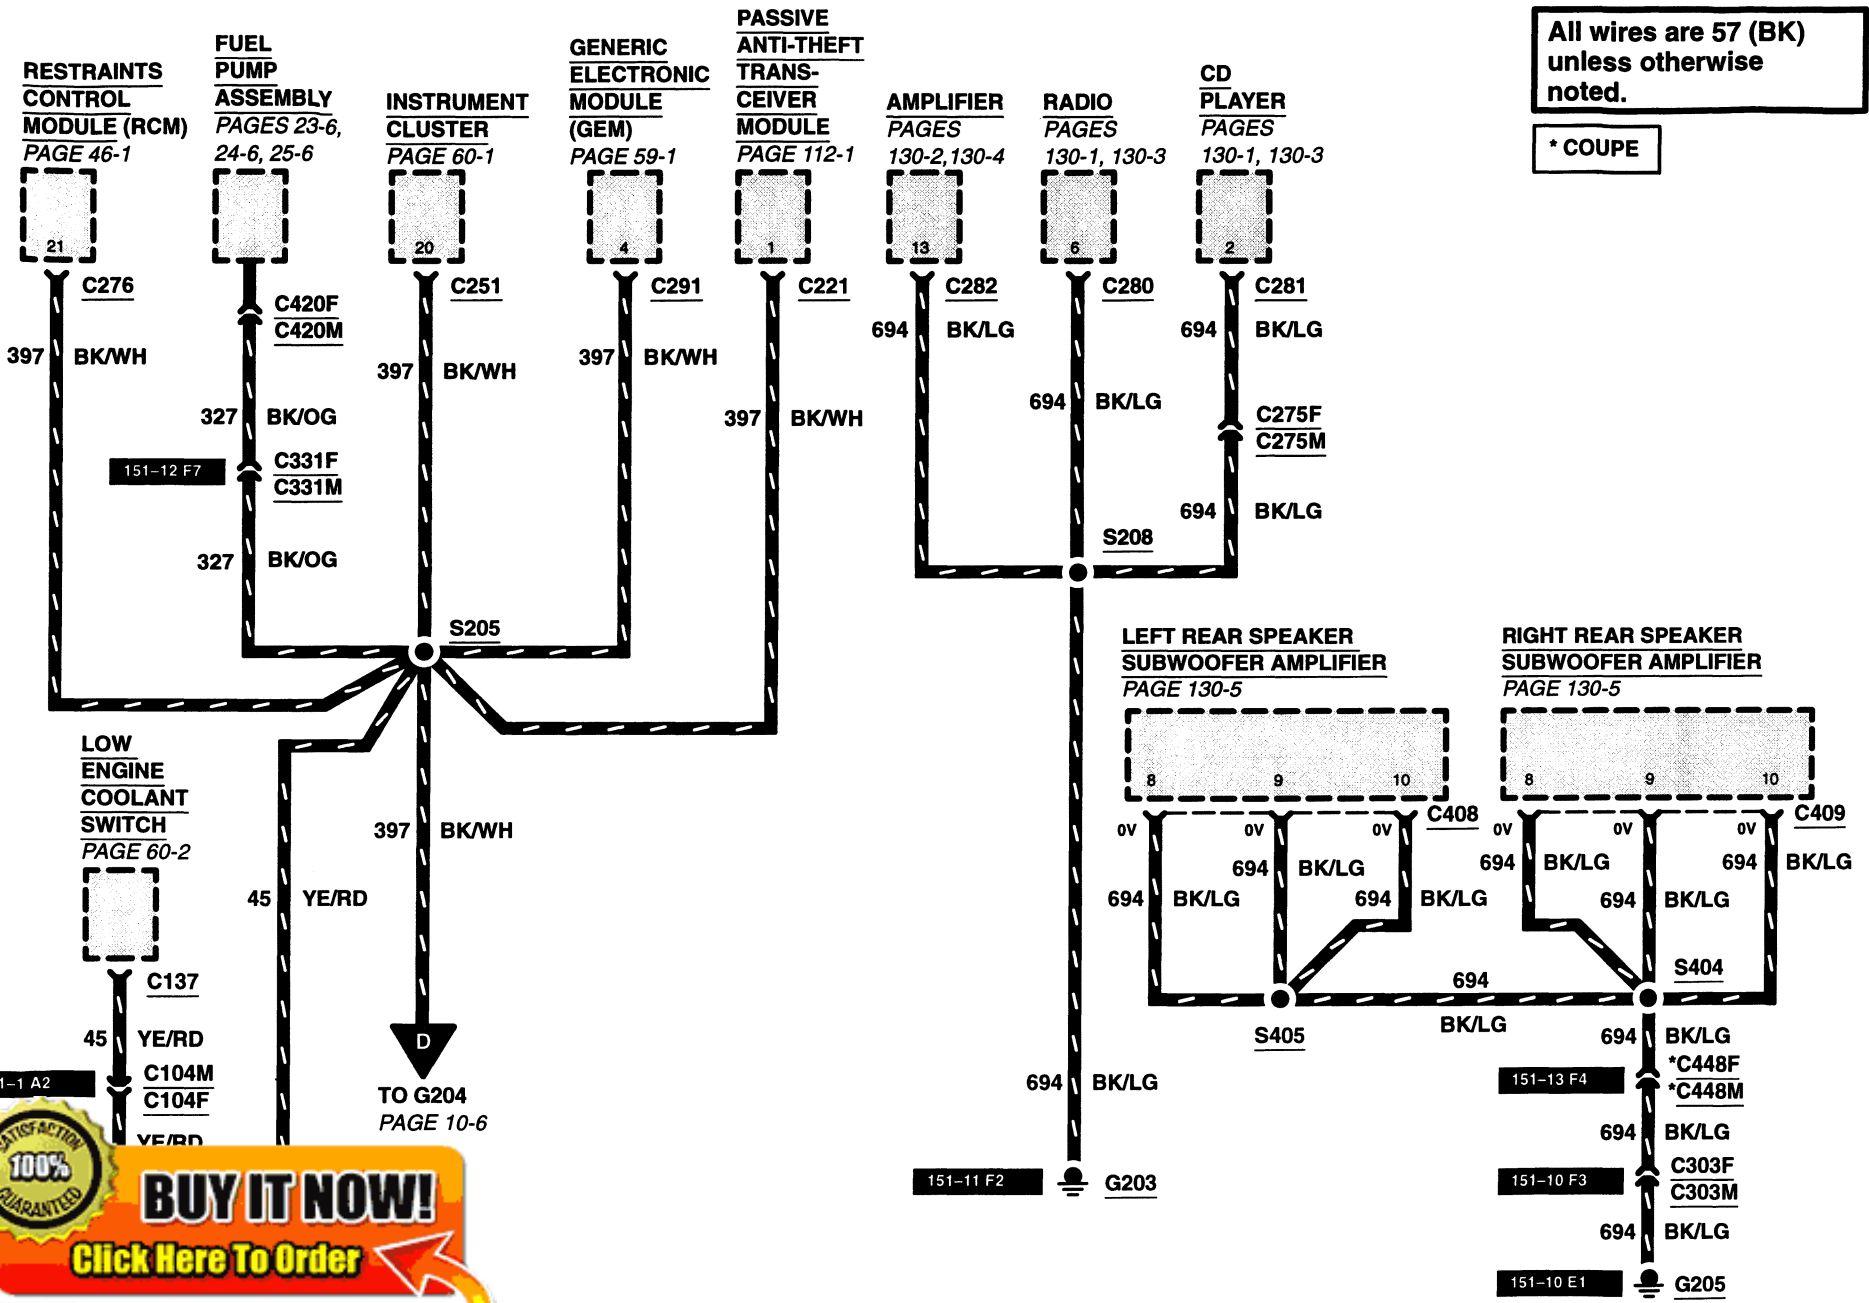

All wires are 57 (BK) unless otherwise noted.


* COUPE

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

All wires are 1205 (BK) unless otherwise noted.

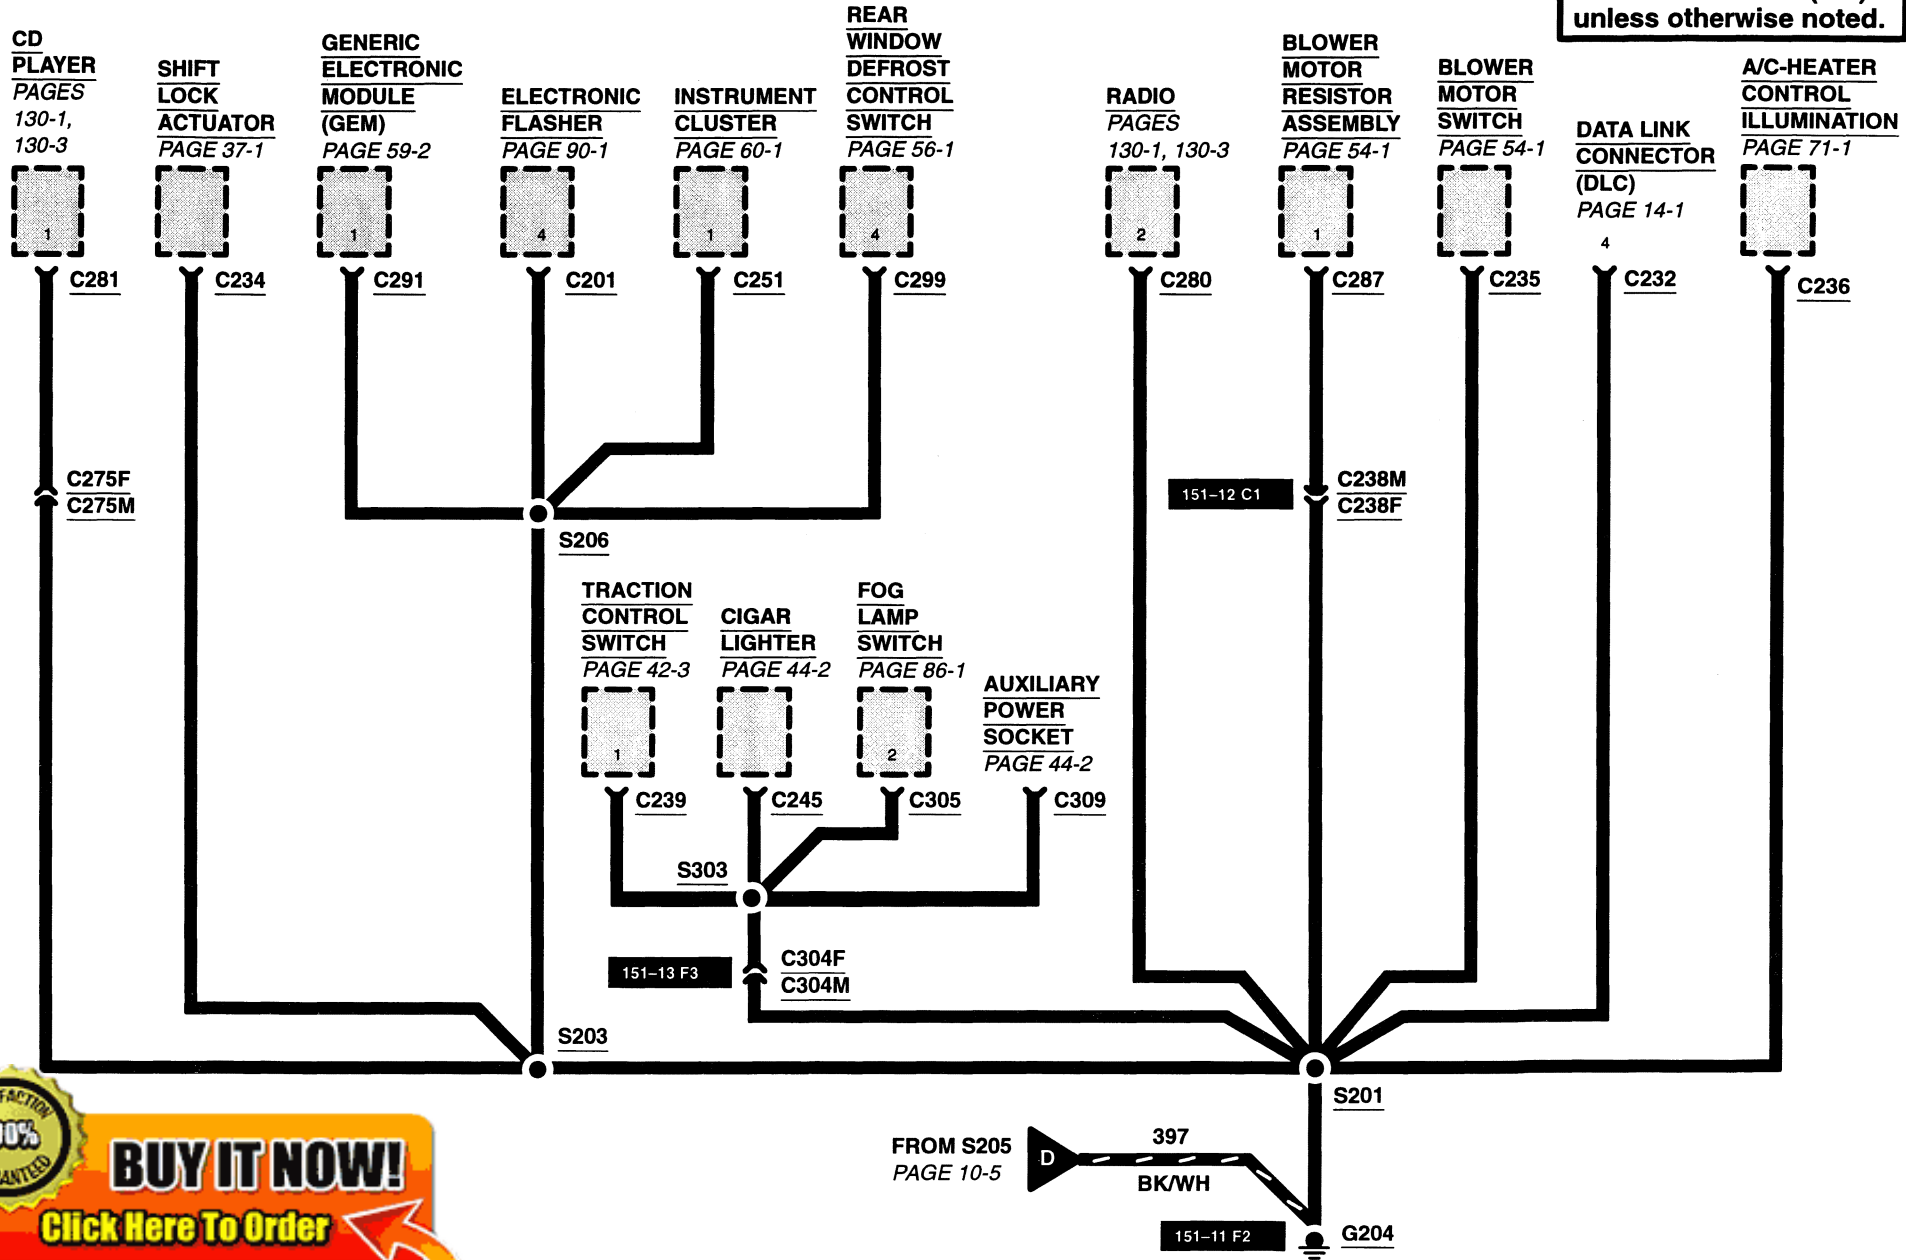

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

PayPal, American Express, Discover, MasterCard, VISA

10-7 GROUNDS

2000 MUSTANG

* COBRA

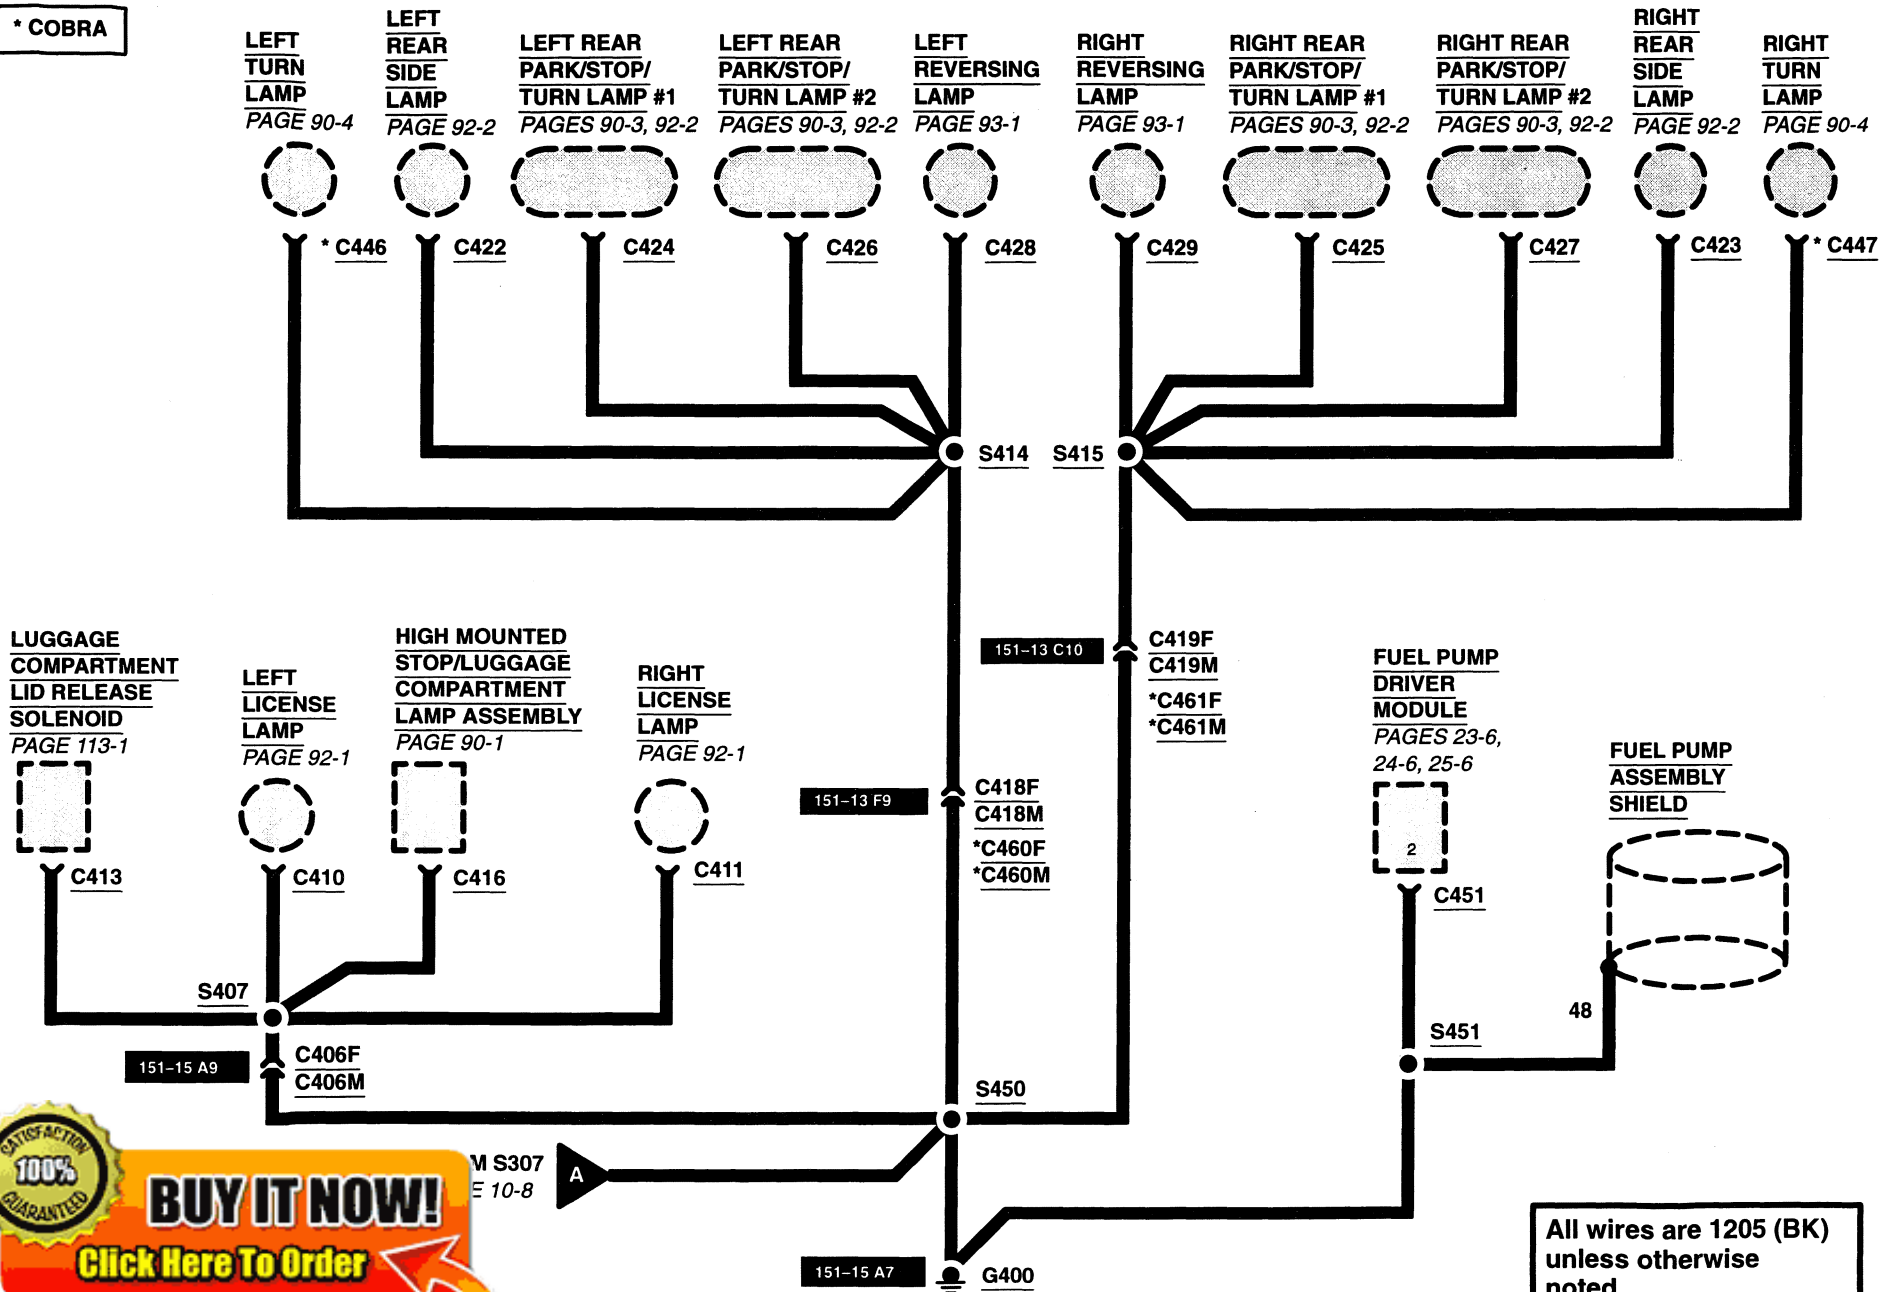

All wires are 1205 (BK) unless otherwise noted.

100% SATISFACTION GUARANTEED


BUY IT NOW!

Click Here To Order

PayPal, American Express, Discover, MasterCard, VISA

* COUPE
** CONVERTIBLE

All wires are 1205 (BK) unless otherwise noted.

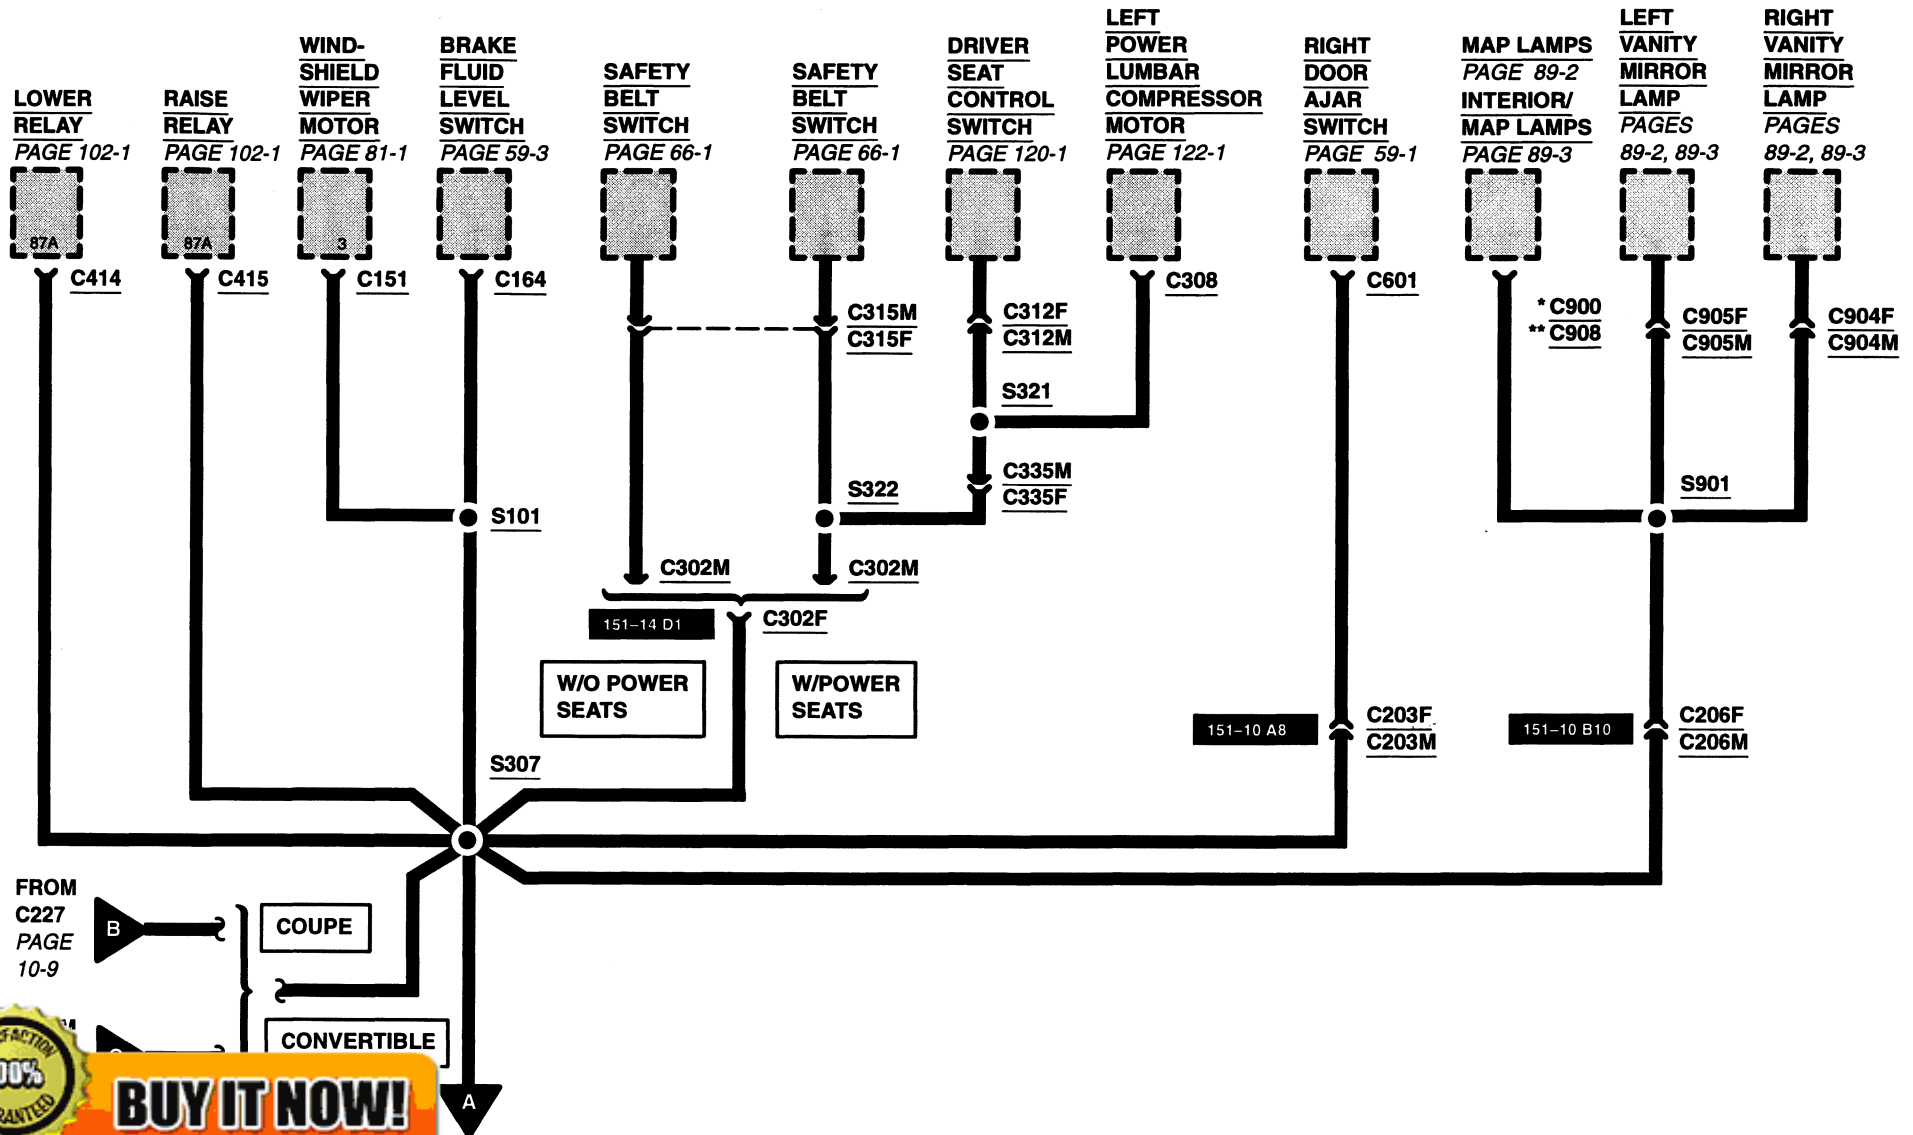

FROM C227 PAGE 10-9

B

COUPE

CONVERTIBLE

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal

Discover Cards

MasterCard

VISA

O S450
PAGE 10-7

WE WANT TO HEAR FROM YOU
Your suggestions will help us to improve future editions of this manual.

Instructions:

- Use only one form for each publication
- Use separate form for each concern
- **Do not** use this form to order publications
- Mail the completed form to the address on the reverse side
- OR**
- FAX the completed form to (313) 390-8727

Date: _____

- Publication:**
- | | |
|--|--|
| <input type="checkbox"/> Passenger Car Workshop Manual | <input type="checkbox"/> Body Repair Manual |
| <input type="checkbox"/> Owner Guide | <input type="checkbox"/> Truck Workshop Manual |
| <input type="checkbox"/> Wiring Diagram/EVTM | <input type="checkbox"/> PC/ED Manual |

Vehicle Line: _____

Model Year: _____

Please check the area in which the concern is located in the publication:

<input type="checkbox"/> Body	<input type="checkbox"/> Transmission/Transaxle	<input type="checkbox"/> Battery/Charging
<input type="checkbox"/> Frame and Mounting	<input type="checkbox"/> Clutch	<input type="checkbox"/> Audio
<input type="checkbox"/> Engine	<input type="checkbox"/> Exhaust	<input type="checkbox"/> Lighting
<input type="checkbox"/> Suspension	<input type="checkbox"/> Fuel	<input type="checkbox"/> Electrical
<input type="checkbox"/> Driveline	<input type="checkbox"/> Climate Control	<input type="checkbox"/> Schematics
<input type="checkbox"/> Brakes	<input type="checkbox"/> Instrumental Warning	<input type="checkbox"/> Pinpoint Test
<input type="checkbox"/> Steering		

Section and Pages: _____

Explain your concern or suggestion below: (Please print)

What do you think is the main cause of your concern?

- Missing Information
 Inaccurate Information
 Incomplete Information

Please tell us who you are: (Please print)

Your Name: _____

Company Name: _____

Street: _____

City: _____ State: _____ Zip/Postal Code: _____

Phone Number: _____ FAX Number: _____

Occupation: (Please mark box)

- | | |
|--|--|
| <input type="checkbox"/> Ford Dealership Technician | <input type="checkbox"/> Ford Dealership Service Manager |
| <input type="checkbox"/> Home Mechanic | <input type="checkbox"/> Engineer |
| <input type="checkbox"/> Technician - Other than Ford Dealership | <input type="checkbox"/> Other: _____ |

Are there features of this publication that you would like to see changed or expanded?

- Organization
 Technical Detail
 Format and Style
 Other: _____

_____ we change the publication?



BUY IT NOW!

Click Here To Order



DO NOT STAPLE — USE TRANSPARENT TAPE



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS

PERMIT NO. 400

DEARBORN, MI



POSTAGE WILL BE PAID BY ADDRESSEE

**Technical Service Publications
Wiring Diagrams
P.O. Box 2592
Dearborn, MI 48123-2592**



**SATISFACTORY
100%
GUARANTEED**

BUY IT NOW!

Click Here To Order



Better ideas, driven by you.



TECHNICAL
SUPPORT OPERATIONS
Ford Customer Service Division

AUGUST 1999

LITHO IN U.S.A.
AD-304



FCS-12121-00