



License #84356800

Buy Now




**1997
F-150
E-250**

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order 



DEMO

This DEMO contains only a few pages of the entire manual/product.

Not all Bookmarks work on the Demo, but they do on the full version.

Features:

- Searchable text
- Printable pages
- Bookmarked for easy navigation
- High Resolution images
- Zoom to see exact details
- Money back Guarantee
- Available on USB and eBook download

EVTM

ELECTRICAL AND VACUUM TROUBLESHOOTING MANUAL

FIX IT RIGHT THE FIRST TIME ON TIME

Copyright © 2024, Forel Publishing Company, LLC, Woodbridge, Virginia

All Rights Reserved. No part of this book may be used or reproduced in any manner whatsoever without written permission of Forel Publishing Company, LLC. For information write to Forel Publishing Company, LLC, Woodbridge, VA 22192

**1997 Ford F-150 F-250 Truck Electrical Vacuum
Troubleshooting Manual (EVTM)**

EAN: 978-1-60371-477-8

ISBN: 1-60371-477-4

Forel Publishing Company, LLC
Woodbridge, VA 22192
Email: sales@ForelPublishing.com
<https://www.ForelPublishing.com>



This publication contains material that is reproduced and distributed under a license from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Note from the Publisher

This product was created from the original Ford Motor Company's publication. Every effort has been made to use the original scanned images, however, due to the condition of the material; some pages have been modified to remove imperfections.

Disclaimer

Although every effort was made to ensure the accuracy of this book, no representations or warranties of any kind are made concerning the accuracy, completeness or suitability of the information, either expressed or implied. As a result, the information contained within this book should be used as general information only. The author and Forel Publishing Company, LLC shall have neither liability nor responsibility to any person or entity with respect to any loss or damage caused, or alleged to be caused, directly or indirectly by the information contained in this book. Further, the publisher and author are not engaged in rendering legal or other professional services. If legal, mechanical, electrical, or other expert assistance is required, the professional should be sought.



ELECTRICAL AND VACUUM TROUBLESHOOTING MANUAL FCS-12263-97-R

FORD CUSTOMER SERVICE DIVISION

Quality is Job 1

Ford Customer Service Division has developed a new EVTMM format for the 1997 F-150/250. Our goal is to provide accurate and timely electrical and vacuum service information.

1997 EVTMM FEATURES

- Schematic pages now contain **Component Location** references to full-view illustrations and **Component Descriptions** that describe the system function of a component.
- **"COMPONENT TESTING"** procedures (CELL 149) that tell the user how to perform diagnostic tests on various circuits.
- **Connector End Views** are now located at the end of individual cells and are shown for connectors with five or more cavities; for connectors with ten or more cavities, a circuit function chart is provided.
- **NOTES, CAUTIONS and WARNINGS** contain important safety information.
- Full view **"COMPONENT LOCATION VIEWS"** (CELL 151) to help locate on-vehicle components.
- Circuit voltages have been added to schematic pages to help simplify troubleshooting. Nonessential troubleshooting hints have been deleted.
- **Cellular Pagination:** A specific section (or cell) in all EVTMMs is numbered by cell and starts with page 1. For example: **"HOW TO USE THIS MANUAL"** is CELL 2 and begins with page 2-1.
- **"IN-LINE CONNECTOR FACES"** (CELL 150) has been added for in-line connectors with six or more electrical wiring.

for all electrical connectors. "C" numbers are listed in the

"WARRANTY CAUSAL PART NUMBERS" (CELL 153) has been added to aid in identifying warranty

ORDERING INFORMATION

Information about how to order additional copies of this publication or other Ford publications may be obtained by writing to Helm Incorporated at the address shown below or by calling 1-800-782-4356. Other publications available include:

- Service Manuals
- Service Specification Books
- Car/Truck Wiring Diagrams
- Powertrain Control/Emissions Diagnosis Manuals
Helm Incorporated
P.O. Box 07150
Detroit, Michigan 48207



1-1 TABLE OF CONTENTS/INDEX

1997 F-150/250

Table of Contents

How to Use This Manual	2-1
Grounds	10-1
Fuse Panel/Circuit Protection	11-1
Charging System	12-1
Power Distribution	13-1
Multiplex Communication Network	14-1
Starting System	20-1
Ignition System	21-1
Engine Controls (4.2L)	23-1
Engine Controls (4.6L)	24-1
Engine Controls (5.4L)	25-1
Transmission Controls (4R70W)	29-1
Transmission Controls (E4OD)	30-1
Speed Control	31-1
Electric Shift Control	34-1
Shift Lock	37-1
Rear Air Suspension (RAS)	41-1
Anti-Lock Brakes	42-1
Horn/Cigar Lighter	44-1
Air Bags	46-1
Heater	53-1
Air Conditioner/Heater	54-1
Generic Electronic Module (GEM)	59-1
Instrument Cluster	62-1
Warning Chime	66-1
Instrument Illumination	71-1
Interval Wiper/Washer	81-1
Headlamps	85-1
Fog Lamps	86-1
Autolamps	87-1
Lamps	89-1
	90-1
	92-1
	93-1
	95-1
	97-1

Power Windows	100-1
Power Door Locks	110-1
Remote Control Alarm and Lock System	117-1
Power Seats	120-1
Power Mirrors	124-1
Radio	130-1
Vacuum Distribution	140-1
Component Testing	149-1
In-Line Connector Faces	150-1
Component Location Views	151-1
Location Index	152-1
Harness Causal Part Number	153-1
Vehicle Repair Location Codes	160-1

INDEX

Air Bags	46-1
Air Conditioner/Heater	54-1
Anti-Lock Brakes	42-1
Autolamps	87-1
Backup Lamps	93-1
Charging System	12-1
Cigar Lighter	44-1
Courtesy Lamps	89-1
Daytime Running Lamps	97-1
Door Locks	110-1
Electric Shift Control	34-1
Engine Fuse Module	
Fuse 1	13-5
Fuse 2	13-3
Exterior Lamps	92-1
Fog Lamps	86-1
Fuse Panel/Circuit Protection	11-1
Gauges:	
Engine Coolant Temperature	62-2
Engine Oil Pressure	62-2

Fuel	62-1
Speedometer	62-2
Tachometer	62-2
Voltmeter	62-1
Generic Electronic Module (GEM)/ Central Timer Module (CTM)	59-1
Grounds:	
G100	10-1
G101	10-1
G102	10-2
G103	10-10
G104	10-6
G200	10-2, 7
G201	10-9
G202	10-10
G400	10-10
Headlamps	85-1
Heater	53-1
Horn	44-1
Ignition System	21-1
Indicators:	
4x4 High Range	62-3
4x4 Low Range	62-3
Air Bag	62-7
Anti-Lock	62-3
Anti-Theft	62-6
Brake	62-4, 5
Charge	62-7
Check Gauge	62-1
Door Ajar	62-3
Fasten Seat Belt	62-3
Fuel Reset Switch	62-1
Hi Beam	62-6
Left Turn	62-6
Low Fuel	62-1
Malfunction	62-1
Right Turn	62-6
Inline Mini Fuse (20A)	13-1
Instrument Cluster	62-1
Instrument Illumination	71-1
Interval Wiper/Washer	81-1

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

TABLE OF CONTENTS/INDEX 1-2

1997 F-150/250

Junction Box Fuse/Relay Panel:

Fuse 1	13-8
Fuse 2	13-8
Fuse 3	13-8
Fuse 4	13-8
Fuse 5	13-9
Fuse 6	13-10
Fuse 8	13-10
Fuse 11	13-10
Fuse 12	13-8
Fuse 13	13-9
Fuse 14	13-9
Fuse 15	13-9
Fuse 16	13-11
Fuse 18	13-11
Fuse 19	13-11
Fuse 20	13-14
Fuse 21	13-14
Fuse 22	13-14
Fuse 23	13-15
Fuse 24	13-14
Fuse 25	13-15
Fuse 26	13-16
Fuse 27	13-16
Fuse 28	13-16
Fuse 29	13-12
Fuse 30	13-12

Lamps (Exterior):

Backup	93-1
Engine Compartment	89-1
Front	86-1
Head	90-2
Turn Signal	85-1
Trailer	92-1
Wiper	92-1
Washer	90-2, 3
Window	90-2

Lamps (Interior):

Cargo	89-2
Dome	89-2
Glove Compartment	89-1
Map	89-1
Mega Fuse (Generator)	13-1
Mega Fuse (PDB)	13-1
Mirrors	124-1

Power Distribution Box:

Maxifuse 14	13-3
Maxifuse 15	13-5
Maxifuse 16	13-3
Maxifuse 17	13-3, 4
Maxifuse 18	13-4
Maxifuse 19	13-4
Maxifuse 20	13-4
Maxifuse 21	13-4
Maxifuse 22	13-4
Maxifuse 23	13-4
Maxifuse 24	13-6
Maxifuse 25	13-6
Maxifuse 26	13-6
Maxifuse 28	13-6
Diode (Engine Control)	13-11
Minifuse 1	13-1
Minifuse 2	13-1
Minifuse 3	13-6
Minifuse 4	13-5
Minifuse 5	13-2
Minifuse 6	13-2
Minifuse 7	13-2
Minifuse 8	13-2
Minifuse 9	13-3
Minifuse 10	13-3

Radio:

AM/FM W/Cassette	130-1
Premium Sound	130-2, 3
CD Player	130-4

Rear Air Suspension (RAS)	41-1
Remote Anti-Theft Personality (RAP) Module	117-1
Seats	120-1
Shift Lock	37-1
Speed Control	31-1
Starting System	20-1
Trailer/Camper Adapter	95-1
Transmission Controls (4R70W)	29-1
Transmission Controls (E4OD)	30-1
Vacuum Distribution	140-1
Vacuum Symbols	2-11
Warning Chime	66-1
Windows	100-1

IMPORTANT SAFETY NOTICE

Appropriate service methods and proper repair procedures are essential for the safe, reliable operation of all motor vehicles, as well as the personal safety of the individual doing the work. This Manual provides general directions for accomplishing service and repair work with tested, effective techniques. Following them will help assure reliability.

There are numerous variations in procedures, techniques, tools, and parts for servicing vehicles, as well as in the skill of the individual doing the work. This Manual cannot possibly anticipate all such variations and provide advice or cautions as to each. Accordingly, anyone who departs from the instructions provided in this Manual must first establish that the methods, tools or parts does not compromise personal safety or the vehicle integrity.

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

2-1 HOW TO USE THIS MANUAL

1997 F-150/250

The purpose of this manual is to show electrical and vacuum circuits in a clear and simple fashion to make troubleshooting easier. **NOTES**, **CAUTIONS** and **WARNINGS** containing important information appear in boxes on text pages.

- **NOTES** describe how switches and other components operate to help complete a particular procedure.
- **CAUTIONS** provide information that could prevent making an error that may damage the vehicle.
- **WARNINGS** provide information to prevent personal injury.

The **WARNINGS** list on page 2-2 contains general warnings to follow when servicing a vehicle.

Components that work together are shown together. All electrical components used in a specific system are shown on one diagram. The circuit breaker or fuse is shown at the top of the page. All wires, connectors, components and splices are shown in the flow of current to ground at the bottom of the page. If a component is used in several different systems, it is shown in several places. For example, the Main Light Switch is electrically a part of many systems and is repeated on many pages.

Schematic pages now contain references to full-view illustrations and component descriptions for various components. The references are reverse-text blocks located next to each component and connector and refer the user to the appropriate illustration page and zone. The component descriptions summarize the system function of a component.

Schematic pages now contain circuit voltages to help simplify troubleshooting hints. 12V is used to imply battery voltage on a component connector terminal, and 0V is used to show that there should be continuity to ground on that particular terminal. Conditional voltages such as "12V with the ignition switch in RUN" will also be provided. Troubleshooting hints that can't be simplified with circuit voltages will be shown at the end of each cell.

Connector face information specific to a certain cell is now found at the end of that cell. A Connector Face Reference List is provided to locate connector faces that are shown in different cells. Component connectors with five or more terminals are illustrated. Component connectors with five or more terminals are accompanied by a pin-out chart that lists the function of all circuitry associated with that component.

In-Line connectors shown on schematic pages now contain a suffix to denote connector gender (F- socket, M- prior blade).

"GROUNDS"(Cell 10) contains ground circuitry shown in complete detail. This information is useful for checking interconnections of the ground circuits of different systems.

"POWER DISTRIBUTION" (Cell 13) contains power distribution circuitry shown in com-

plete detail. This section displays how the various fuses are powered and in turn, how each system is powered.

"COMPONENT TESTING" (Cell 149) contains testing procedures for various switches. This information includes schematics, component terminal locations and step-by-step procedures.

"IN-LINE CONNECTORS FACES" (Cell 150) contains in-line connectors with five or more terminals. This section includes both female and male mating in-line connectors arranged in order according to connector number.

"COMPONENT LOCATION VIEWS" (Cell 151) contains full-view illustrations which show the location of all components and connectors in the vehicle.

The **"LOCATION INDEX"** (Cell 152) provides the service base part numbers, locations, connector face references and illustration references for all components, connectors, splices and grounds.

HELPFUL REMINDERS

Before using the EVTM for troubleshooting, refer to the HELPFUL REMINDERS:

1. The abbreviation T/O, for take out, used in the Location Index (Cell 152), refers to the point at which a group of wires branch off the harness trunk. Refer to the wiring harness illustration.

In some cases, a component may seem (by its location) to belong to a system where it has no connection. This is often the case with Radio Illumination and Radio.




100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

Wiring harness at back of Instrument Panel, showing typical T/O (Take Out) locations

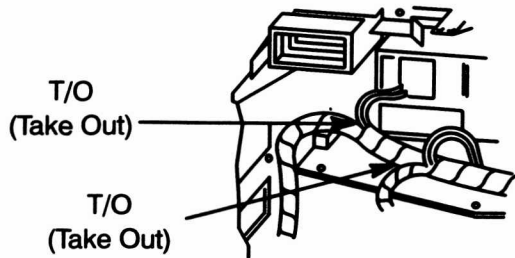

- If a connector serves the same purpose in two separate versions (e.g., EFI/Carb), but is physically different, *two* connector numbers are used. However, if a connector serves the same purpose in two separate versions (e.g., EFI/Carb) and is physically the same, but the wire colors are different, only *one* connector number is used. If the same physical connector is used more than once, then more than *one* connector number is used.
- Wiring schematics provide a picture of how and under what conditions the circuit is powered, of the current path to circuit components, and of how a circuit is grounded. Each component and wire are listed and underlined. Components are listed in the order they are connected.

COLOR ABBREVIATIONS

BL	Blue	N	Natural
BK	Black	O	Orange
BR	Brown	PK	Pink
DB	Dark Blue	P	Purple
DG	Dark Green	R	Red
GN	Green	T	Tan
GY	Gray	W	White
LB	Light Blue	Y	Yellow
LG	Light Green		

NOTE: Whenever a wire is labeled with two colors, the first color listed is the basic color of the wire, and the second color listed is the stripe marking of the wire.

- When reporting Vehicle Repair Location Codes to Ford Customer Service Division, refer to Cell 160 (beginning on page 160-1). Note: Do *not* use the illustrations in Cell 151 (beginning on page 151-1) for reporting Vehicle Repair Location Codes.

5. WARNINGS

- Always wear safety glasses for eye protection.
- Use safety stands whenever a procedure requires being under a vehicle.
- Be sure that the **Ignition Switch** is always in the **OFF** position, unless otherwise required by the procedure.
- Set the parking brake when working on any vehicle. An automatic transmission should be in **PARK**. A manual transmission should be in **NEUTRAL**.
- Operate the engine only in a well-ventilated area to avoid danger of carbon monoxide.
- Keep away from moving parts, especially the fan and belts, when the engine is running.
- To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe, catalytic converter, and muffler.
- Do not allow flame or sparks near the battery. Gases are always present in and around the battery cell. An explosion could occur.
- Do not smoke when working on a vehicle.
- To avoid injury, always remove rings, watches, loose hanging jewelry, and loose clothing.

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

2-3 HOW TO USE THIS MANUAL

1997 F-150/250

HOW TO FIND ELECTRICAL CONCERNS TROUBLESHOOTING STEPS

These six steps present an orderly method of troubleshooting.

Step 1. Verify the concern.

- Operate the complete system to check the accuracy and completeness of the customer's complaint.

Step 2. Narrow the concern.

- Using the EVTM, narrow down the possible causes and locations of the concern to pinpoint the exact cause.
- Read the description notes at the components and study the wiring schematic. You should then know enough about the circuit operation to determine where to check for the trouble. Further information can be found by referring to the Service Manual pages listed in the box at the top of the page.

Step 3. Test the cause.

- Use electrical test procedures to find the specific cause of the symptoms.

Step 4. Verify the cause.

- Confirm that you have found the correct cause by connecting jumper wires and/or temporarily installing a known good component and operating the circuit.

Step 5. Make the repair.

- Repair or replace the inoperative component.

Step 6. Verify the repair.

- Operate the system as in Step 1 and check that your repair has removed all symptoms without creating any new symptoms.

Some engine circuits may need special test equipment and special procedures. See the *Service Manual* and other service books for details. You will find the circuits in this manual to be helpful with those special test procedures.

TROUBLESHOOTING TOOLS

JUMPER WIRE

This is a test lead used to connect two points of a circuit. A Jumper Wire can bypass an open in a wire to complete a circuit.

WARNING

Never use a jumper wire across loads (motors, etc.) connected between hot and ground. This direct battery short may cause injury or fire.

VOLTMETER

A DC Voltmeter measures circuit voltage. Connect negative (- or black) lead to ground, and positive (+ or red) lead to voltage measuring point.

OHMMETER

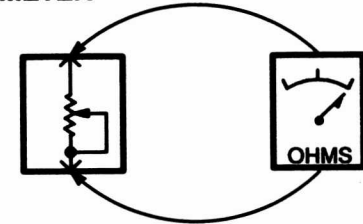


Figure 1—Resistance Check

An Ohmmeter shows the resistance between two connected points (Figure 1).

TEST LAMP

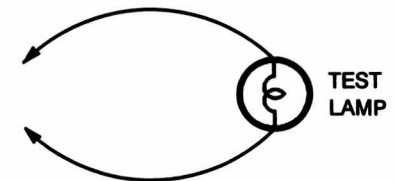


Figure 2—Test Lamp

A Test Light is a 12-volt bulb with two test leads (Figure 2).

Uses: Voltage Check, Short Check

The *Component Location* reference bars and the pictures will help you find components, resistors, and locations.

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

HOW TO FIND ELECTRICAL CONCERNS (CONTINUED)

SELF-POWERED TEST LAMP

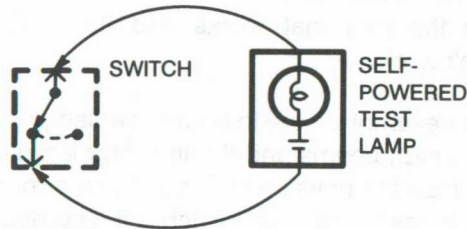


Figure 3—Continuity Check

The Self-Powered Test Lamp is a bulb, battery and set of test leads wired in series (Figure 3). When connected to two points of a continuous circuit, the bulb glows.

Uses: Continuity Check, Ground Check

CAUTION

When using a self-powered test lamp or ohmmeter, be sure power is off in circuit during testing. Hot circuits can cause equipment damage and false readings.

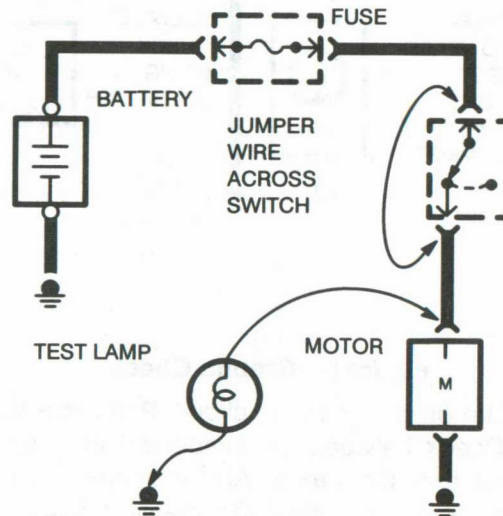


Figure 4—Switch Circuit Check and Voltage Check

In an inoperative circuit with a switch in series with the load, jumper the terminals of the switch

to power the load. If jumpering the terminals powers the circuit, the switch is inoperative (Figure 4).

CONTINUITY CHECK (Locating open circuits)

Connect one lead of a Self-Powered Test Lamp or Ohmmeter to each end of circuit (Figure 3). Lamp will glow if circuit is closed. Switches and fuses can be checked in the same way.

VOLTAGE CHECK

Connect one lead of test lamp to a known good ground or the negative (-) battery terminal. Test for voltage by touching the other lead to the test point. The bulb goes on when the test point has voltage (Figure 4).

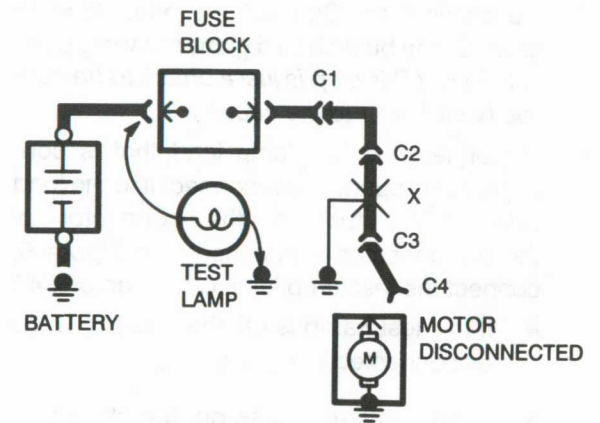


Figure 5—Short Check

100% SATISFACTORY GUARANTEED

BUY IT NOW!

Click Here To Order

2-5 HOW TO USE THIS MANUAL

1997 F-150/250

HOW TO FIND ELECTRICAL CONCERNS (CONTINUED)

A fuse that repeatedly blows is usually caused by a short to ground. It's important to be able to locate such a short quickly (Figure 5).

1. Turn off everything powered through the fuse.
2. Disconnect other loads powered through the fuse:
 - Motors: disconnect motor connector (Connector C4 in Figure 5)
 - Lights: remove bulbs.
3. Turn the Ignition Switch to RUN (if necessary) to power fuse.
4. Connect one Test Lamp lead to the hot end of the blown fuse. Connect the other lead to ground. The bulb should glow, showing power to fuse. *(This step is just a check to be sure you have power to the circuit.)*
5. Disconnect the test lamp lead that is connected to ground, and reconnect it to the load side of the fuse at the connector of the disconnected component. (In Figure 5, connect the test lamp lead to connector C4.)
 - If the Test Lamp is off, the short is in the disconnected component.
 - If the Test Lamp goes on, the short is in the wiring. You must find the short by disconnecting the circuit connectors, one at a time, until the short is located. For

example, in figure 5 with a ground at X, the bulb goes out when C1 or C2 is disconnected, but not after disconnecting C3. This means the short is between C2 and C3.

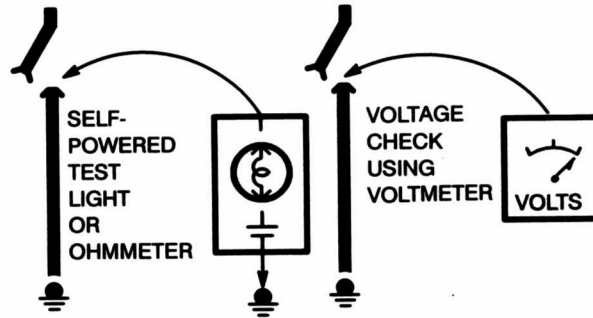


Figure 6—Ground Check

Turn on power to the circuit. Perform a Voltage Check between the suspected inoperative ground and the frame. Any indicated voltage means that the ground is inoperative (Figure 6).

Turn off power to the circuit. Connect one lead of a Self-Powered Test Lamp or Ohmmeter to the wire in question and the other lead to a known ground. If the bulb glows, the circuit ground is OK (Figure 6).

The circuit schematics in this manual make it easy to identify common points in circuits. This knowledge can help narrow the concern to a specific area. For example, if several circuits fail at the same time, check for a common power or ground connection (See *Power Distribution or Grounds*). If part of a circuit fails, check the connections between the part that works and the part that doesn't work.

For example, if the lo beam headlamps work, but the high beams and the indicator lamp don't work, then the power and ground paths must be good. Since the dimmer switch is the component that switches this power to the high beam lights and the indicator, it is most likely the cause of failure.

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

PayPal American Express Cards Discover NOVUS MasterCard VISA

TROUBLESHOOTING WIRING HARNESS AND CONNECTOR HIDDEN CONCERNS

The following illustrations are known examples of wiring harness, splices and connectors that will create intermittent electrical concerns. The concerns are hidden and can only be discovered by a physical evaluation as shown in each illustration.

NOTE: When servicing gold plated terminals in a connector, only replace with gold plated terminals designed for that connector.

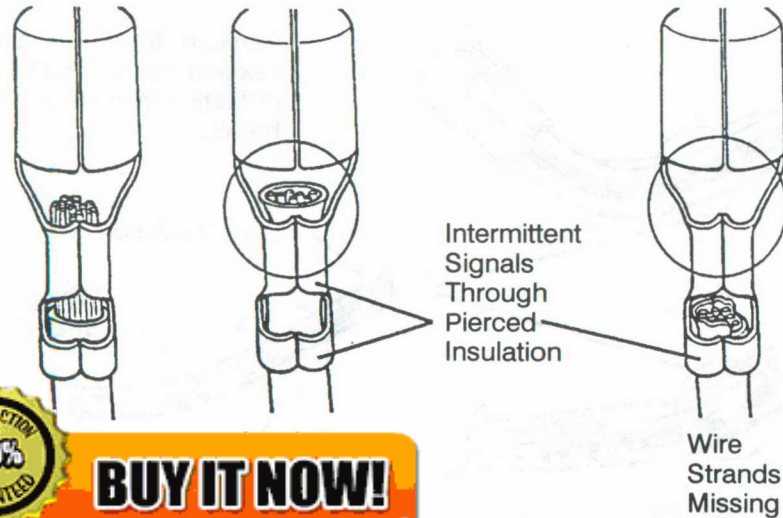


100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


PayPal American Express Cards Discover NOVUS MasterCard VISA

UTION STRIPPING

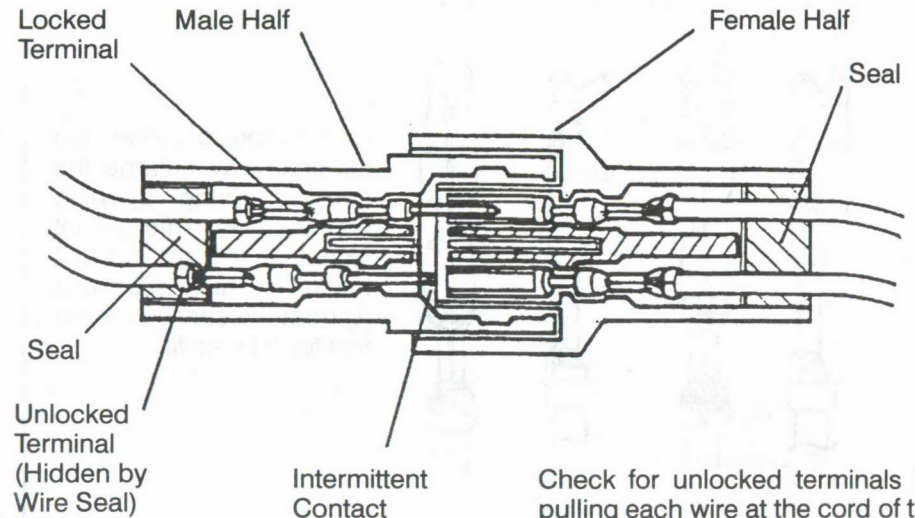


Check for unlocked terminals by pulling each wire at the cord of the connector

TERMINAL NOT PROPERLY SEATED

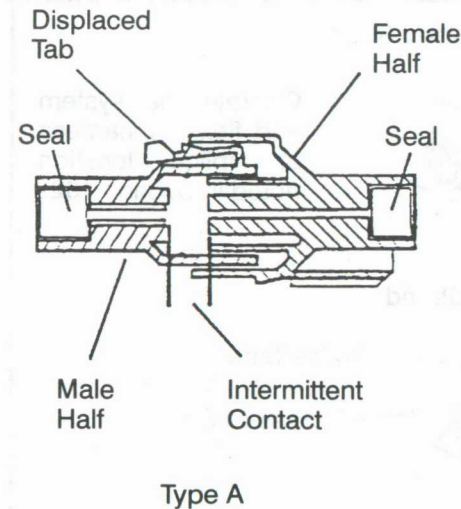


Lock may be displaced into an unlocked position; pull on the connector to verify the lock.

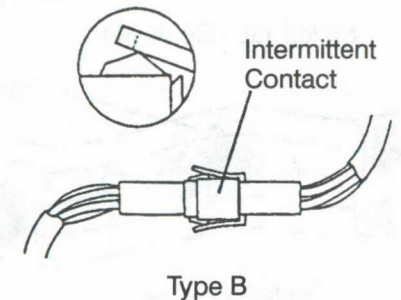

PARTIALLY MATED CONNECTORS

2-7 HOW TO USE THIS MANUAL

1997 F-150/250

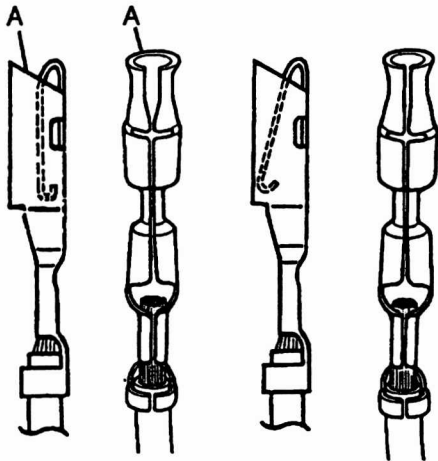


Enlarged

Normal


Any probe entering the terminal may enlarge the contact spring opening creating an intermittent signal. Insert the correct mating terminal (Location A) from the service kit and feel for a loose fit.

DEFORMED (ENLARGED) FEMALE TERMINALS

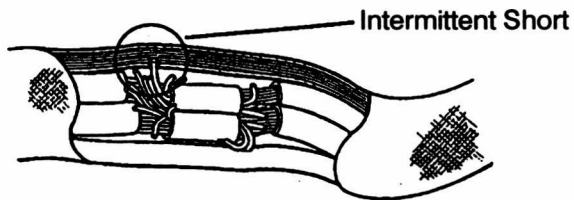

Splice Tape Removed

Operate the system and flex the harness at splice location noted in Section 152.

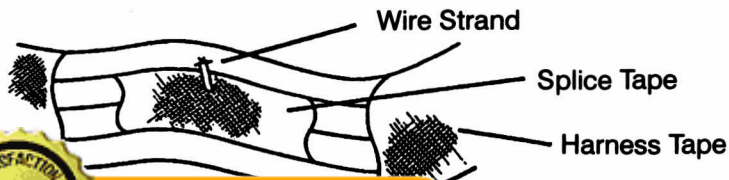


100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

WITHIN THE HARNESS

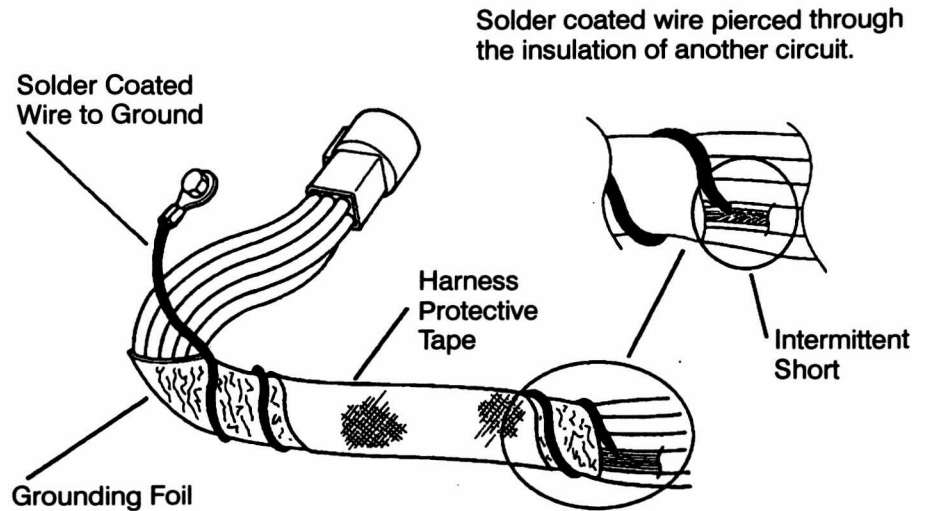

ELECTRICAL SHORT INSIDE THE HARNESS

Remove the tape and flex/feel each circuit for reduction in diameter at break.

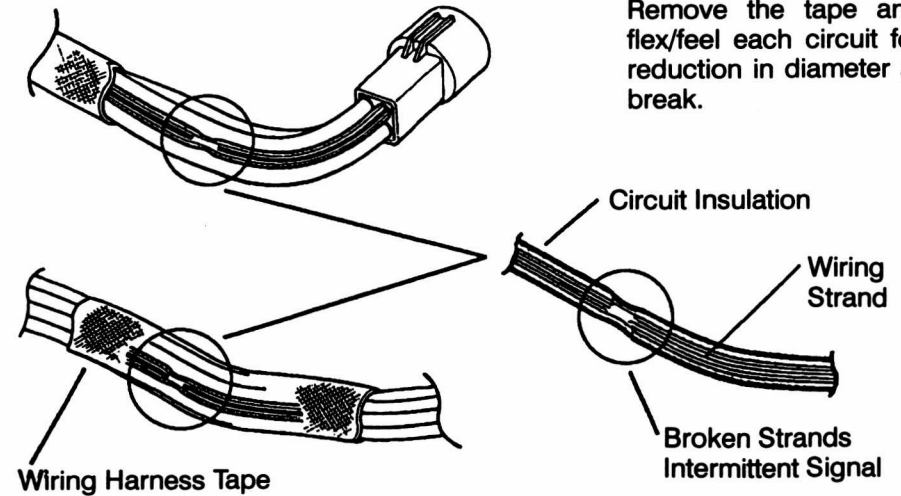

BROKEN WIRE STRANDS IN HARNESS

HOW TO FIND THE VACUUM CONCERNS

These six steps present an orderly method of troubleshooting.

Step 1. Verify the concern.

- Operate the system and observe all symptoms to check the accuracy and completeness of the customer's complaint.

Step 2. Narrow the concern.

- Narrow down the possible causes and location of the concern to pinpoint the exact cause.

Step 3. Test the cause.

- Use test procedures to find the specific cause of the symptoms.

Step 4. Verify the cause.

- Confirm that you have found the right cause by operating the parts of the circuit you think are good.

Step 5. Make the repair.

- Repair or replace the inoperative component.

Step 6. Verify the repair.

- Operate the system as in Step 1. Check that your repair has removed all symptoms without creating any new symptoms.

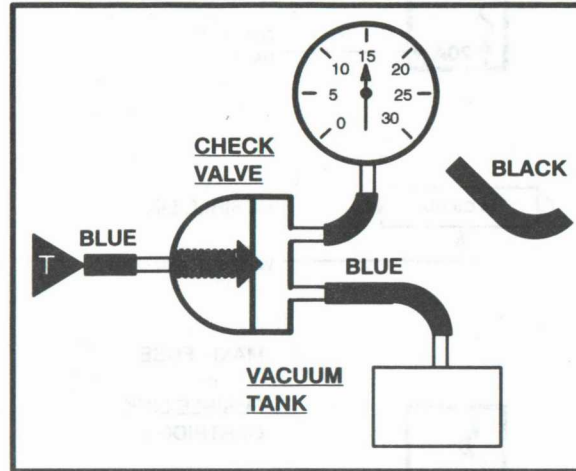


Figure 1 - System Supply Test

Vacuum Supply Test

- Connect Vacuum Tester to system side of Check Valve (Figure 1).
- Start engine. Gauge should show approximately 15 inches of vacuum.
- Turn off engine, and observe gauge:
 - If vacuum holds, supply OK.
 - If vacuum fails, replace Check Valve or Tank.

Leak Test

- Connect Vacuum Gauge and Vacuum Pump (Figure 2) to system hose in place of tank.
- Open valve and start pump. Operate control in all modes.
- Listen for hiss and observe gauge.

NOTE: Hissing is normal at Function Control when changing modes.

If system hisses or loses vacuum, find system

- Turn on Vacuum Pump and check vacuum build-up.
- Stop pump; vacuum should drop.
- Clamp supply hoses with needlenose pliers, one at a time, until vacuum stops dropping (Figure 2).
- Check vacuum schematic to find components in that line.
- Clamp hoses through circuit to find leak.

Component Test

- Connect Vacuum Tester to component.
- Pump Vacuum Tester. Check that all components operate correctly and vacuum holds.
- Replace components if vacuum does not hold.

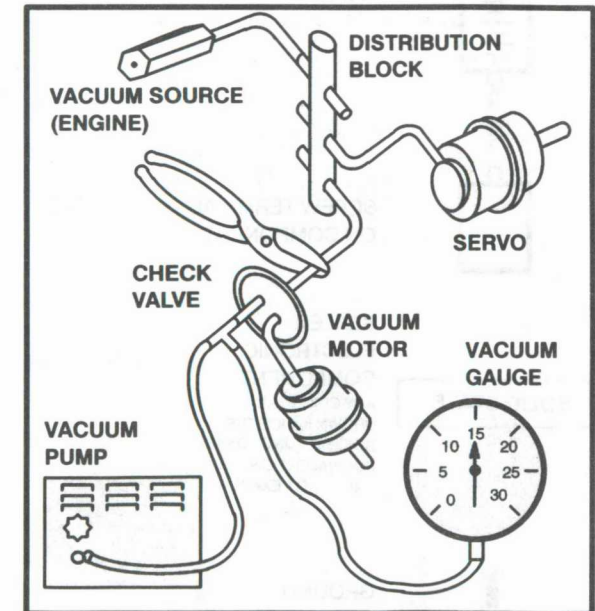


Figure 2 - Testing For Leaks In Typical Vacuum System

Vacuum system problems fall into

100% GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Cards Discover NOVUS MasterCard VISA


2-9 HOW TO USE THIS MANUAL

1997 F-150/250

ELECTRICAL SYMBOLS




DASHED COMPONENT BOX
ONLY PART OF THE COMPONENT IS SHOWN ON THE PAGE: THE COMPONENT IS SHOWN COMPLETE IN ANOTHER LOCATION



COMPONENT WITH CONNECTORS



BATTERY



SCREW TERMINAL ON COMPONENT


SOLID STATE

SEALED ELECTRONIC COMPONENT
ANY CIRCUITRY SHOWN INSIDE THE BOX IS A FUNCTIONAL EQUIVALENT ONLY AND IS NOT EXACT



FUSE

CURRENT RATING



FUSIBLE LINK

WIRE SIZE AND COLOR




MAXI-FUSE or FUSIBLE LINK CARTRIDGE

CURRENT RATING




CIRCUIT BREAKER


CURRENT RATING




SOLID WIRE



STRIPED WIRE

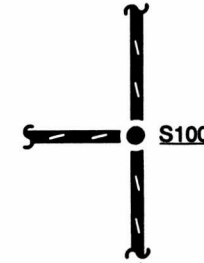


SPLICE OR CRIMP TERMINAL

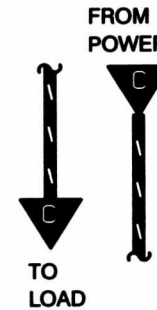

"CUT" WIRES REFERENCED BETWEEN PAGES
ARROWS SHOW CURRENT FLOW FROM POWER TO GROUND



"REFERENCE" WIRES
COMPLETE WIRING SHOWN ON ANOTHER PAGE

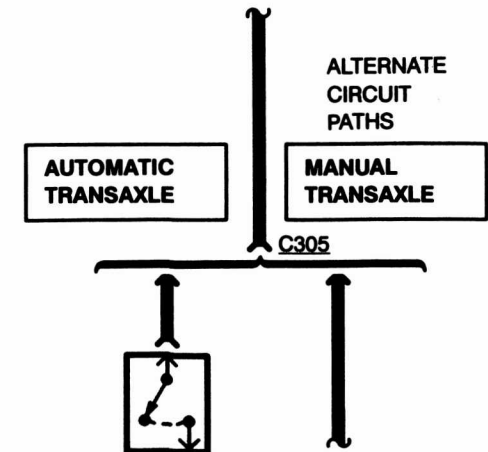

ALTERNATE CIRCUIT PATHS

AUTOMATIC TRANSAXLE

MANUAL TRANSAXLE

100% SATISFACTION GUARANTEED


BUY IT NOW!

Click Here To Order

HOW TO USE THIS MANUAL 2-10

1997 F-150/250

ELECTRICAL SYMBOLS

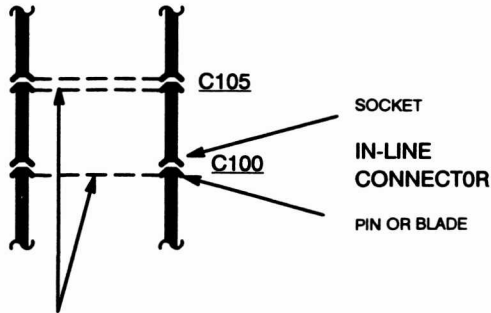


SINGLE OR DOUBLE DASHED LINE INDICATES THAT WIRE ON LEFT ALSO PASSES THROUGH THE SAME CONNECTOR

SEE GROUNDS
PAGES 10-1, 10-2



DASHED WIRE
CIRCUITRY IS NOT SHOWN IN COMPLETE DETAIL, BUT IS COMPLETE ON ANOTHER PAGE

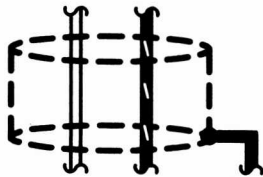

SHIELD WIRES ARE COVERED BY A SHIELD



MOTOR



HEATING ELEMENT



THERMISTOR




RHEOSTAT OR POTENTIOMETER




SOLENOID



SWITCH



GANGED SWITCHES
CONTACTS MOVE AT THE SAME TIME



DIODES
CURRENT FLOWS IN DIRECTION OF ARROW ONLY



CAPACITOR



TRANSISTOR



GAUGE




LIGHT BULB



LIGHT EMITTING DIODE (LED)



DUAL FILAMENT LIGHT BULB



RELAY
CONTACTS CHANGE POSITION WITH CURRENT THROUGH COIL

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

COIL


E

PayPal American Express Cards Discover NOVUS MasterCard VISA


2-11 HOW TO USE THIS MANUAL

1997 F-150/250

VACUUM SYMBOLS

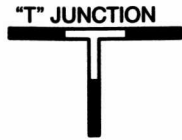

"CUT" HOSES REFERENCED BETWEEN PAGES
ARROW SHOWS FROM MANIFOLD FITTING TO COMPONENT


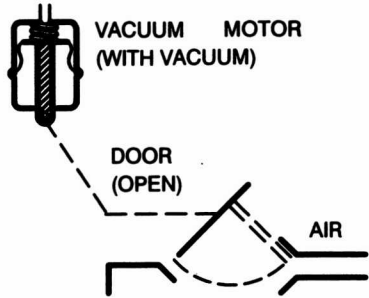


VACUUM ON VACUUM MOTOR PULLS DOOR OPEN TO LET AIR PASS THROUGH

FROM VACUUM DISTRIBUTION




SERVO MOTOR

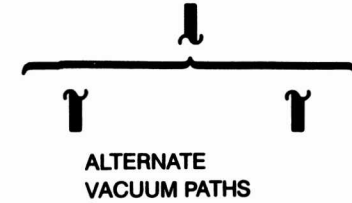


NOTE
Other vacuum symbols used on vacuum system diagrams are fully explained on those pages.

DOUBLE DIAPHRAGM MOTOR

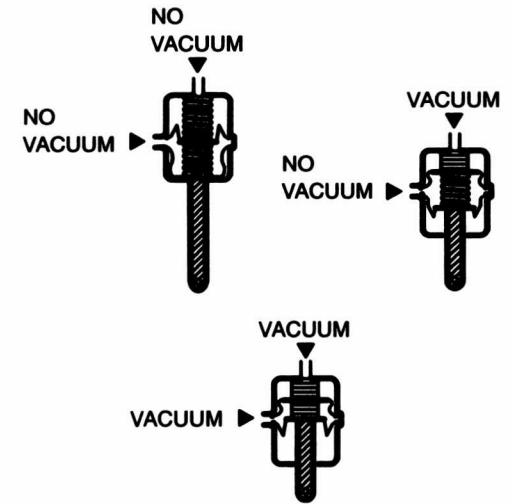

VACUUM MOTOR OPERATIONS

SINGLE DIAPHRAGM MOTOR

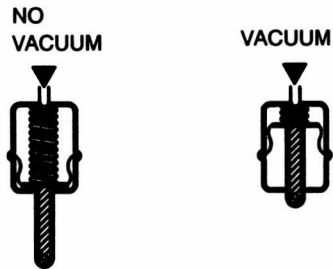

Vacuum motors operate like electrical solenoids, mechanically pushing or pulling a shaft between two fixed positions. When vacuum is not applied, the shaft is pushed all the way out by a

Some vacuum motors, such as the Servo Motor in the Speed Control, can position the actuating arm at any position between fully extended and fully retracted. The Servo is operated by a control valve that applies varying amounts of vacuum to the motor. The higher the vacuum level, the greater the retraction of the motor arm. Servo Motors work nearly the same way as two-position motors, except for the way the vacuum is applied. Servo Motors are generally larger and provide a calibrated control.

A double diaphragm motor has three positions (it is actually two motors in one housing). When the top port gets vacuum, the shaft pulls halfway in. When both ports get vacuum, the shaft pulls all the way in.

100% SATISFACTION GUARANTEED


BUY IT NOW!

Click Here To Order

10-1 GROUNDS

1997 F-150/250

All Circuit are 57 BK unless otherwise noted.

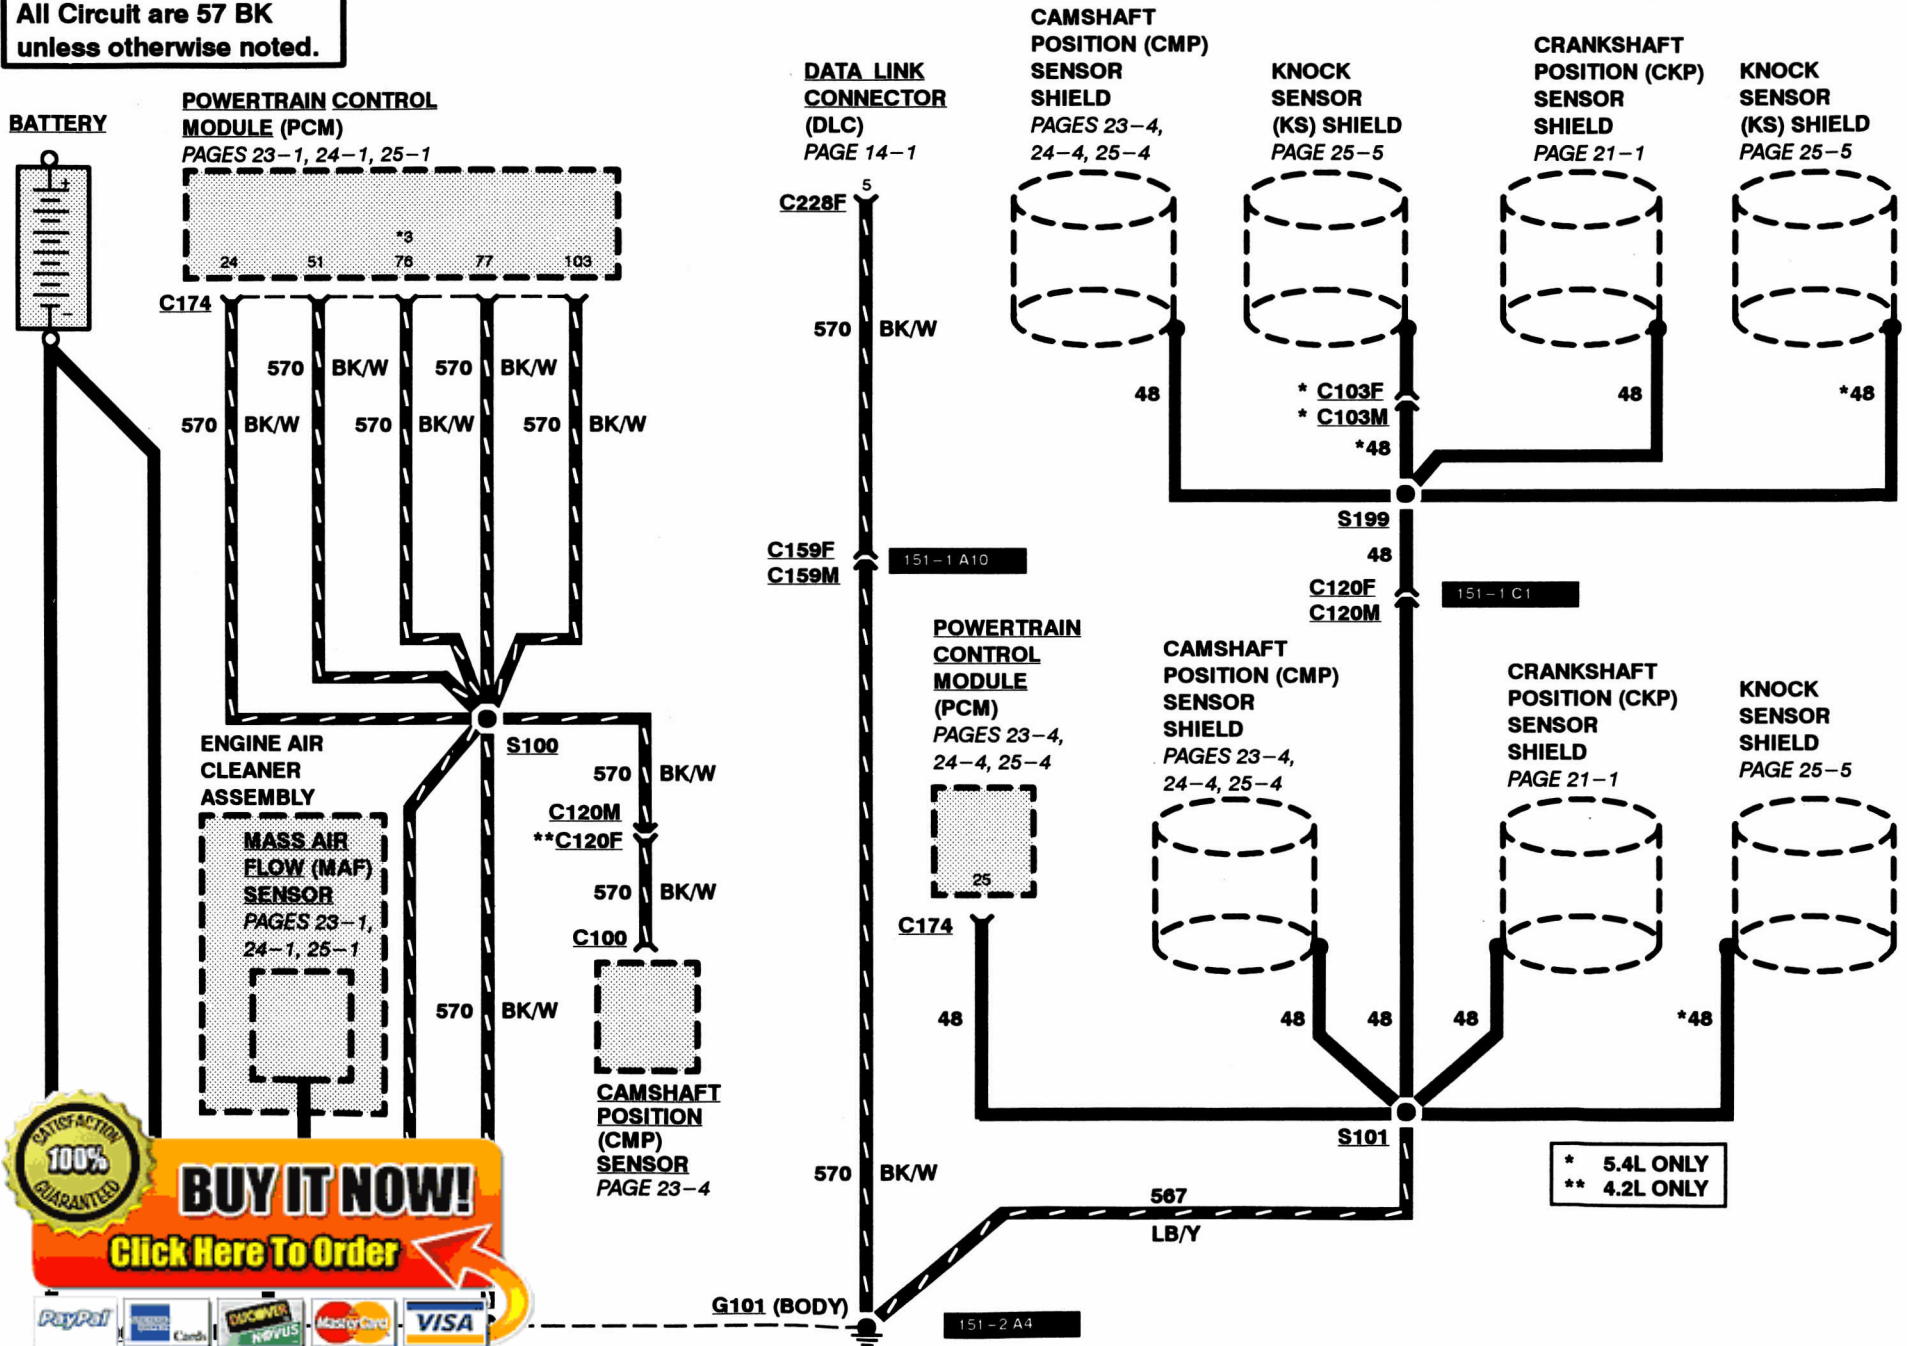

100% SATISFACTORY GUARANTEED

BUY IT NOW!


Click Here To Order

GROUNDS 10-2

1997 F-150 250

* VEHICLES BUILT BEFORE 6-24-96
 ** VEHICLES BUILT AFTER 6-24-96

All Circuits are 57 BK
 unless otherwise noted.

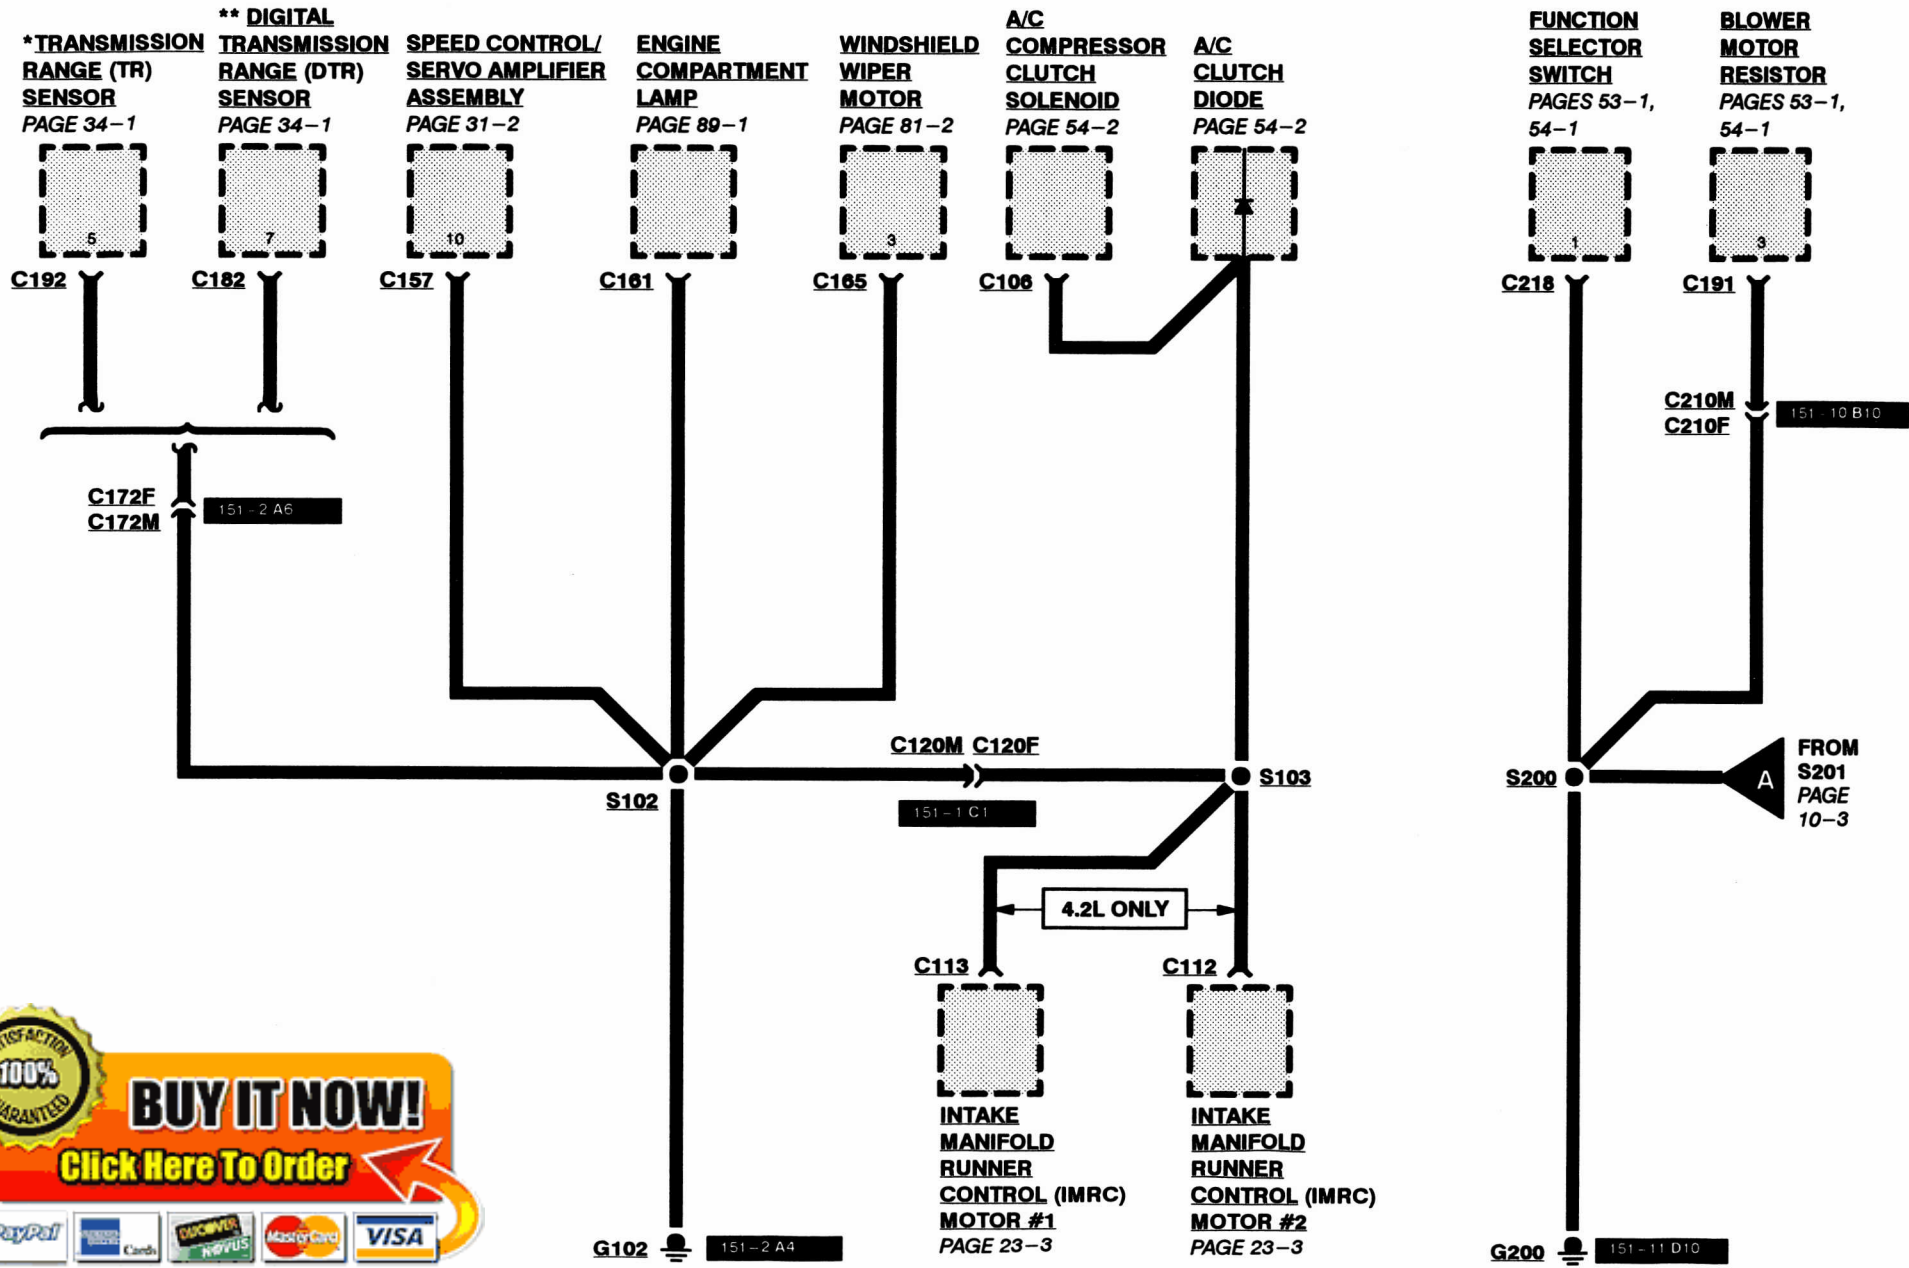

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal, American Express, Discover, MasterCard, VISA


10-3 GROUNDS

1997 F-150/250


All Circuit are 57 BK
unless otherwise noted.

BLOWER/FLASHER RELAY BLOCK


151-10 A5

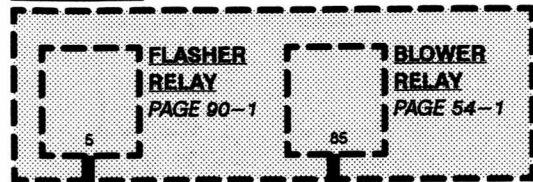

INSTRUMENT CLUSTER




BLEND DOOR ACTUATOR




DATA LINK CONNECTOR (DLC)





CLOCK SPRING ASSEMBLY



4 WHEEL DRIVE MODE SWITCH



TRANSFER CASE SHIFT RELAY

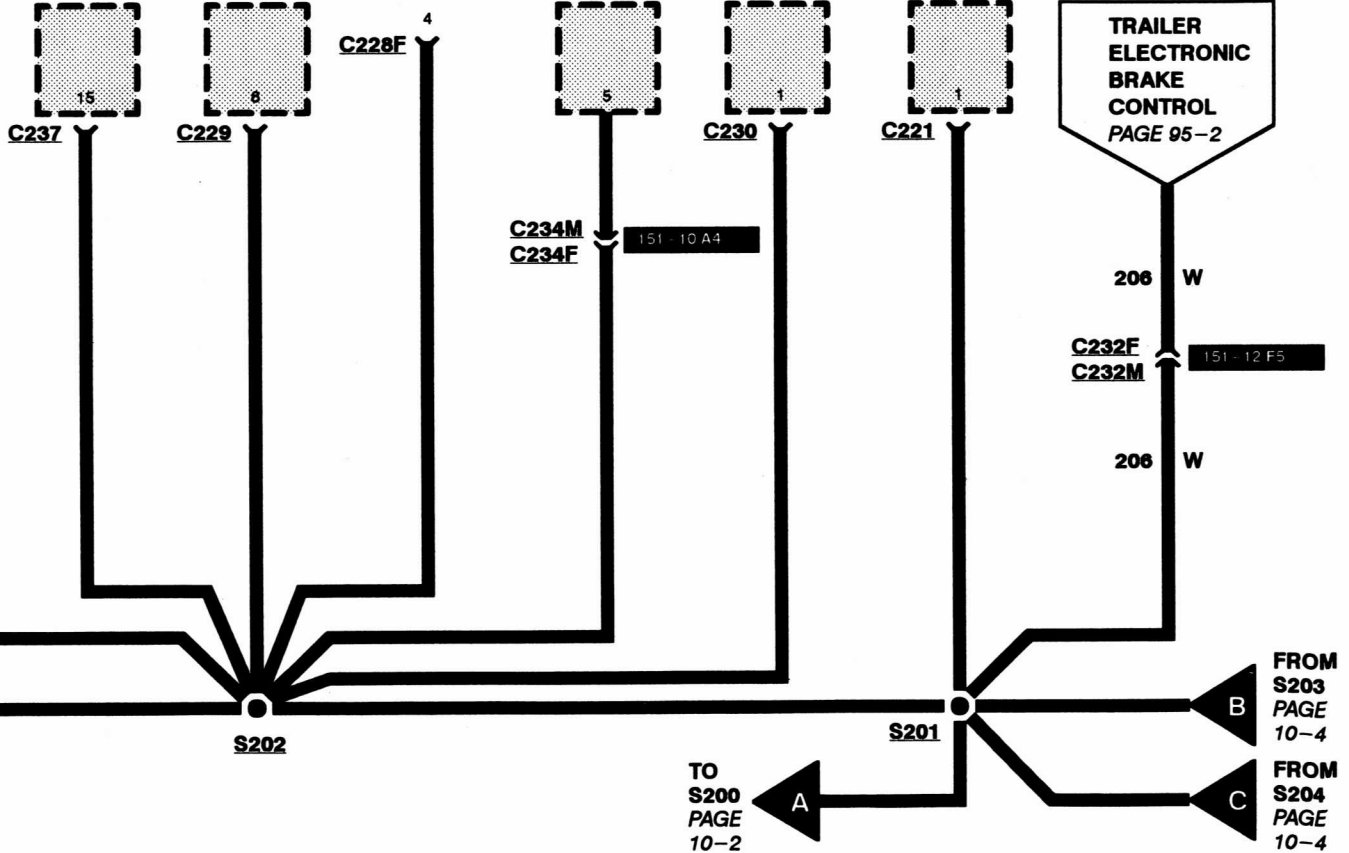

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal

Discover Cards

Discover NOVUS


MasterCard

VISA

GROUNDS 10-4

1997 F-150 250

All Circuits are 57 BK unless otherwise noted.

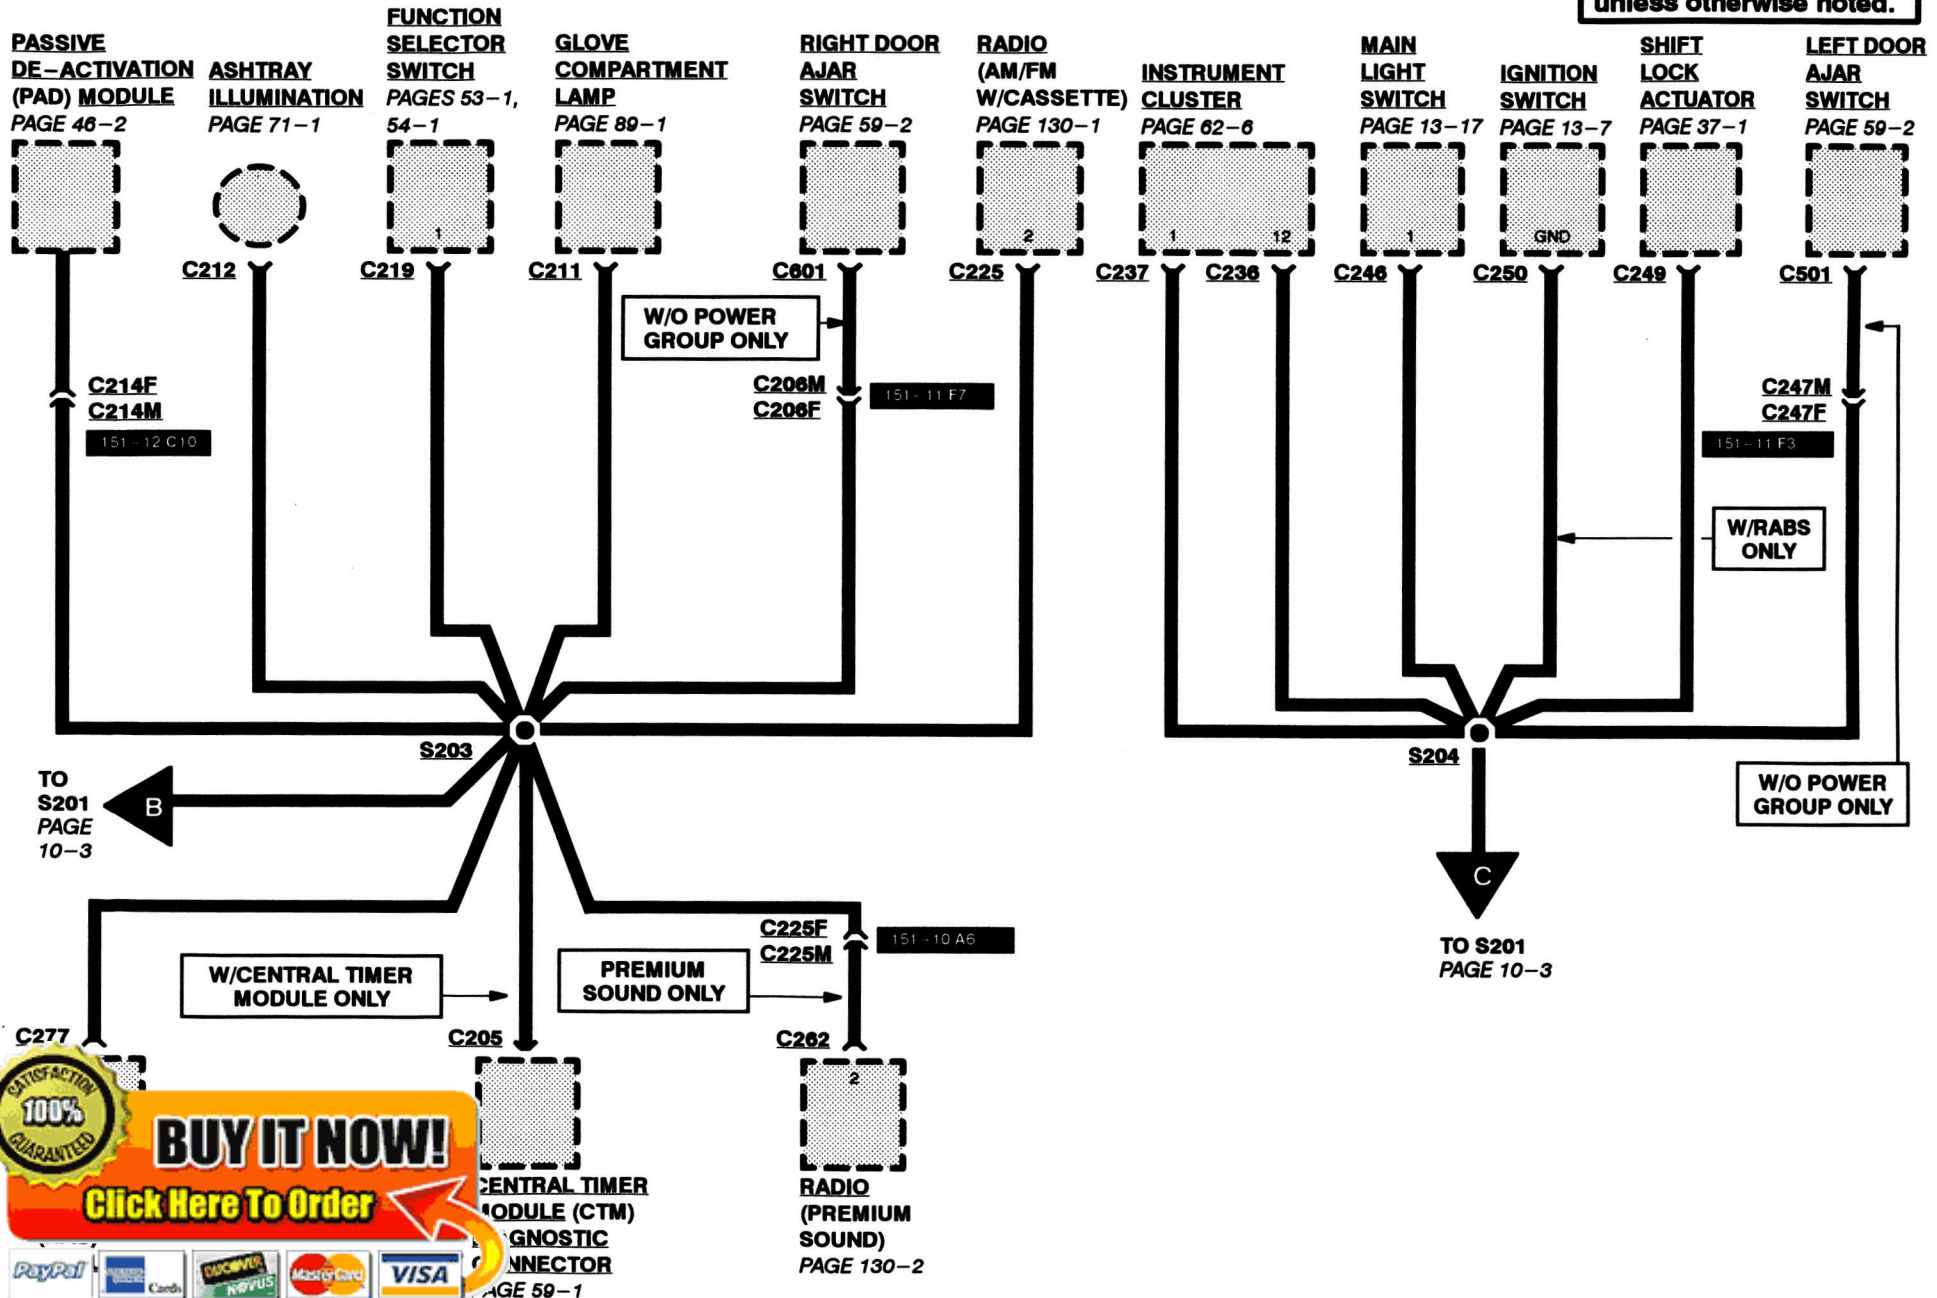

100% SATISFACTORY GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal, American Express, Discover, MasterCard, VISA


CENTRAL TIMER MODULE (CTM) DIAGNOSTIC CONNECTOR PAGE 59-1

RADIO (PREMIUM SOUND) PAGE 130-2

10-5 GROUNDS

1997 F-150/250

All Circuit are 57 BK unless otherwise noted.

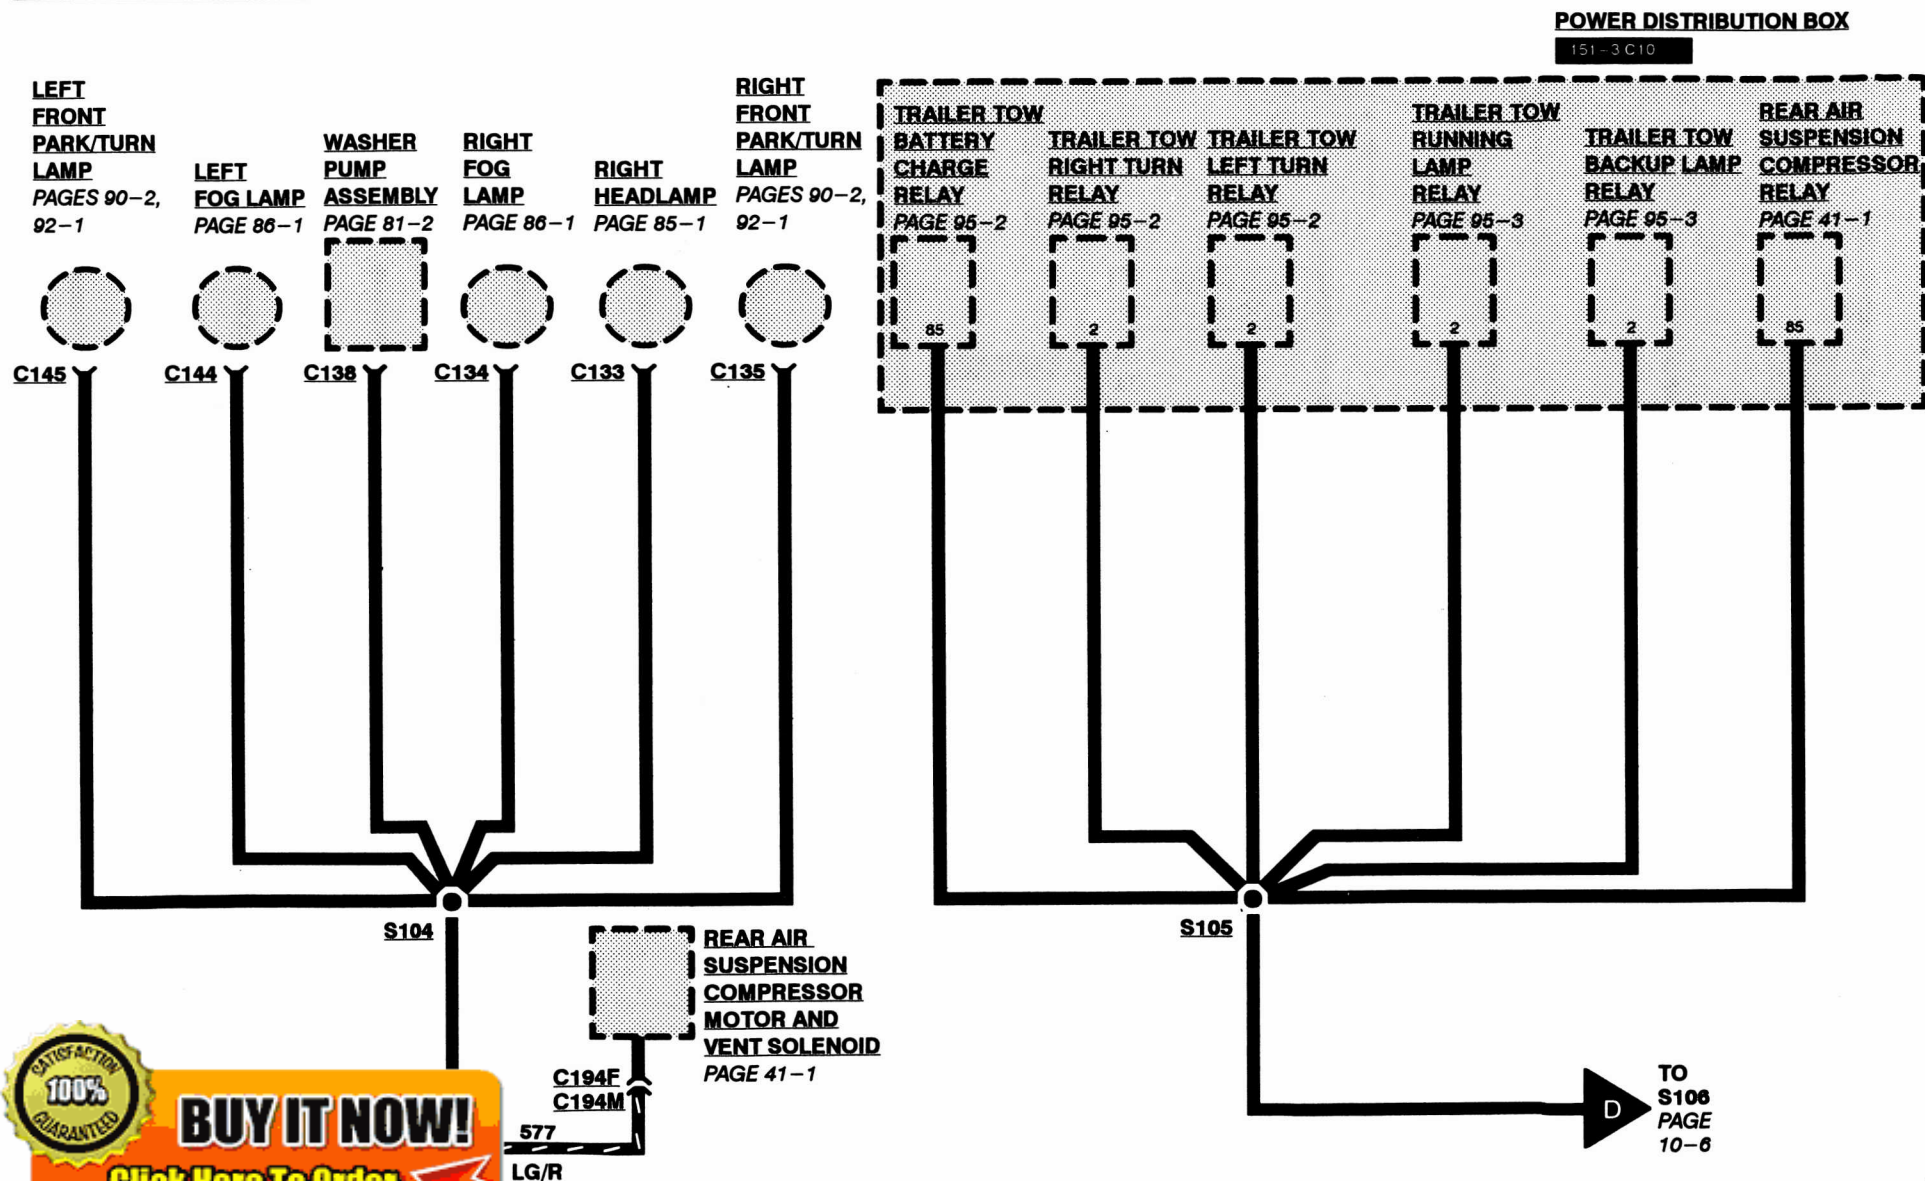

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal

Discover Cards

Discover NOVUS

MasterCard


VISA

2 B1

REAR ANTI-LOCK BRAKE SYSTEM (RABS) PROPORTIONING VALVE SWITCH ASSEMBLY
PAGE 42-2

4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-4

POWER DISTRIBUTION BOX

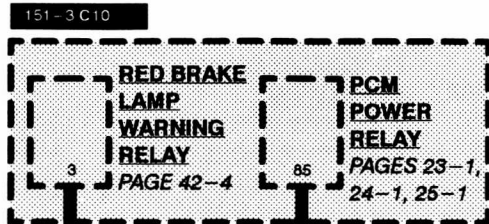

BRAKE FLUID LEVEL INDICATOR SWITCH
PAGE 42-4

LEFT HEADLAMP
PAGE 85-1

FUEL PUMP ASSEMBLY
PAGES 23-6, 24-6, 25-6


LEFT BACKUP LAMP
PAGE 93-1

RIGHT BACKUP LAMP
PAGE 93-1

LICENSE LAMP
PAGE 92-1

LICENSE LAMP
PAGE 92-1

All Circuit are 57 BK unless otherwise noted.

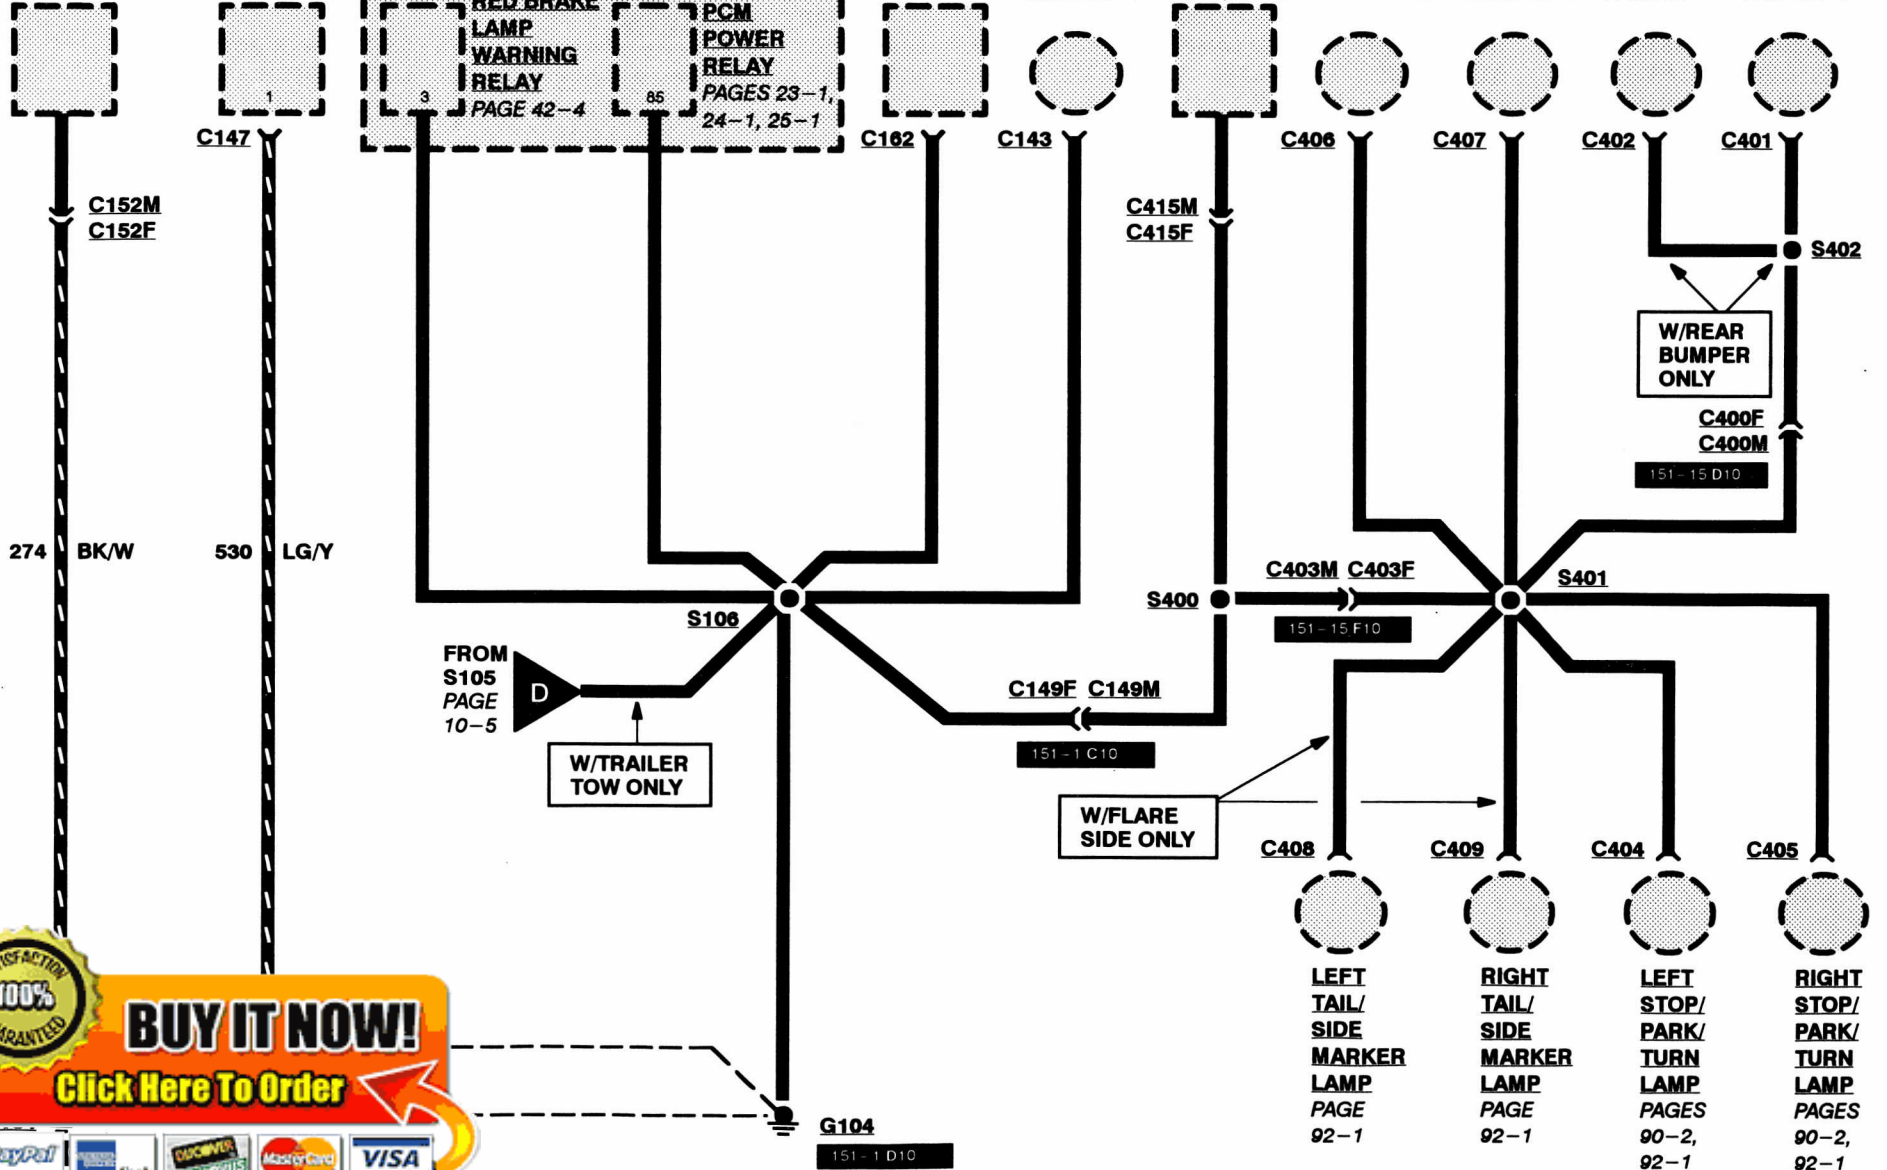

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

PayPal, American Express, Discover, MasterCard, VISA

10-7 GROUNDS

1997 F-150/250

All Circuit are 57 BK
unless otherwise noted.

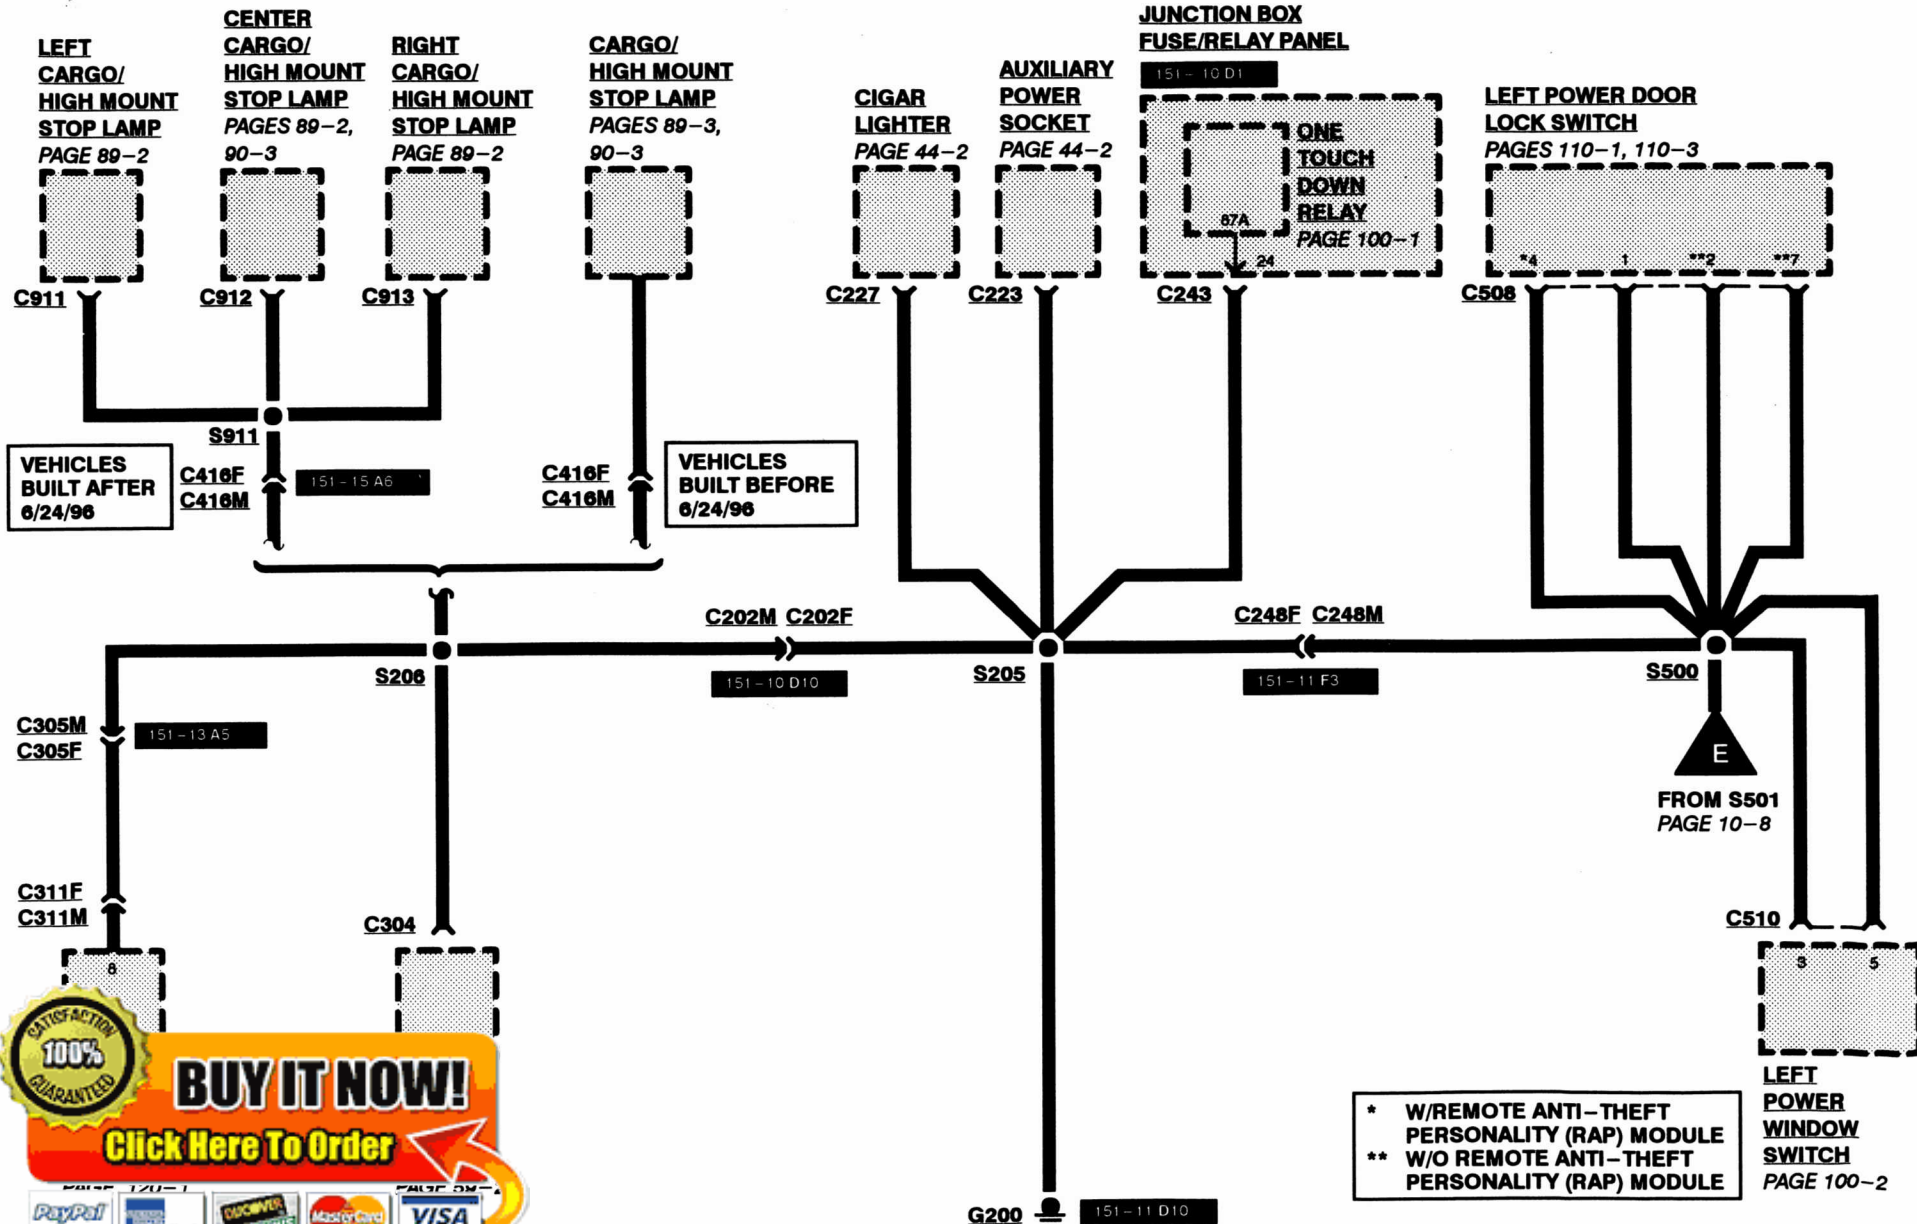

100% SATISFACTION GUARANTEED


BUY IT NOW!

Click Here To Order

PayPal | Discover | MasterCard | VISA

* W/REMOTE ANTI- THEFT PERSONALITY (RAP) MODULE
** W/O REMOTE ANTI- THEFT PERSONALITY (RAP) MODULE

All Circuit are 57 BK unless otherwise noted.

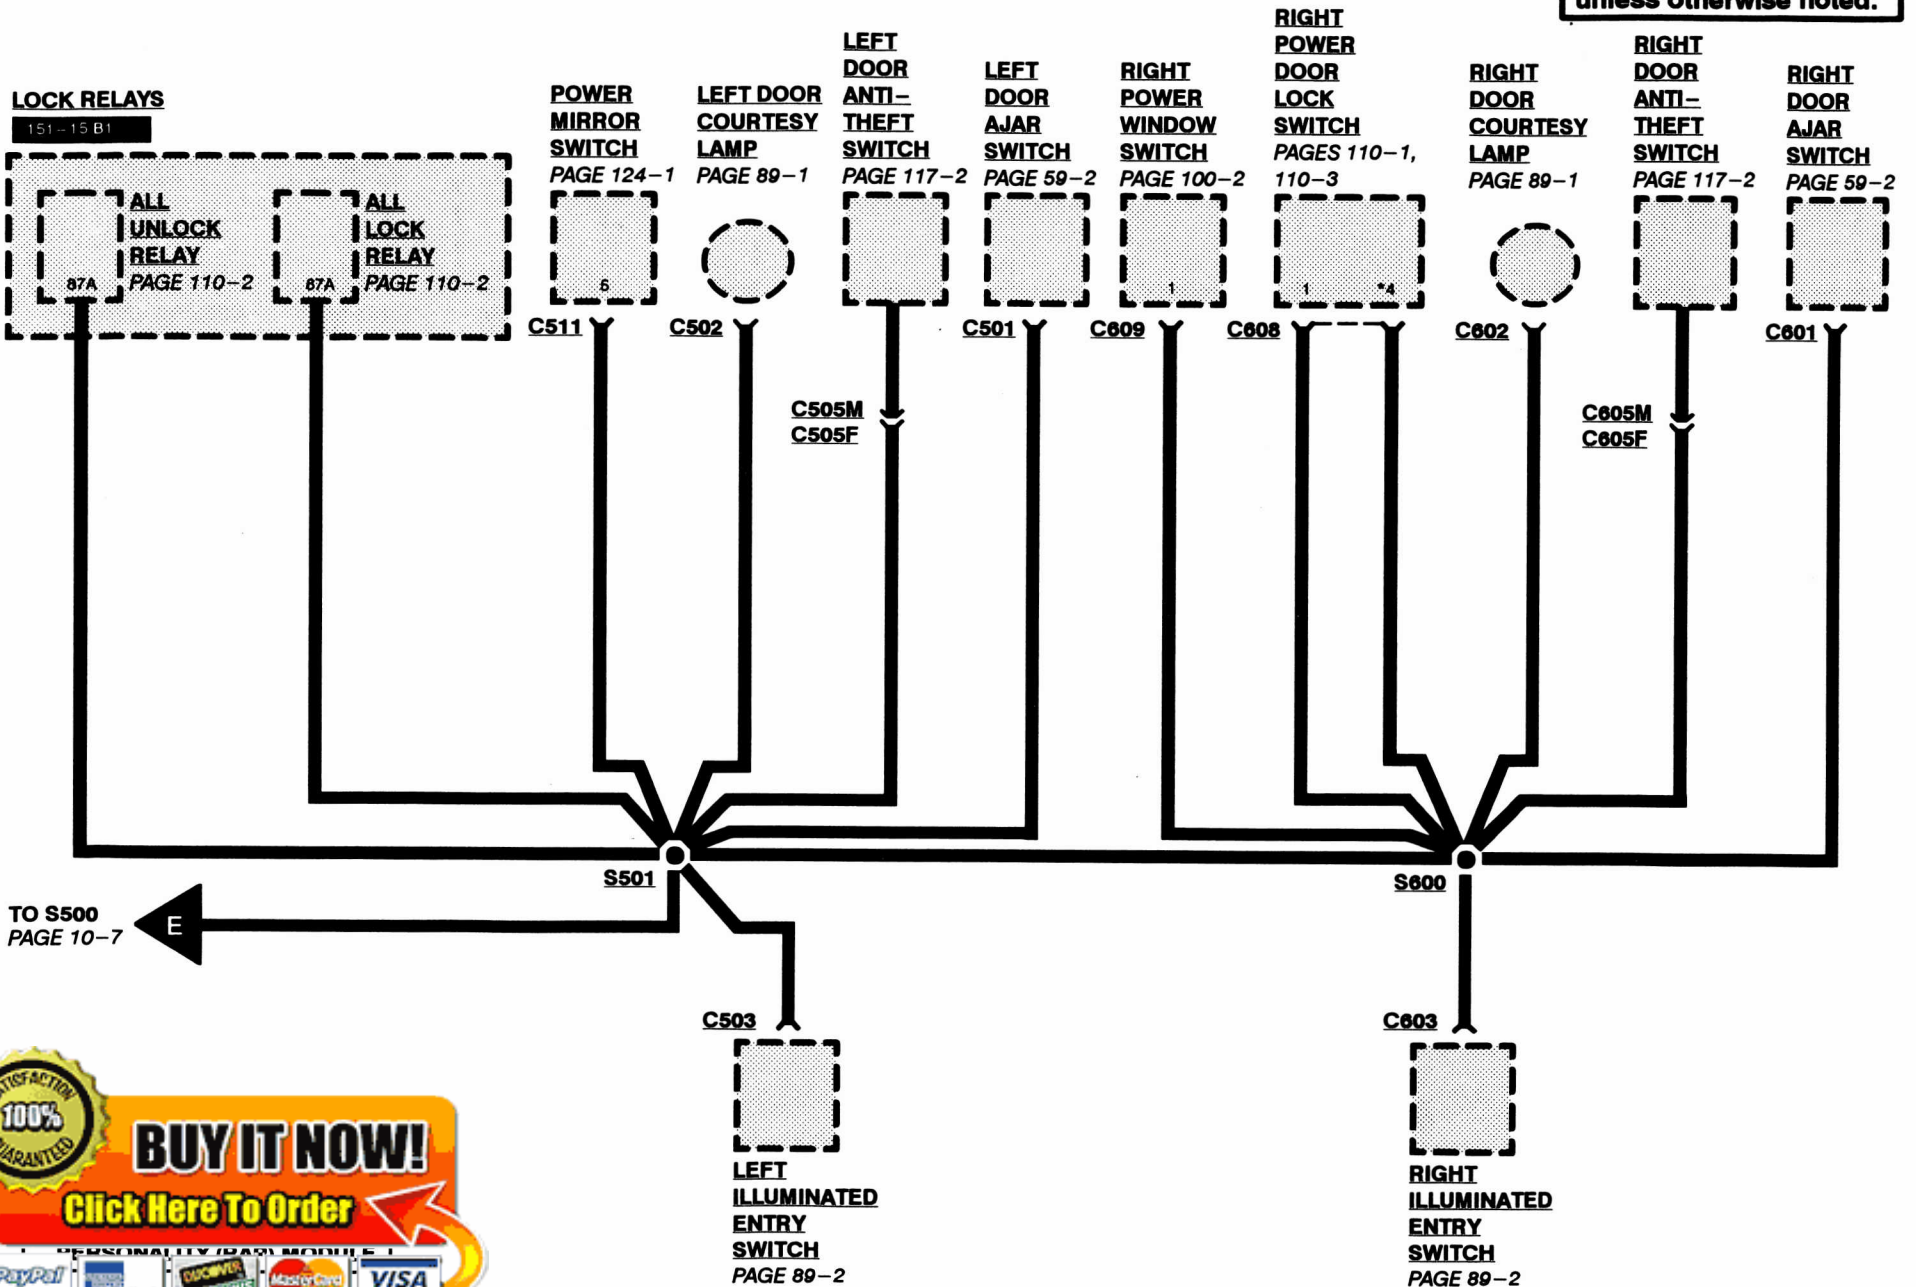

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

PERSONALITY / BODY MODULE

10-9 GROUNDS

1997 F-150/250

All Circuit are 57 BK unless otherwise noted.

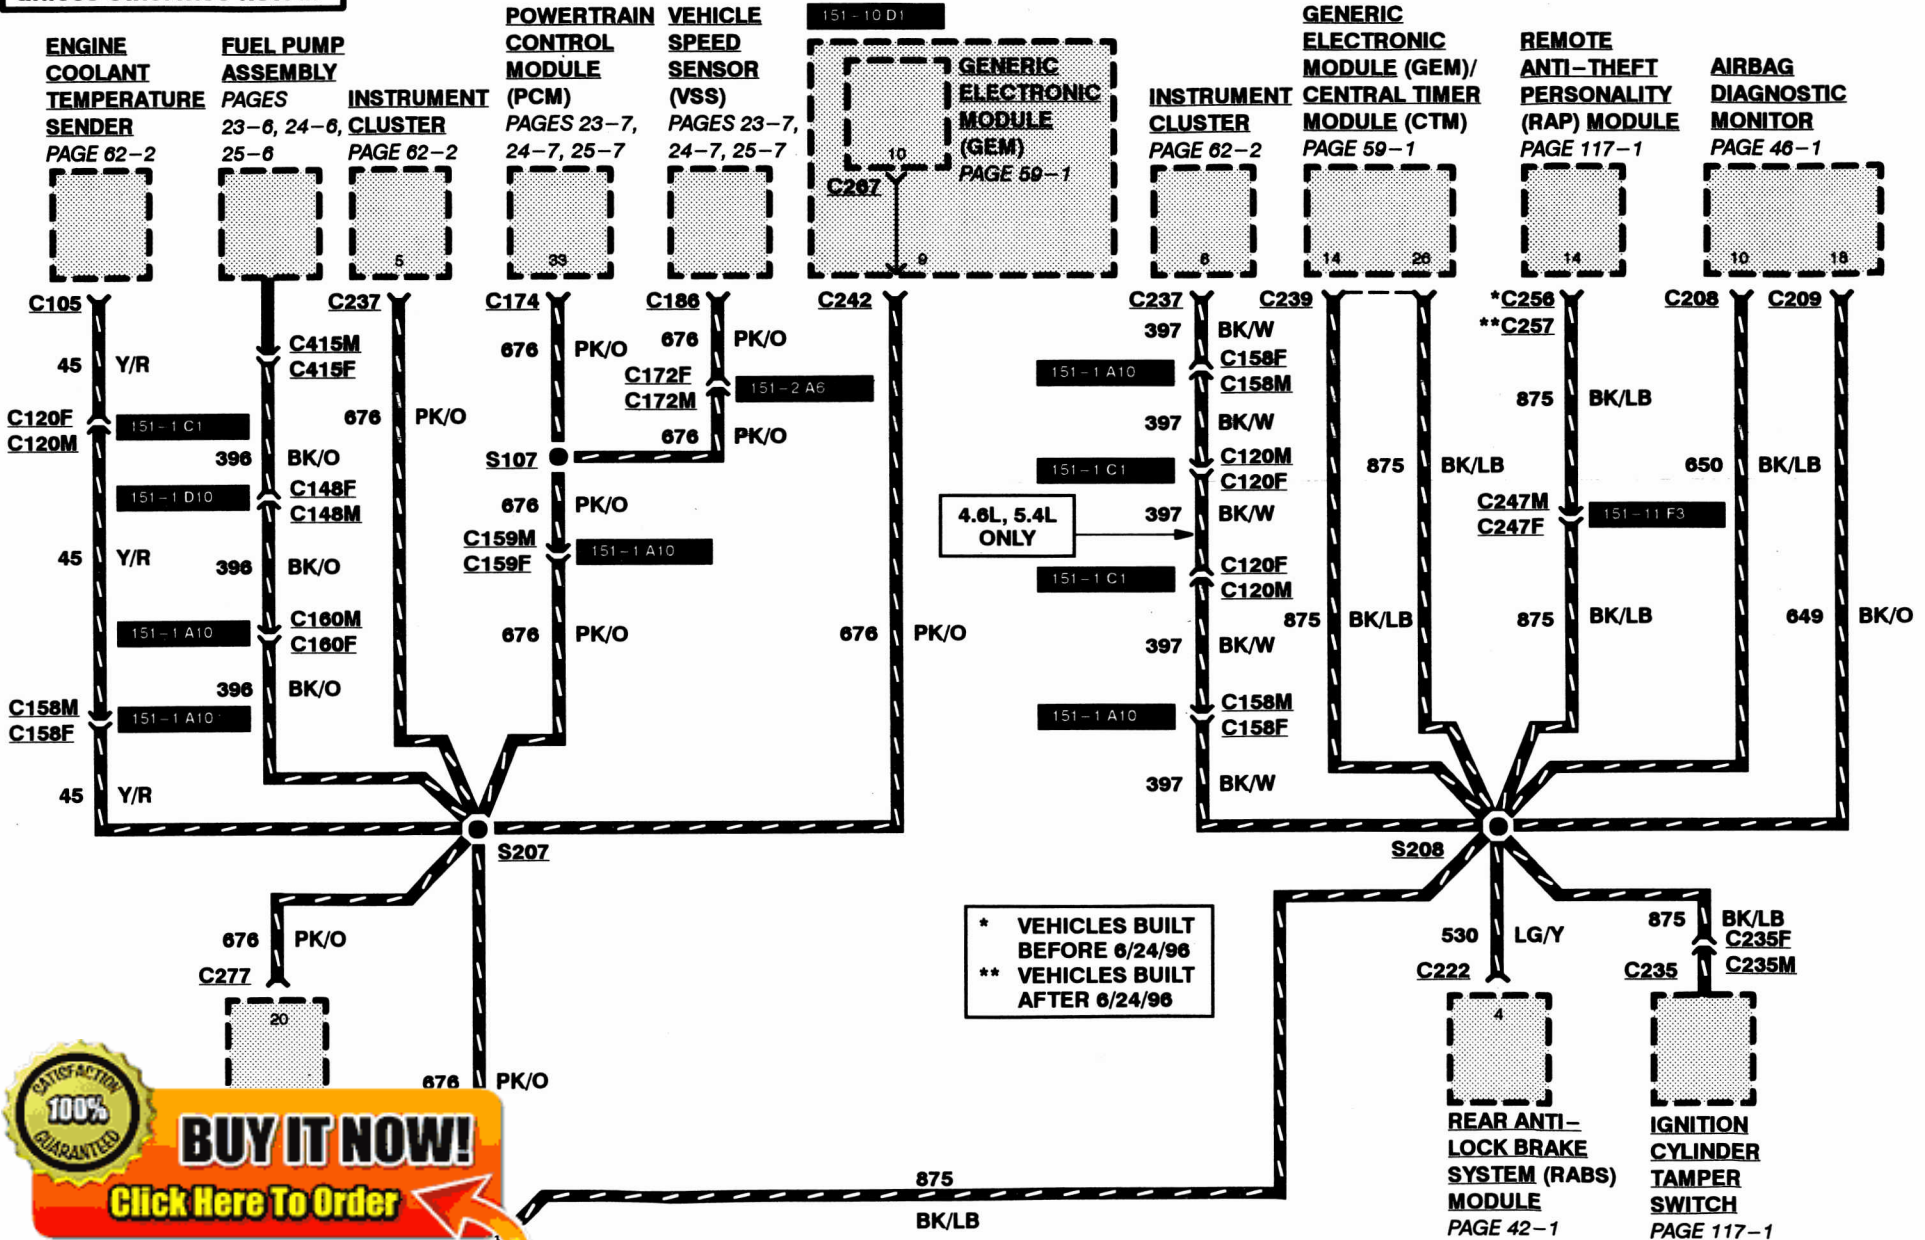


100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal, American Express, Discover, MasterCard, VISA

All Circuit are 57 BK unless otherwise noted.

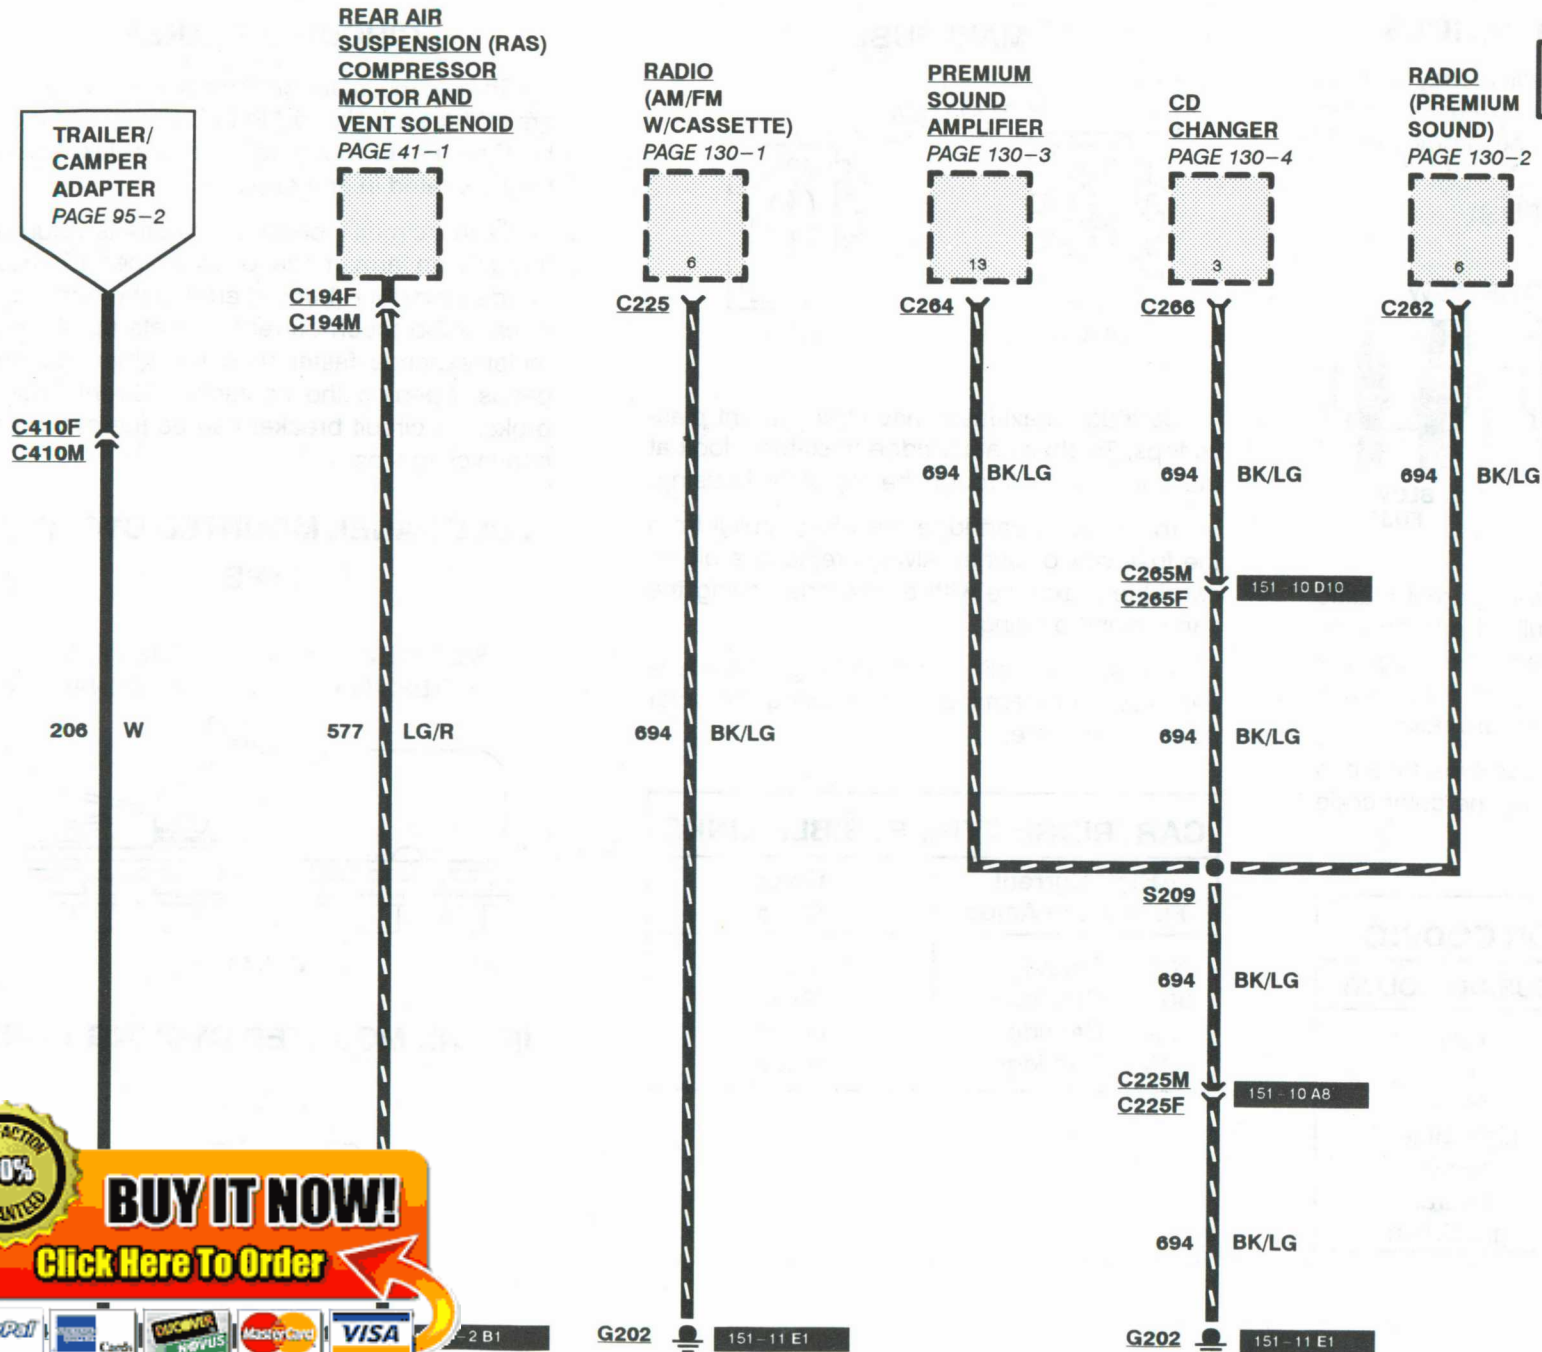

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


11-1 FUSE PANEL/CIRCUIT PROTECTION

1997 F-150/250

CIRCUIT PROTECTION DEVICES

Electrical circuits on this vehicle may be protected by fuses, fusible links, maxi-fuses, circuit breakers, or a combination of these devices.

BLADE TYPE FUSE

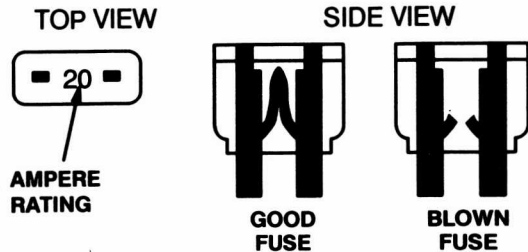

Blade type fuses have a transparent plastic housing. To check a fuse, pull it from the fuse panel and look at the fuse element through the housing. Always replace a blown fuse with a new fuse that has the same ampere rating.

The ampere rating of a blade type fuse can also be determined by following the color code shown here:

BLADE FUSE COLOR CODING	
AMPERE RATING	HOUSING COLOR
4	Pink
5	Tan
10	Red
15	Light Blue




BUY IT NOW!

Click Here To Order



MAXI-FUSE

TOP VIEW

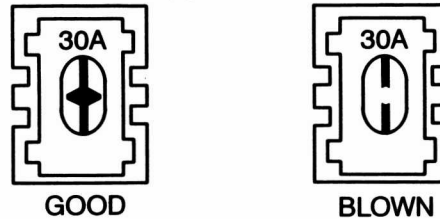

Cartridge maxi-fuses have transparent plastic tops. To check a cartridge maxi-fuse, look at the fuse element through the top of the housing.

To replace a cartridge maxi-fuse, pull it from the fuse box or panel. Always replace a blown cartridge maxi-fuse with a new one having the same ampere rating.

The ampere rating of a cartridge maxi-fuse can also be determined by following the color code shown here:


CARTRIDGE TYPE FUSIBLE LINKS		
High Current Fuse Value Amps		Color Code
20A	Cartridge	Blue
30A	Cartridge	Pink
40A	Cartridge	Green
60A	Cartridge	Yellow

CIRCUIT BREAKER

Some circuits are protected by circuit breakers (abbreviated "c. b." in fuse chart). They can be Fuse Panel mounted or in-line. Like fuses, they are rated in amperes.

Each circuit breaker conducts current through an arm made of two types of metal bonded together (bimetal arm). If the arm starts to carry too much current, it heats up. As one metal expands faster than the other the arm bends, opening the contacts. Current flow is broken. A circuit breaker can be the cycling or non-cycling type.

FUSE PANEL MOUNTED CYCLING TYPE

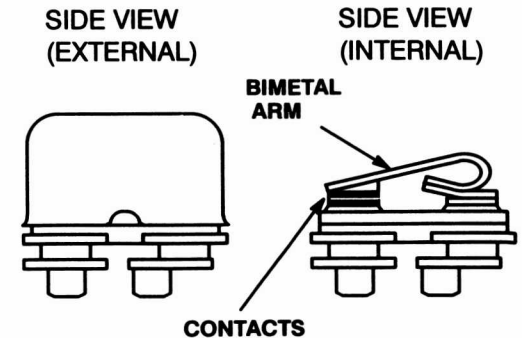


IN-LINE MOUNTED CYCLING TYPE



In the cycling type, the bimetal arm cools and straightens out. This cycle repeats as long as the overcurrent exists and power is applied.


FUSE PANEL MOUNTED NON-CYCLING TYPE

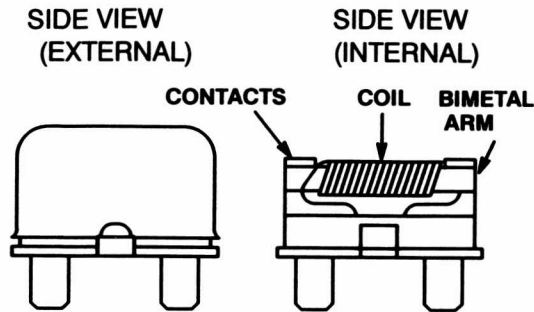

In the first type, there is a coil wrapped around the bimetal arm. When an overcurrent exists and the contacts open, a small current passes through the coil. This current through the coil is not enough to operate a load, but it does heat up both the coil and the bimetal arm. This keeps the arm in the open position until power is removed.

In the second type, a spring pushes the bimetal arm down and holds the contacts together. When an overcurrent condition exists and the bimetal arm heats up, the bimetal arm bends enough to overcome the spring and the contacts snap open. The contacts stay open until the reset button is pushed and the contacts snap together again.

FUSE PANEL MOUNTED MANUAL RESET TYPE

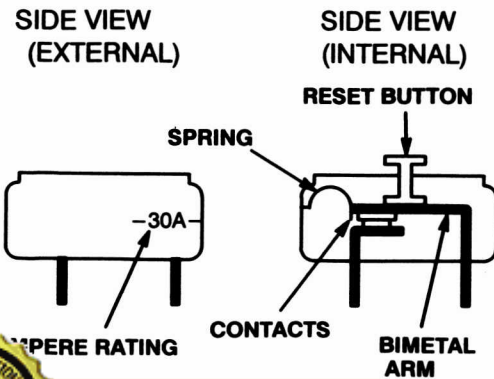


DIODE



Diodes are electrical devices that permit current to flow in one direction only. The current flows in the direction indicated by the arrow.

MEGA FUSE

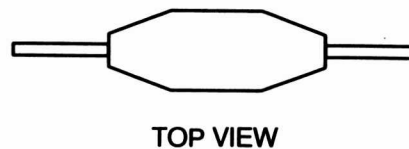

Mega fuse protects the charging circuit. In the event that the mega fuse is blown due to the charging circuit failure, the generator field circuit is disabled.

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


breakers are
r from the
sing a re-

PayPal Discover Cards Discover Novus MasterCard VISA

11-3 FUSE PANEL/CIRCUIT PROTECTION

1997 F-150/250

POWER DISTRIBUTION BOX

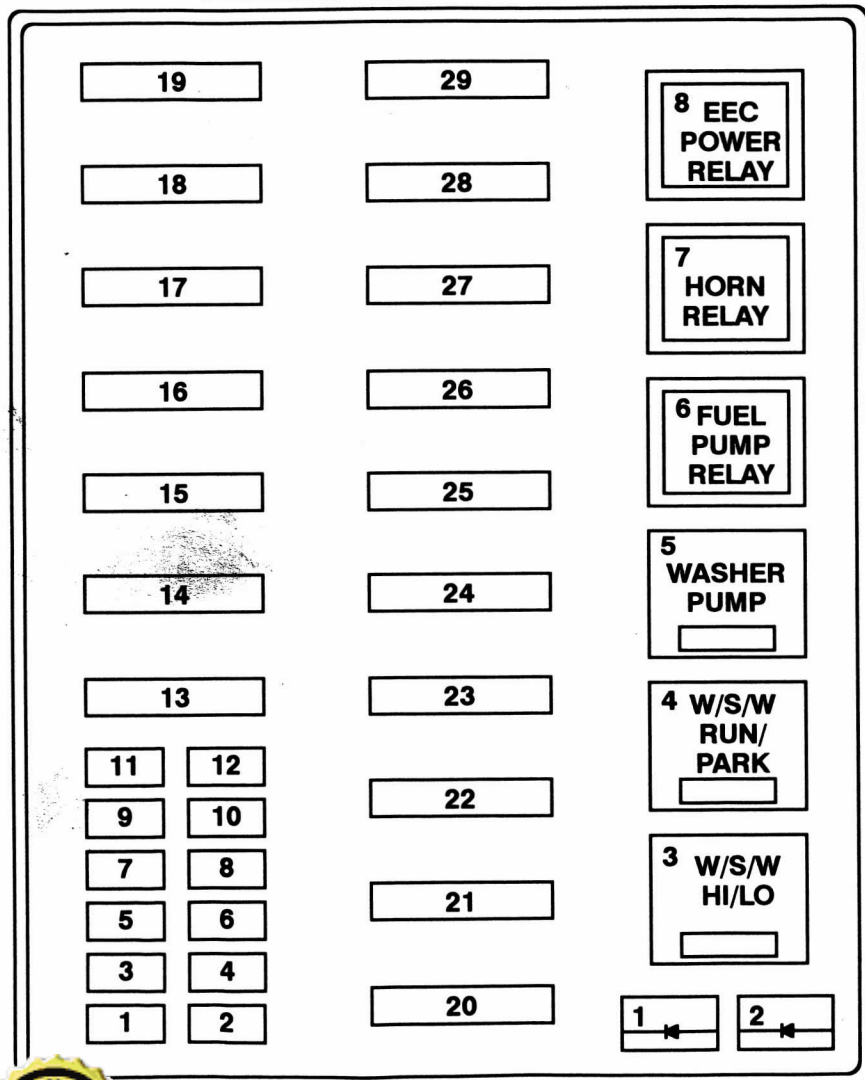

VEHICLES BUILT AFTER 6/24/96

Fuse Position	Amps	Circuits Protected
1	20 (MINI)	Trailer Tow Running Lamp Relay, Trailer Tow Backup Lamp Relay
2	10 (MINI)	Airbag Diagnostic Monitor
3	15 (MINI)	All Unlock Relay, All Lock Relay, Driver Unlock Relay, LH Power Door Lock Switch, RH Power Door Lock Switch
4	15 (MINI)	Rear Air Suspension (RAS)
5	20 (MINI)	Horn Relay
6	15 (MINI)	Radio, Premium Sound Amplifier, CD Changer
7	15 (MINI)	Main Light Switch, Park Lamp Relay
8	30 (MINI)	Main Light Switch, Headlamp Relay, Multi-function Switch
9	15 (MINI)	Daytime Running Lamps (DRL) Module, Fog Lamp Relay
10	25 (MINI)	Auxiliary Power Socket
11	-	NOT USED
12	-	NOT USED
13	-	NOT USED
14	60 (MAXI)	4 Wheel Anti-Lock Brake System (4WABS) Module
14	20 (MAXI)	Ignition Switch (W/RABS Only)
15	50 (MAXI)	Rear Air Suspension Compressor
16	40 (MAXI)	Trailer Tow Battery Charge Relay, Engine Fuse Module (Fuse 2)
17	30 (MAXI)	Shift on the Fly Relay, Transfer Case Shift Relay
18	30 (MAXI)	Power Seat Control Switch
19	20 (MAXI)	Fuel Pump Relay
20	50 (MAXI)	Ignition Switch (B4 & B5)
21	50 (MAXI)	Ignition Switch (B1 & B3)
22	50 (MAXI)	Junction Box Fuse/Relay Panel Battery Feed
23	40 (MAXI)	Blower Relay
24	30 (MAXI)	PCM Power Relay, Engine Fuse Module (Fuse 1)
25	30 (MAXI)	Junction Box Fuse/Relay Panel, Acc Delay Relay
26	-	NOT USED
27	-	NOT USED
28	30 (MAXI)	Trailer Electronic Brake Controller
29	-	NOT USED

100% SATISFACTION GUARANTEED

BUY IT NOW!

[Click Here To Order](#)


PayPal, Discover, MasterCard, VISA

COLOR CODE
YELLOW
GREEN
ORANGE
RED
BLUE

FUSE PANEL/CIRCUIT PROTECTION 11-4

1997 F-150/250

POWER DISTRIBUTION BOX

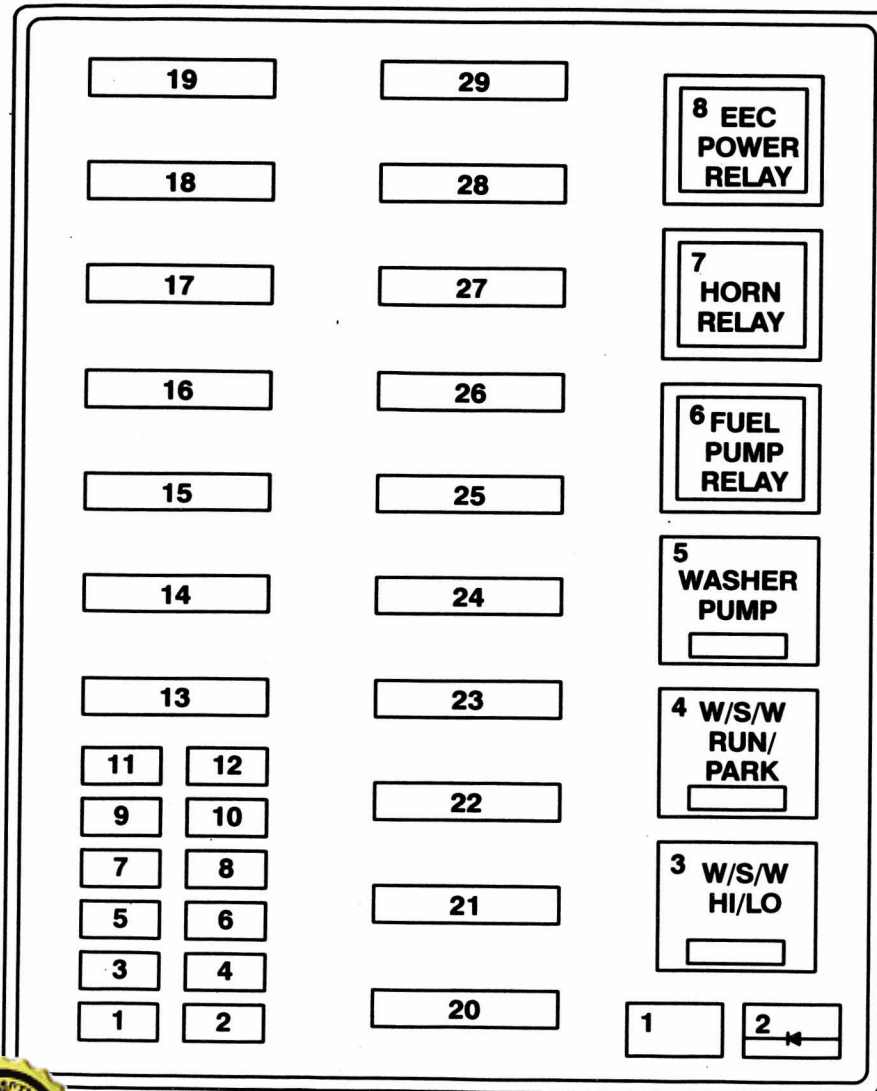

VEHICLES BUILT BEFORE 6/24/96

Fuse Position	Amps	Circuits Protected
1	20 (MINI)	Trailer Tow Running Lamp Relay, Trailer Tow Backup Lamp Relay
2	10 (MINI)	Airbag Diagnostic Monitor
3	-	NOT USED
4	-	NOT USED
5	20 (MINI)	Horn Relay
6	15 (MINI)	Radio, Premium Sound Amplifier, CD Changer
7	15 (MINI)	Main Light Switch, Park Lamp Relay
8	30 (MINI)	Main Light Switch, Headlamp Relay, Multi-function Switch
9	15 (MINI)	Daytime Running Lamps (DRL) Module, Fog Lamp Relay
10	25 (MINI)	Auxiliary Power Socket
11	-	NOT USED
12	-	NOT USED
13	-	NOT USED
14	60 (MAXI)	4 Wheel Anti-Lock Brake System (4WABS) Module
14	20 (MAXI)	Ignition Switch (W/RABS Only)
15	-	NOT USED
16	40 (MAXI)	Trailer Tow Battery Charge Relay, Engine Fuse Module (Fuse 2)
17	30 (MAXI)	Shift on the Fly Relay, Transfer Case Shift Relay
18	30 (MAXI)	Power Seat Control Switch
19	20 (MAXI)	Fuel Pump Relay
20	50 (MAXI)	Ignition Switch (B4 & B5)
21	50 (MAXI)	Ignition Switch (B1 & B3)
22	50 (MAXI)	Junction Box Fuse/Relay Panel Battery Feed
23	40 (MAXI)	Blower Relay
24	30 (MAXI)	PCM Power Relay, Engine Fuse Module (Fuse 1)
25	30 (MAXI)	Junction Box Fuse/Relay Panel, Acc Delay Relay
26	20 (MAXI)	All Unlock Relay, All Lock Relay, Driver Unlock Relay, Left Power Door Lock Switch, Right Power Door Lock Switch
27	-	NOT USED
28	30 (MAXI)	Trailer Electronic Brake Controller
29	-	NOT USED



BUY IT NOW!

[Click Here To Order](#)



FUSE POSITION	AMPS	COLOR CODE
1	20	YELLOW
2	10	GREEN
3	30	ORANGE
4	30	RED
5	20	BLUE



11-5 FUSE PANEL/CIRCUIT PROTECTION

1997 F150/250

JUNCTION BOX FUSE/RELAY PANEL

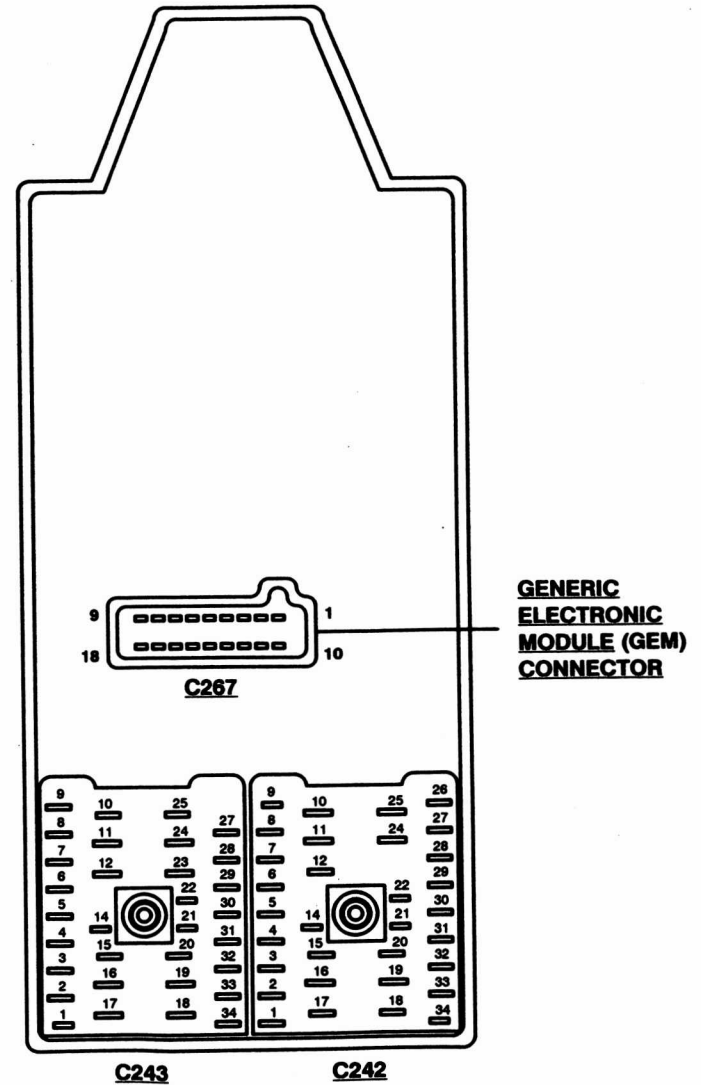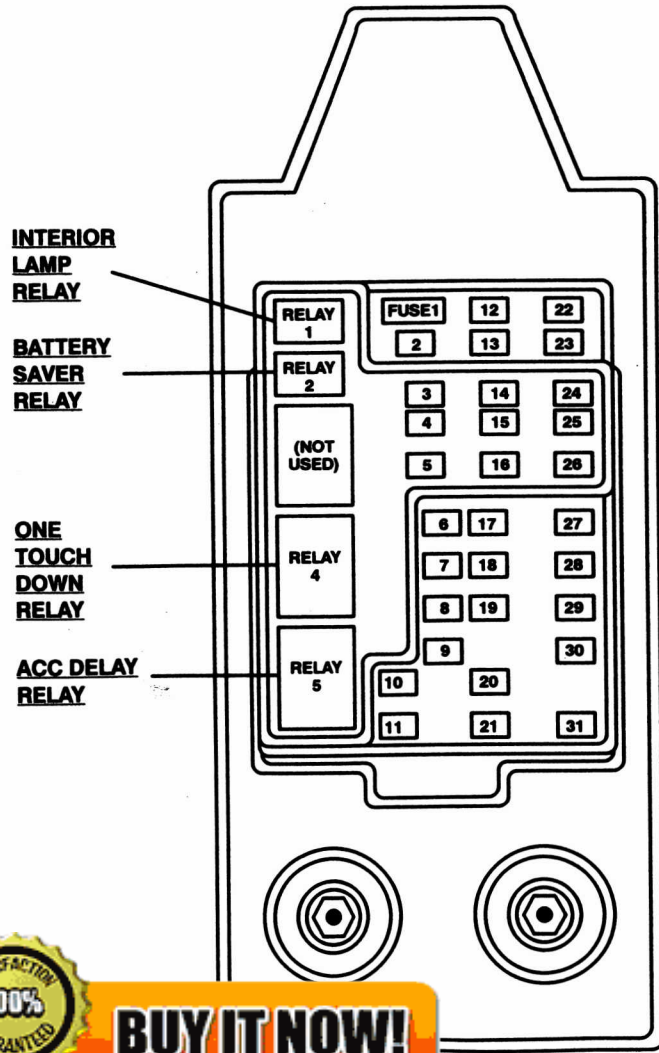

BOTTOM VIEW

100% SATISFACTION GUARANTEED

BUY IT NOW!

[Click Here To Order](#)

FUSE PANEL/CIRCUIT PROTECTION 11-6

1997 F-150/250

Fuse Position	Amps	Circuits Protected
1	15	Flasher Relay
2	5	Instrument Cluster
3	25	Cigar Lighter
4	5	Park Lamp Relay, Headlamp Relay, Autolamp Module, Remote Anti-Theft Personality (RAP) Module, Power Mirror Switch
5	15	*Transmission Range (TR) Sensor (A/T), **Digital Transmission Range (DTR) Sensor (A/T), Backup Lamp Switch (M/T), Daytime Running Lamps (DRL) Module, Speed Control Servo/Amplifier Assembly, Heater-A/C Control Assembly, Blend Door Actuator
6	5	Shift Lock Actuator, Generic Electronic Module (GEM), Rear Air Suspension (RAS) Module
7	-	NOT USED
8	5	Radio, Main Light Switch, Remote Anti-Theft Personality (RAP) Module
9	-	NOT USED
10	-	NOT USED
11	30	Washer Pump Relay, Wiper Run/Park Relay, Wiper Hi/LO Relay, Windshield Wiper Motor
12	5	Data Link Connector (DLC)
13	15	Rear Anti-Lock Brake System (RABS) Module, Brake On/Off (BOO) Switch, Brake Pressure Switch
14	15	Battery Saver Relay, Interior Lamp Relay
15	5	Generic Electronic Module (GEM)
16	20	Instrument Cluster (W/O DRL), Daytime Running Lamps (DRL) Module, Hi-Beam Headlamps (Power supplied through Multi-Function Switch)
17	-	NOT USED
18	5	Park Lamp Relay, Trailer Electronic Brake Controller, Main Light Switch, Trailer Tow Run Relay, Front Park/Turn Lamps, License Lamps, Stop/Park/Turn Lamps, Tail/Side Marker Lamps (Power supplied through Main Light Switch)
19	10	Instrument Cluster, Air Bag Diagnostic Monitor
20	5	Powertrain Control Module (PCM), Generic Electronic Module (GEM)/Central Timer Module (CTM)
21	15	Clutch Pedal Position (CPP) Switch (W/O RAP), Starter Interrupt Relay (W/RAP)
22	10	Air Bag Diagnostic Monitor, Passive De-Activation (PAD) Module
23	10	Trailer Tow Battery Charge Relay, 4X4 Hub Solenoid, 4X2 Hub Solenoid, Flasher Relay, Shift on the Fly Relay
24	10	Blower Relay
25	5	4 Wheel Anti-Lock Brake System (4WABS) Module, 4WABS Relay
26	10	Daytime Running Lamps (DRL) Module, Right Headlamp
27	-	NOT USED
28	-	NOT USED
29	-	NOT USED
30	-	NOT USED
31	-	NOT USED
32	-	NOT USED
33	-	NOT USED
34	-	NOT USED
35	-	NOT USED
36	-	NOT USED
37	-	NOT USED
38	-	NOT USED
39	-	NOT USED
40	-	NOT USED
41	-	NOT USED
42	-	NOT USED
43	-	NOT USED
44	-	NOT USED
45	-	NOT USED
46	-	NOT USED
47	-	NOT USED
48	-	NOT USED
49	-	NOT USED
50	-	NOT USED
51	-	NOT USED
52	-	NOT USED
53	-	NOT USED
54	-	NOT USED
55	-	NOT USED
56	-	NOT USED
57	-	NOT USED
58	-	NOT USED
59	-	NOT USED
60	-	NOT USED
61	-	NOT USED
62	-	NOT USED
63	-	NOT USED
64	-	NOT USED
65	-	NOT USED
66	-	NOT USED
67	-	NOT USED
68	-	NOT USED
69	-	NOT USED
70	-	NOT USED
71	-	NOT USED
72	-	NOT USED
73	-	NOT USED
74	-	NOT USED
75	-	NOT USED
76	-	NOT USED
77	-	NOT USED
78	-	NOT USED
79	-	NOT USED
80	-	NOT USED
81	-	NOT USED
82	-	NOT USED
83	-	NOT USED
84	-	NOT USED
85	-	NOT USED
86	-	NOT USED
87	-	NOT USED
88	-	NOT USED
89	-	NOT USED
90	-	NOT USED
91	-	NOT USED
92	-	NOT USED
93	-	NOT USED
94	-	NOT USED
95	-	NOT USED
96	-	NOT USED
97	-	NOT USED
98	-	NOT USED
99	-	NOT USED
100	-	NOT USED

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


PayPal, American Express, Discover, MasterCard, VISA

VEHICLES BUILT AFTER 6/24/96


11-7 FUSE PANEL/CIRCUIT PROTECTION

1997 F150/250

Primary Battery Fuses

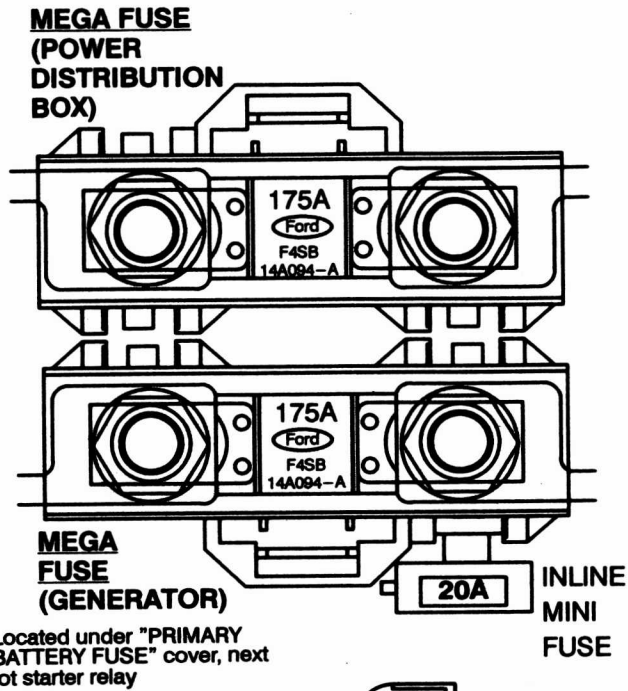

Engine Mini-Fuse Block

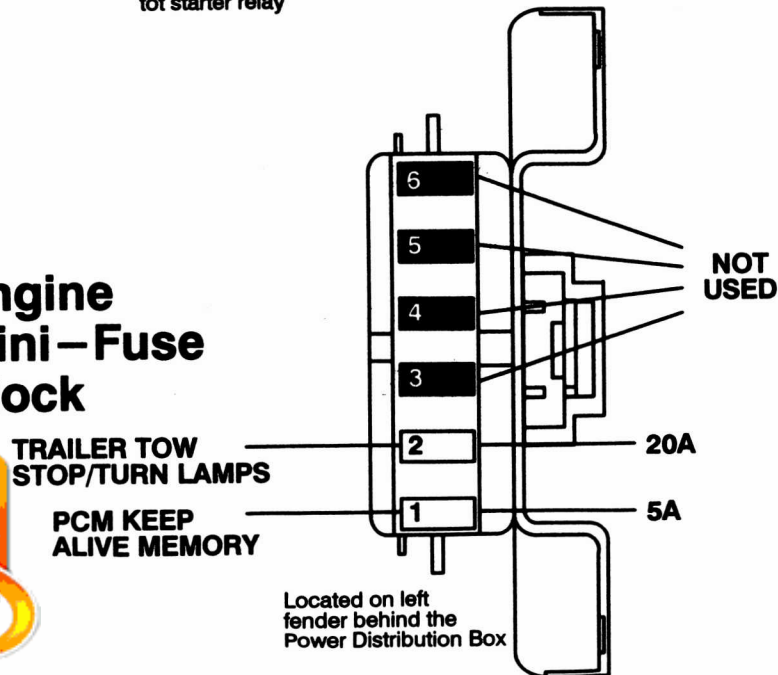

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Cards Discover Novus MasterCard VISA



BUY IT NOW!
Click Here To Order 



CELL 12 CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C238	62-10
C250	13-18



BUY IT NOW!
Click Here To Order 




POWER DISTRIBUTION 13-2

1997 F-150/250

POWER DISTRIBUTION BOX

151-3 C10

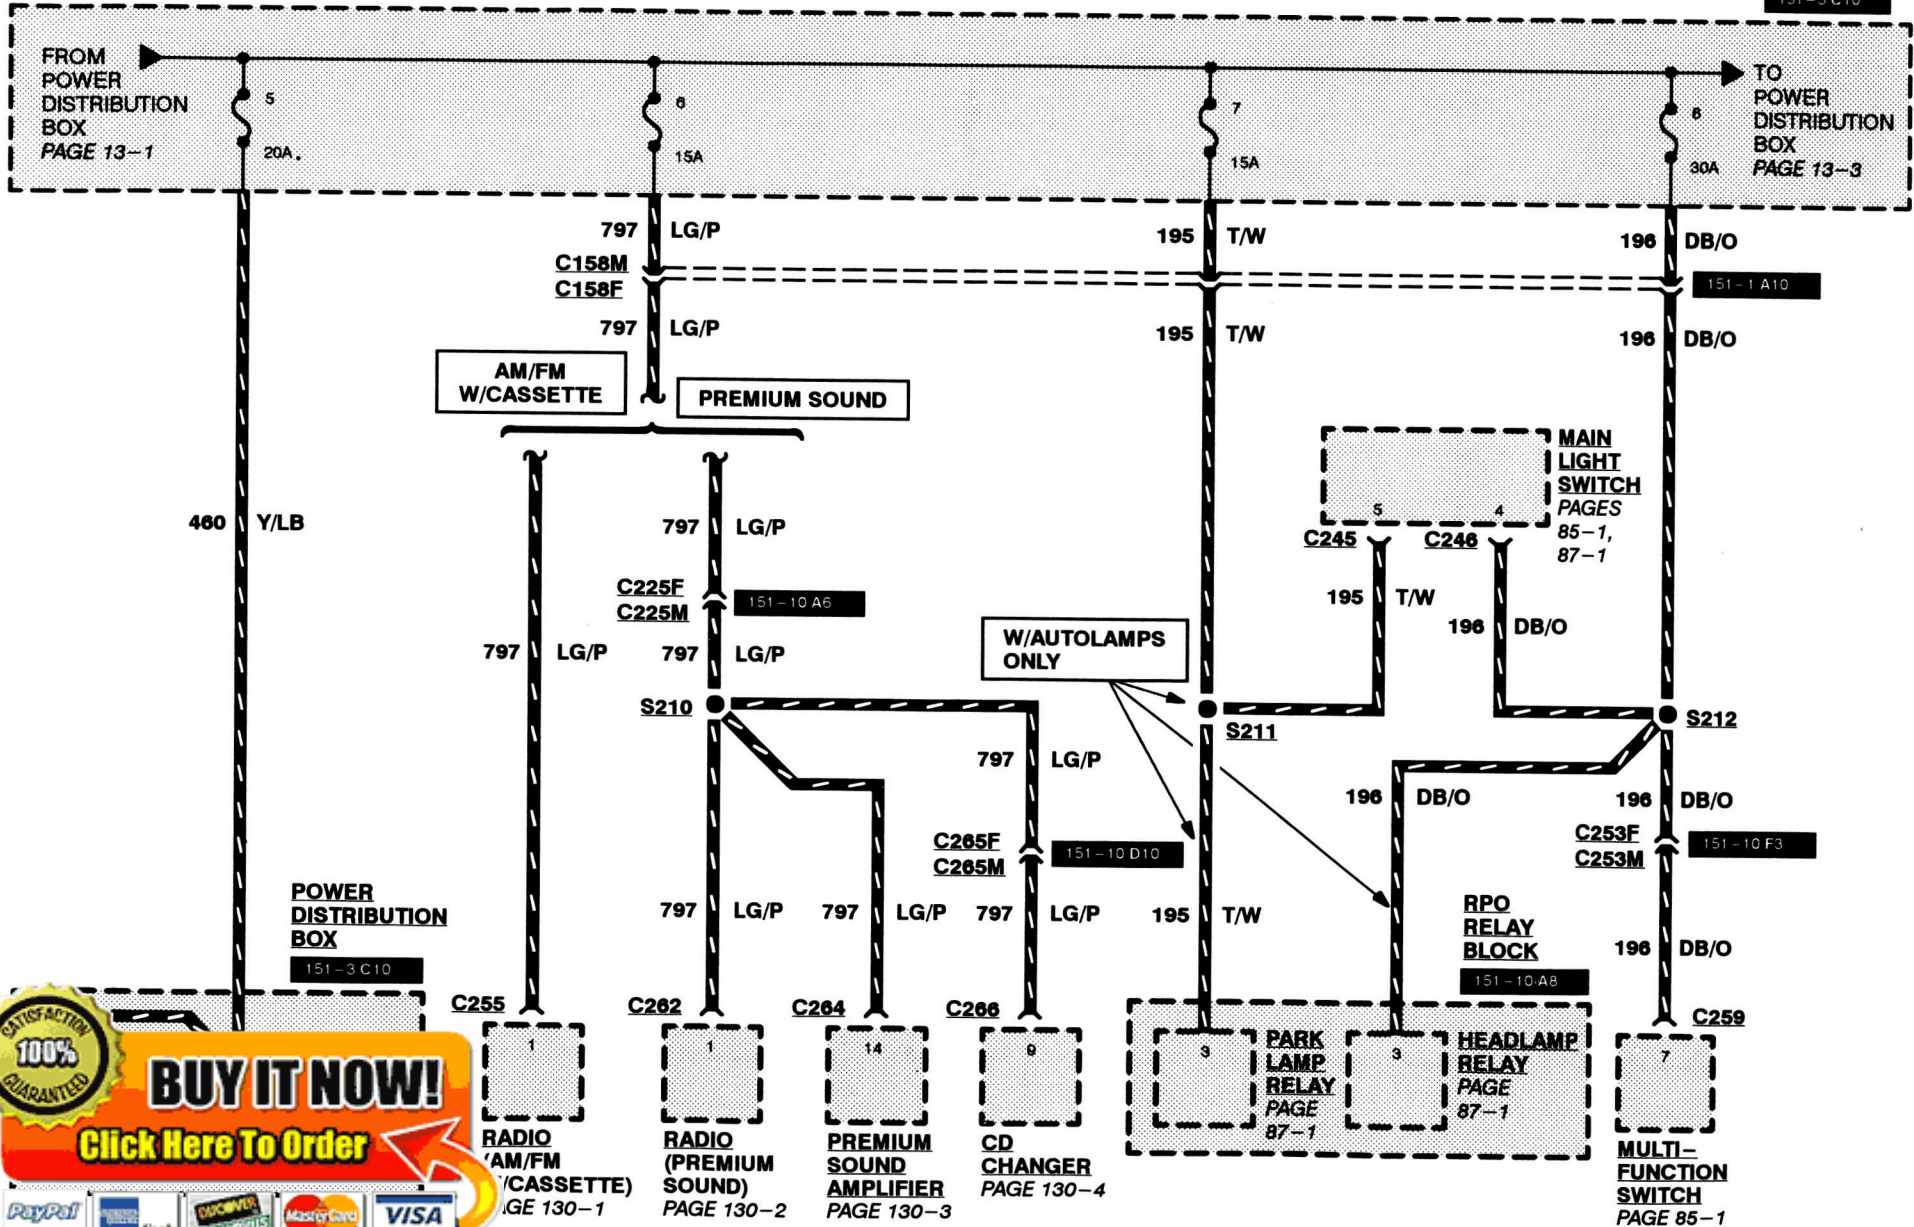

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal | American Express | Discover | MasterCard | VISA

RADIO (AM/FM W/CASSETTE)
PAGE 130-1

RADIO (PREMIUM SOUND)
PAGE 130-2

PREMIUM SOUND AMPLIFIER
PAGE 130-3

CD CHANGER
PAGE 130-4

PARK LAMP RELAY
PAGE 87-1

HEADLAMP RELAY
PAGE 87-1


MULTI-FUNCTION SWITCH
PAGE 85-1

13-3 POWER DISTRIBUTION

1997 F-150/250

POWER DISTRIBUTION BOX

151-3 C10

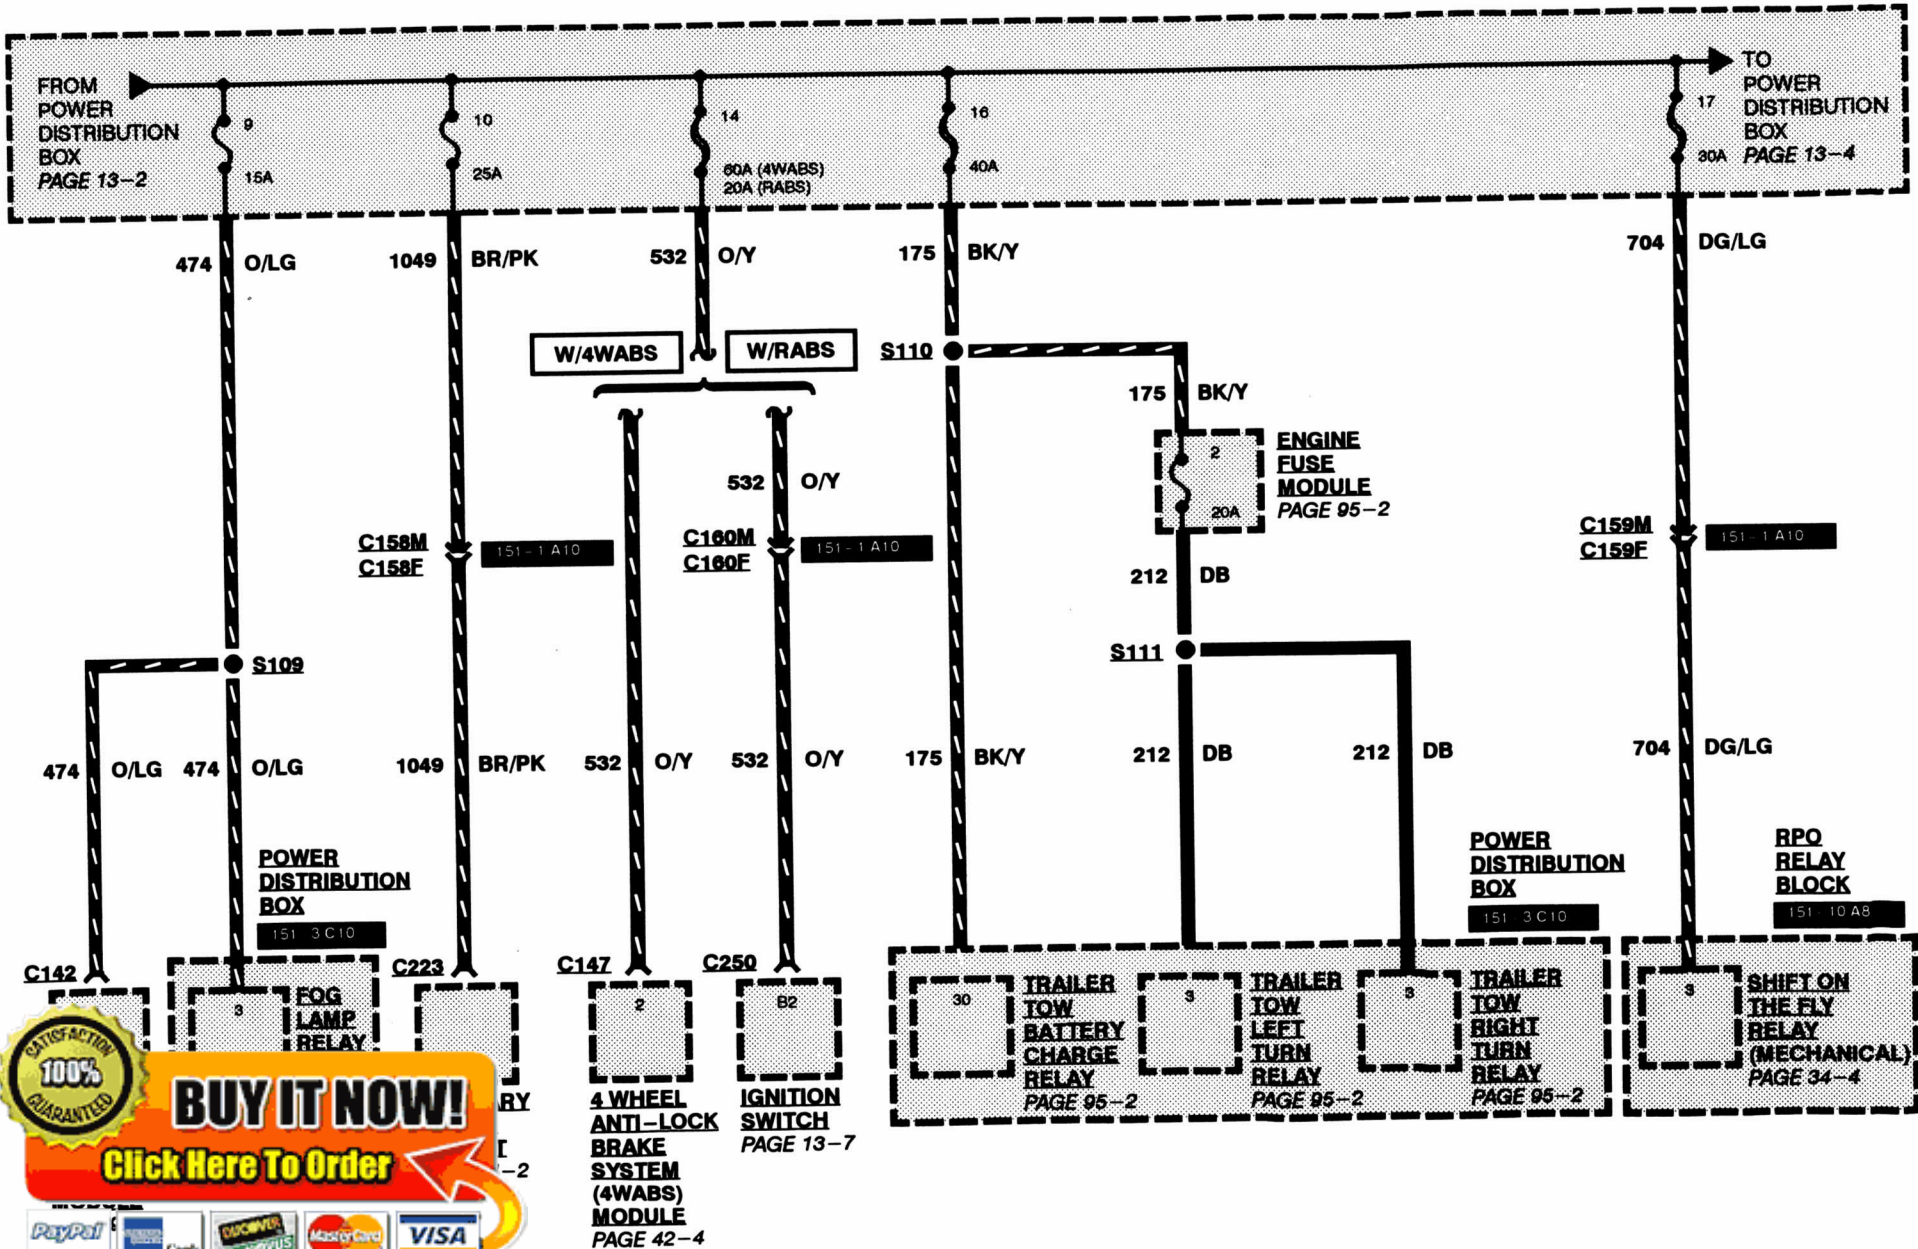

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


PayPal American Express Cards Discover Novus MasterCard VISA

POWER DISTRIBUTION 13-4

1997 F-150/250

POWER DISTRIBUTION BOX

151-3 C10

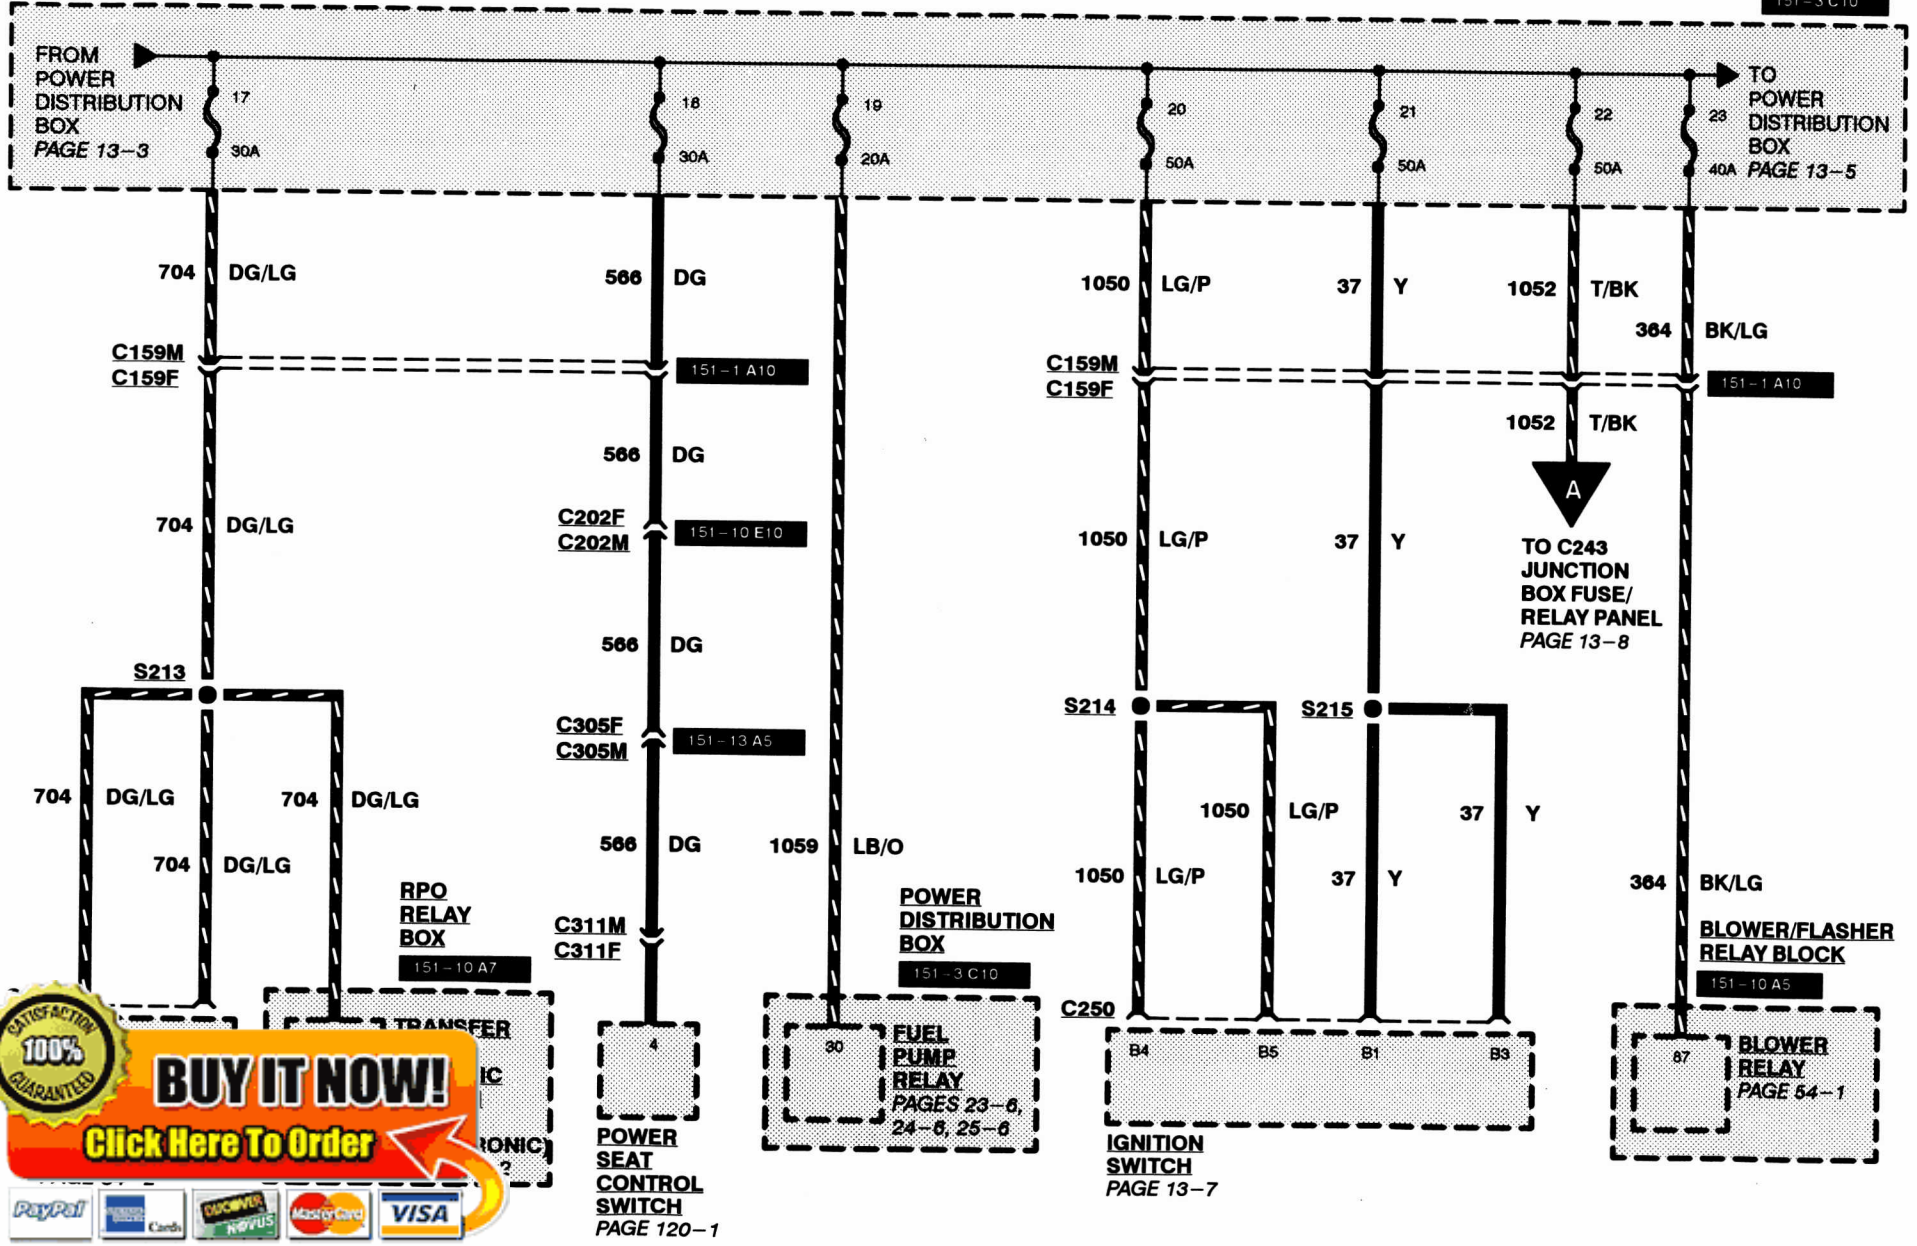


BUY IT NOW!

[Click Here To Order](#)



13-5 POWER DISTRIBUTION

1997 F-150/250

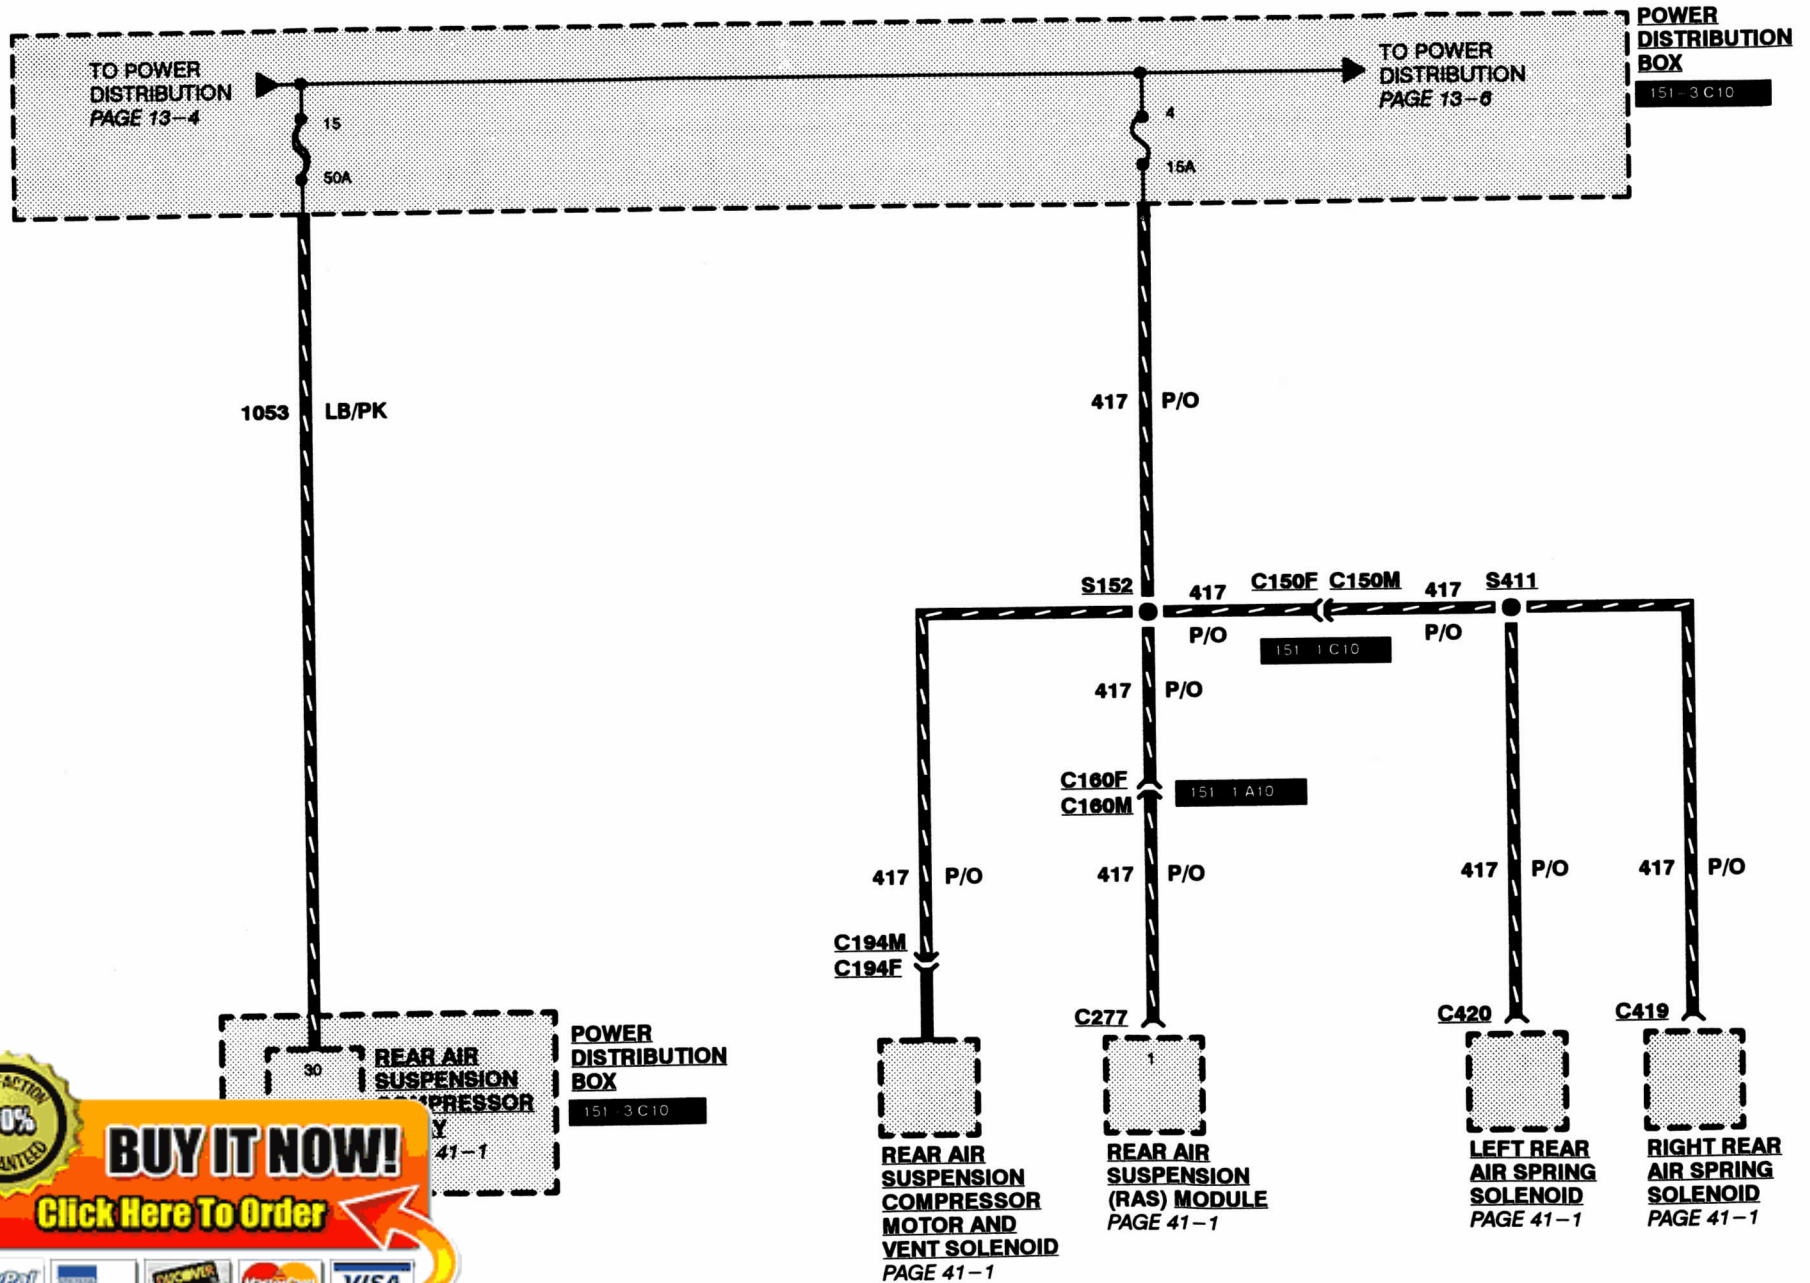

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal

Discover Cards

Discover NOWUS

MasterCard

VISA


POWER DISTRIBUTION 13-6

1997 F-150/250

* VEHICLES BUILT BEFORE 6-24-96
 ** VEHICLES BUILT AFTER 6-24-96

POWER DISTRIBUTION BOX

151-3 C10

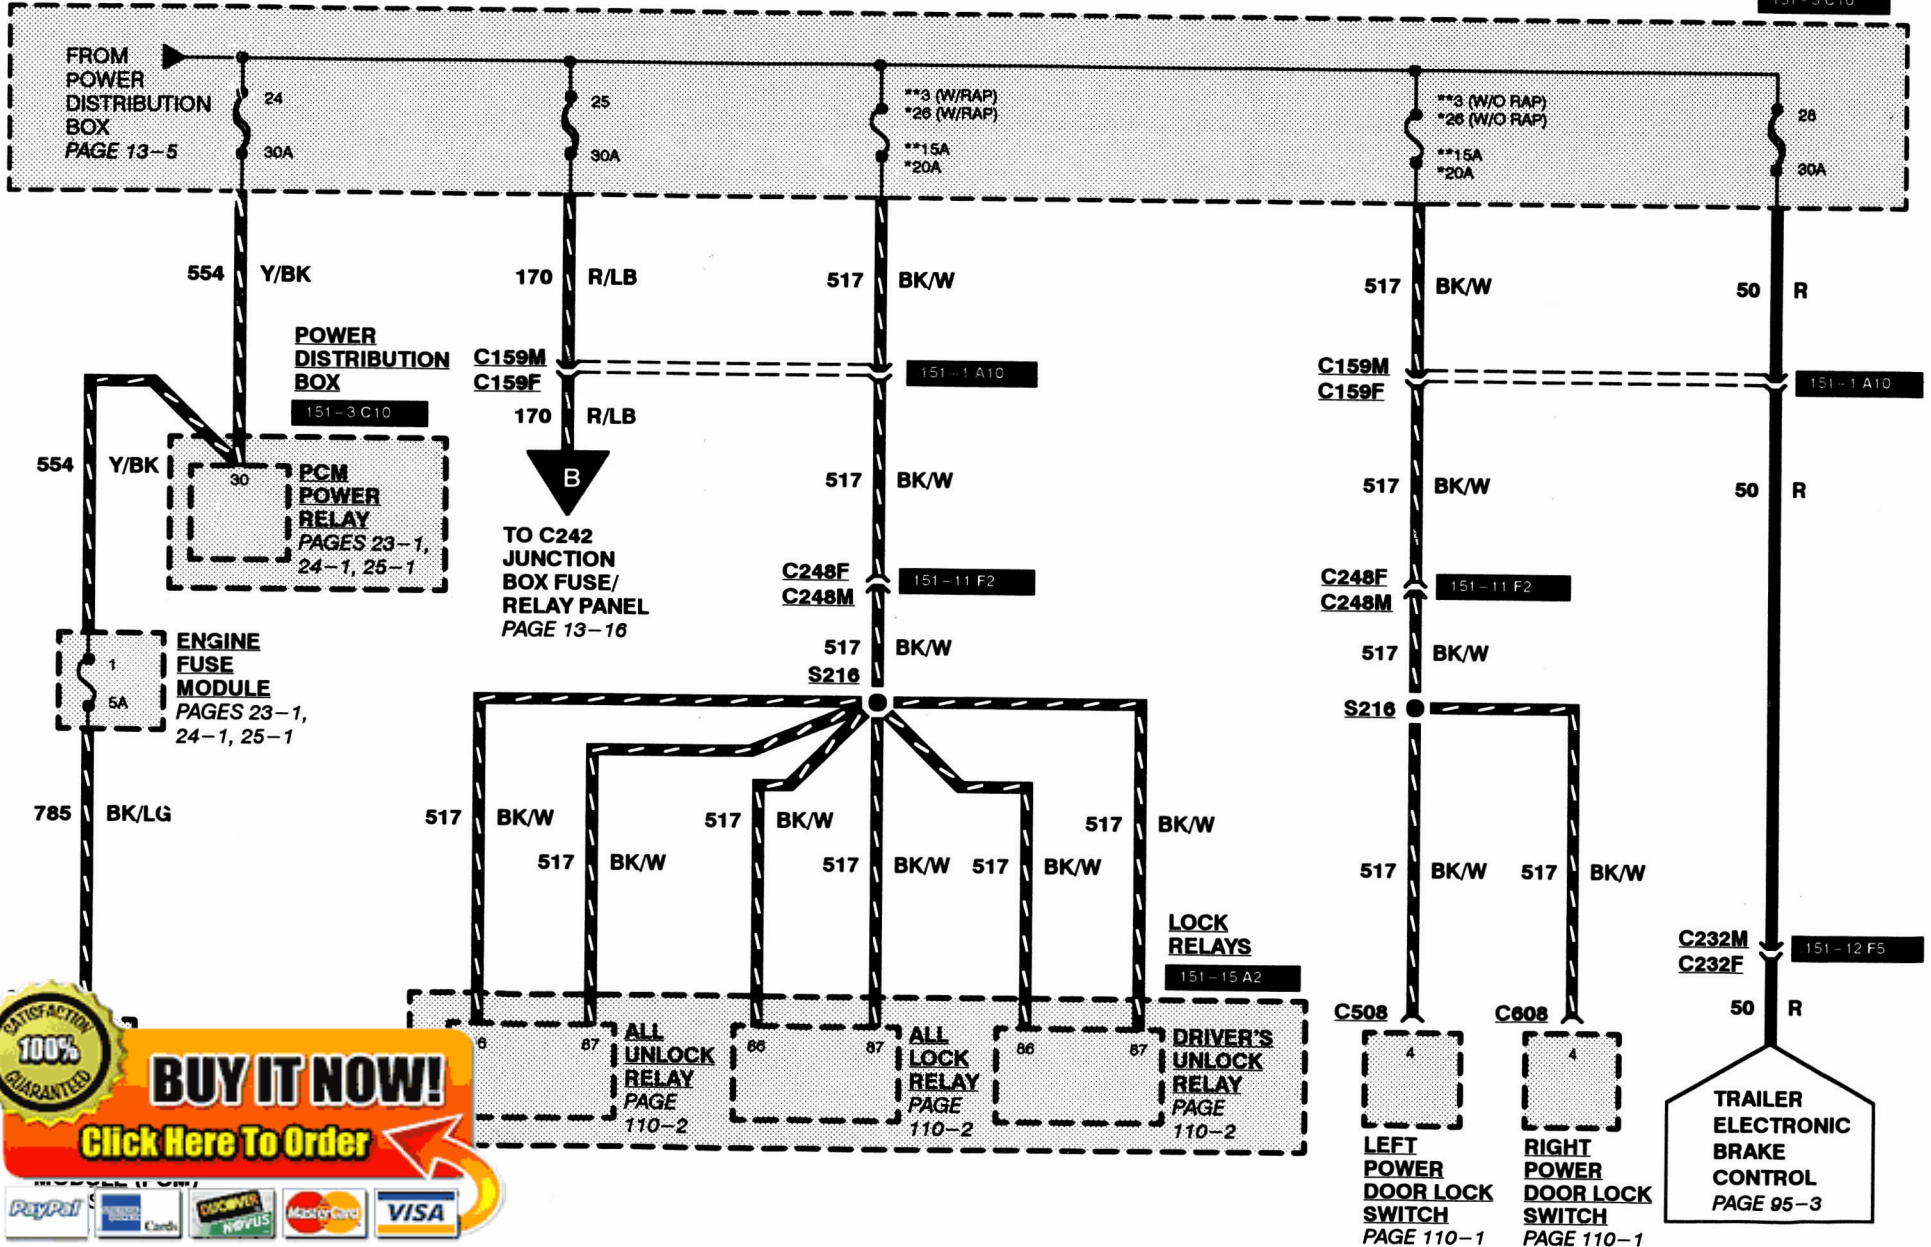

100% SATISFACTION GUARANTEED

BUY IT NOW!


[Click Here To Order](#)

PayPal, American Express, Discover, MasterCard, VISA

13-7 POWER DISTRIBUTION

1997 F-150/250

HOT AT ALL TIMES

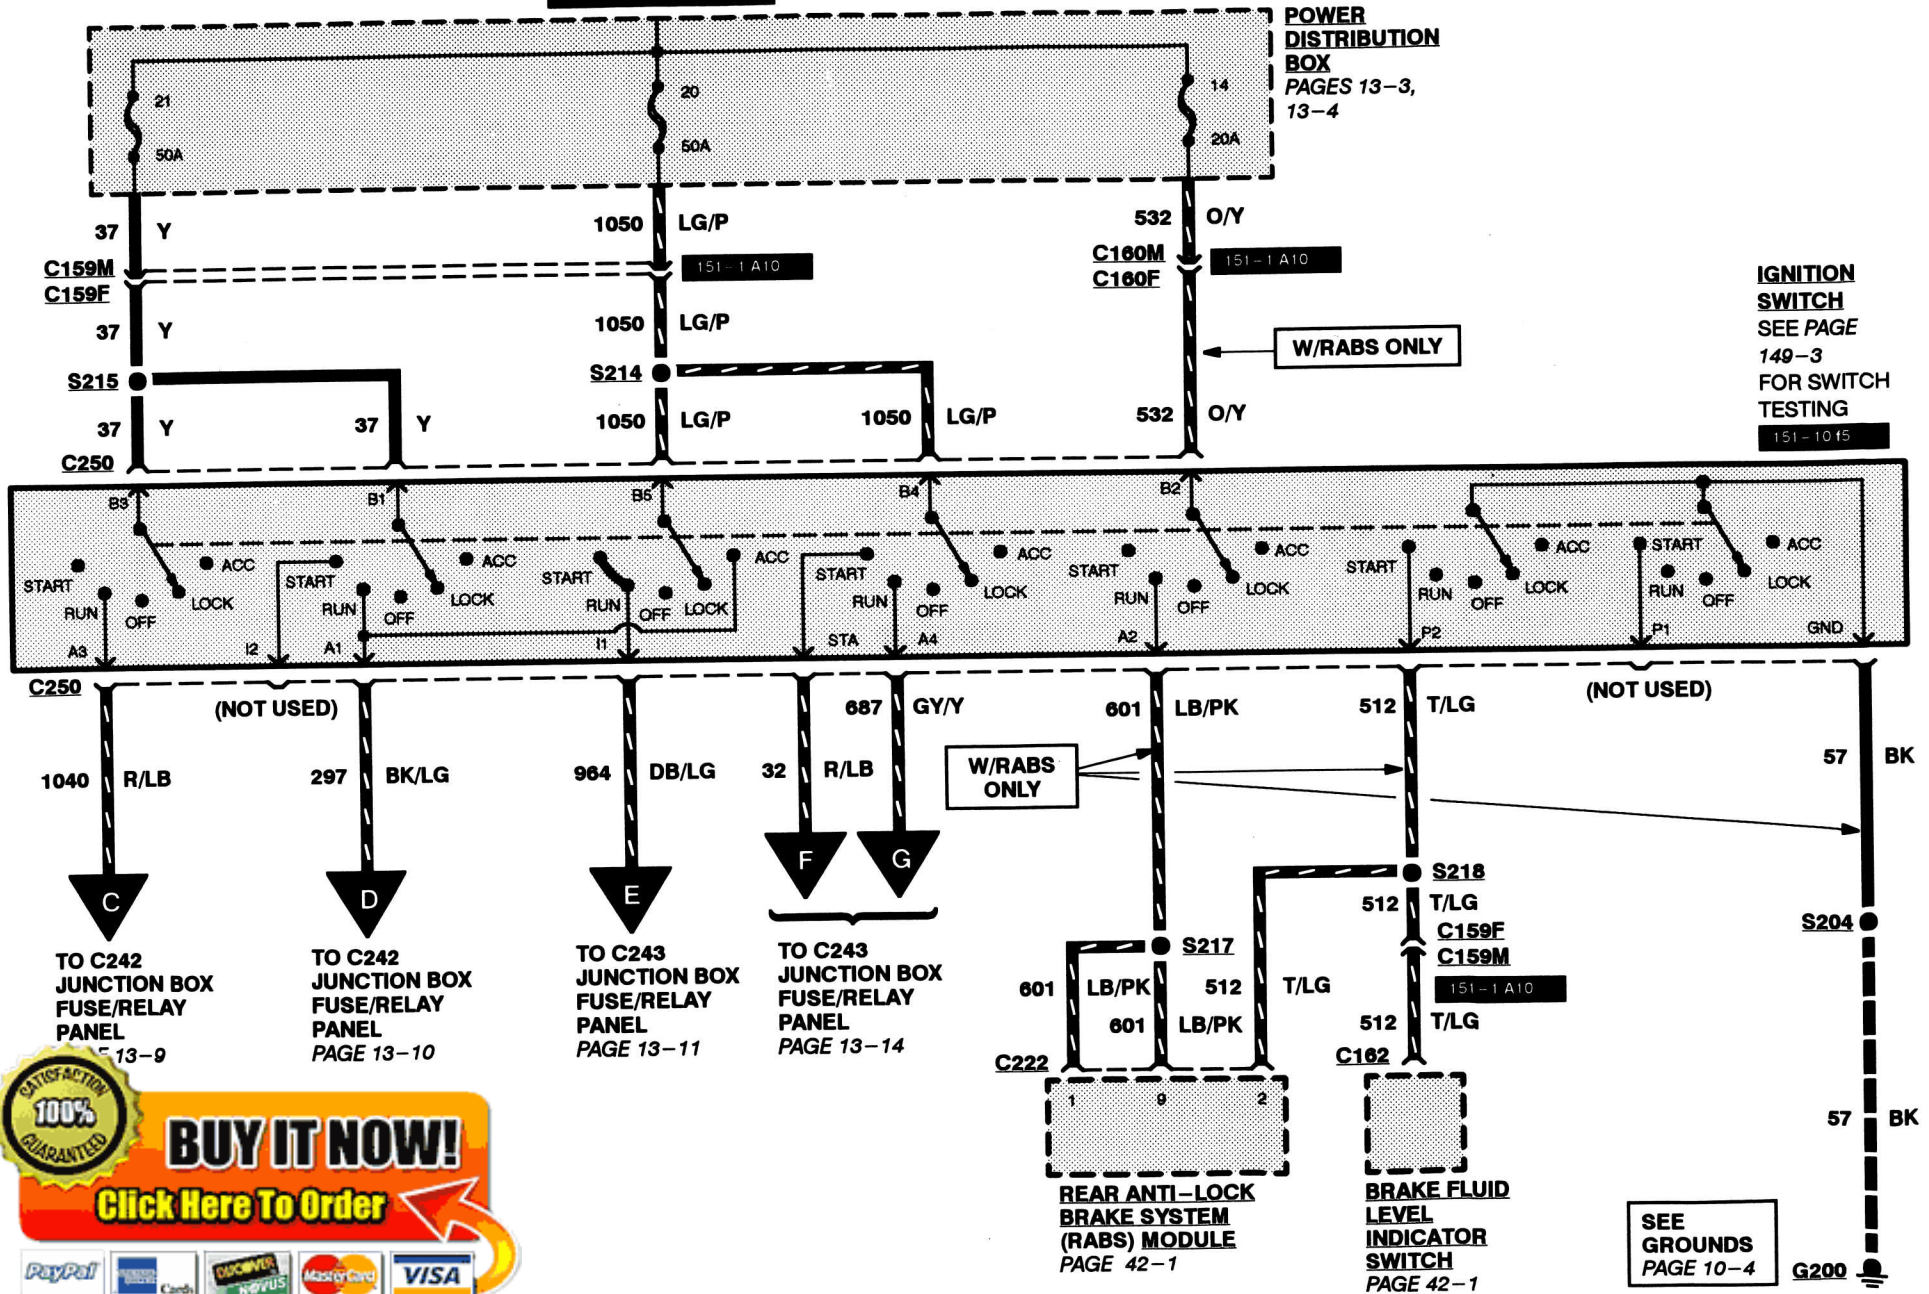

100% SATISFACTION GUARANTEED


BUY IT NOW!

Click Here To Order

POWER DISTRIBUTION 13-8

1997 F-150 250

FROM C159
PAGE 13-4

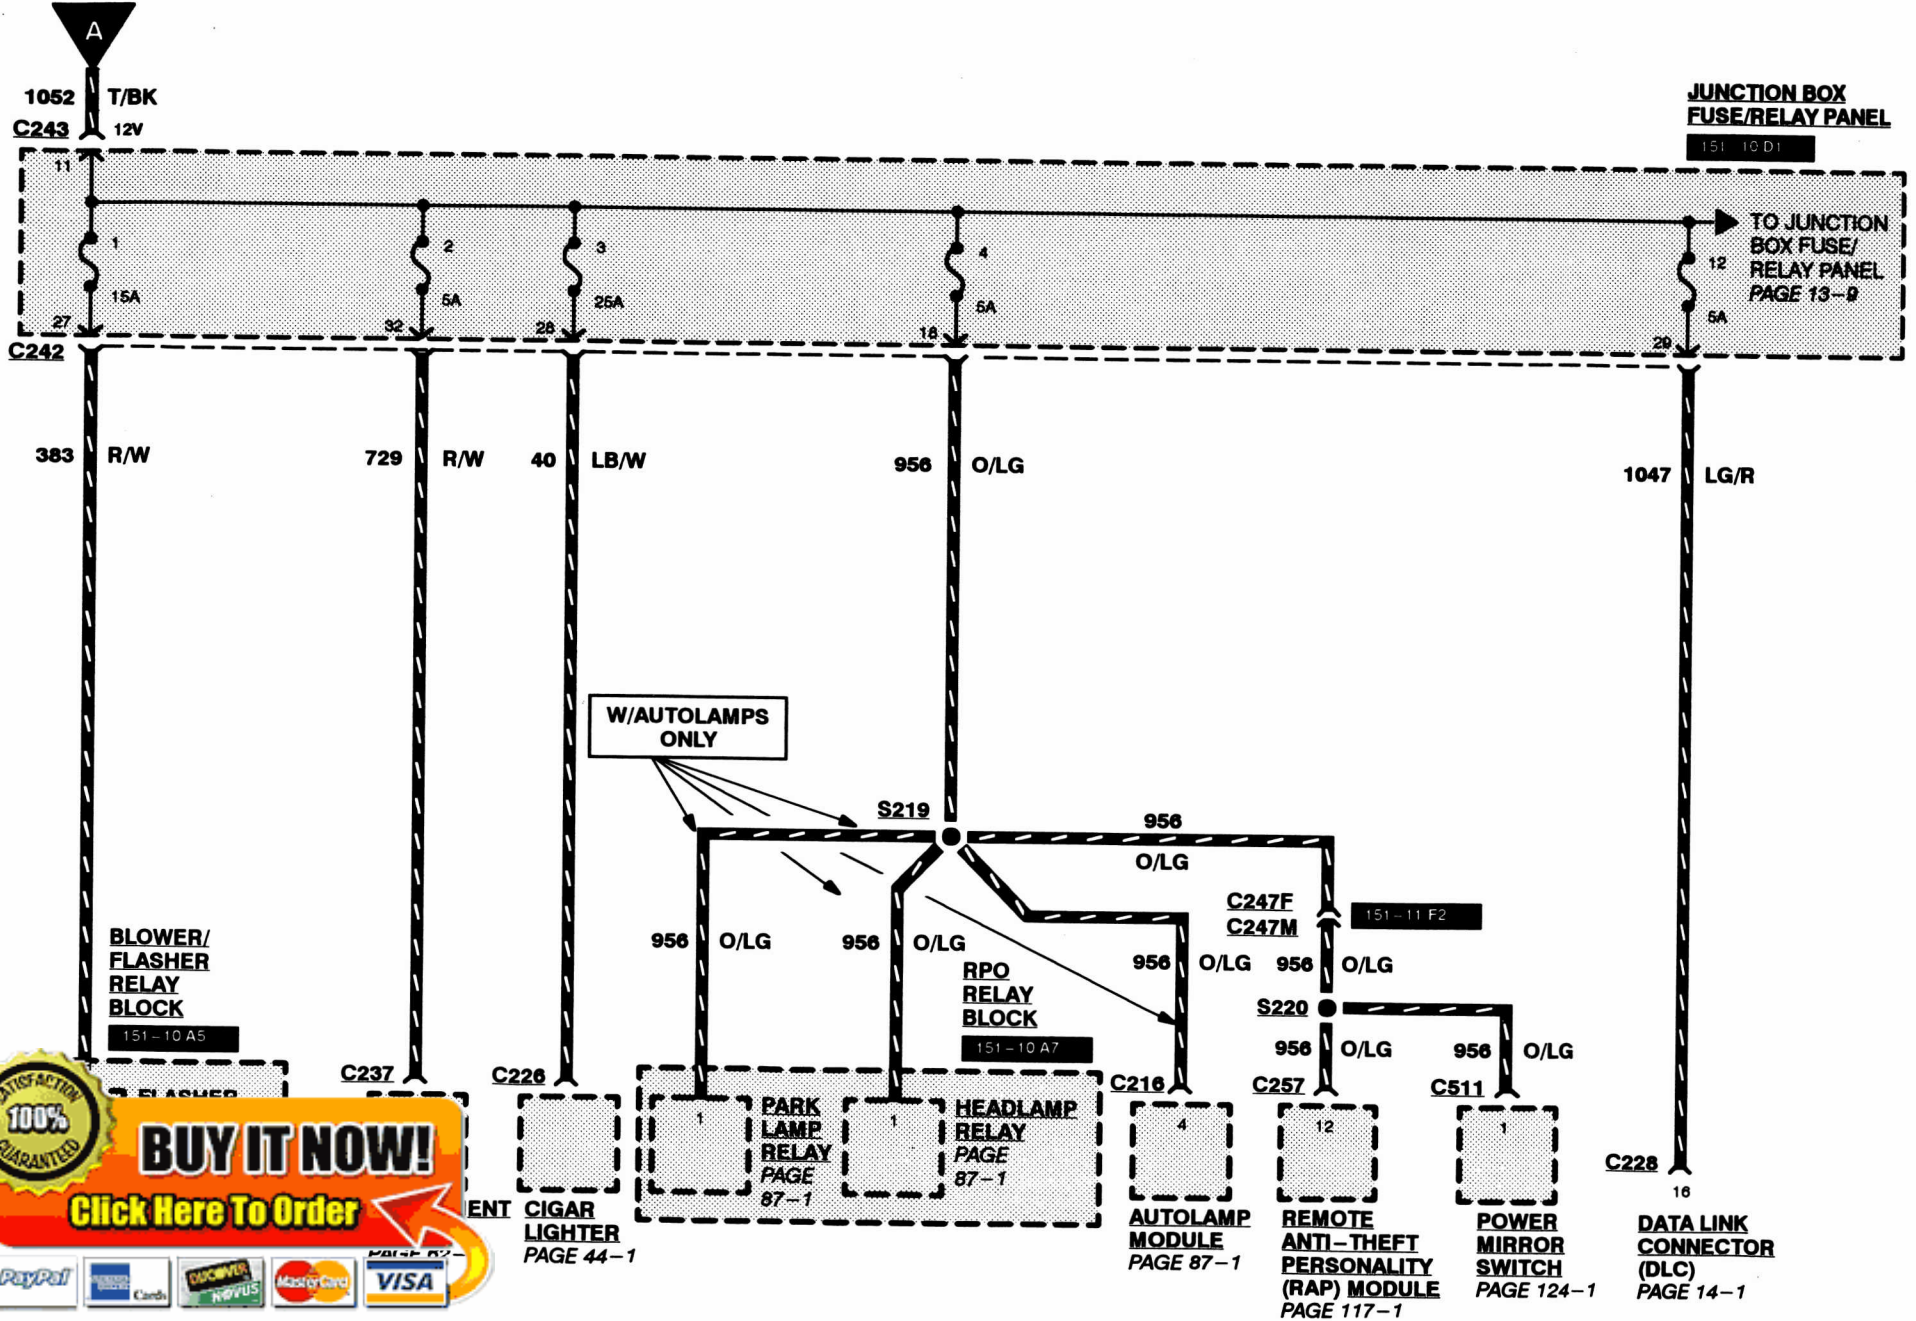

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

ENT CIGAR LIGHTER
PAGE 44-1

PARK LAMP RELAY
PAGE 87-1

HEADLAMP RELAY
PAGE 87-1

AUTOLAMP MODULE
PAGE 87-1


REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 117-1

POWER MIRROR SWITCH
PAGE 124-1

DATA LINK CONNECTOR (DLC)
PAGE 14-1

COMPONENT LOCATION VIEWS 151-12

1997 F-150 F-250

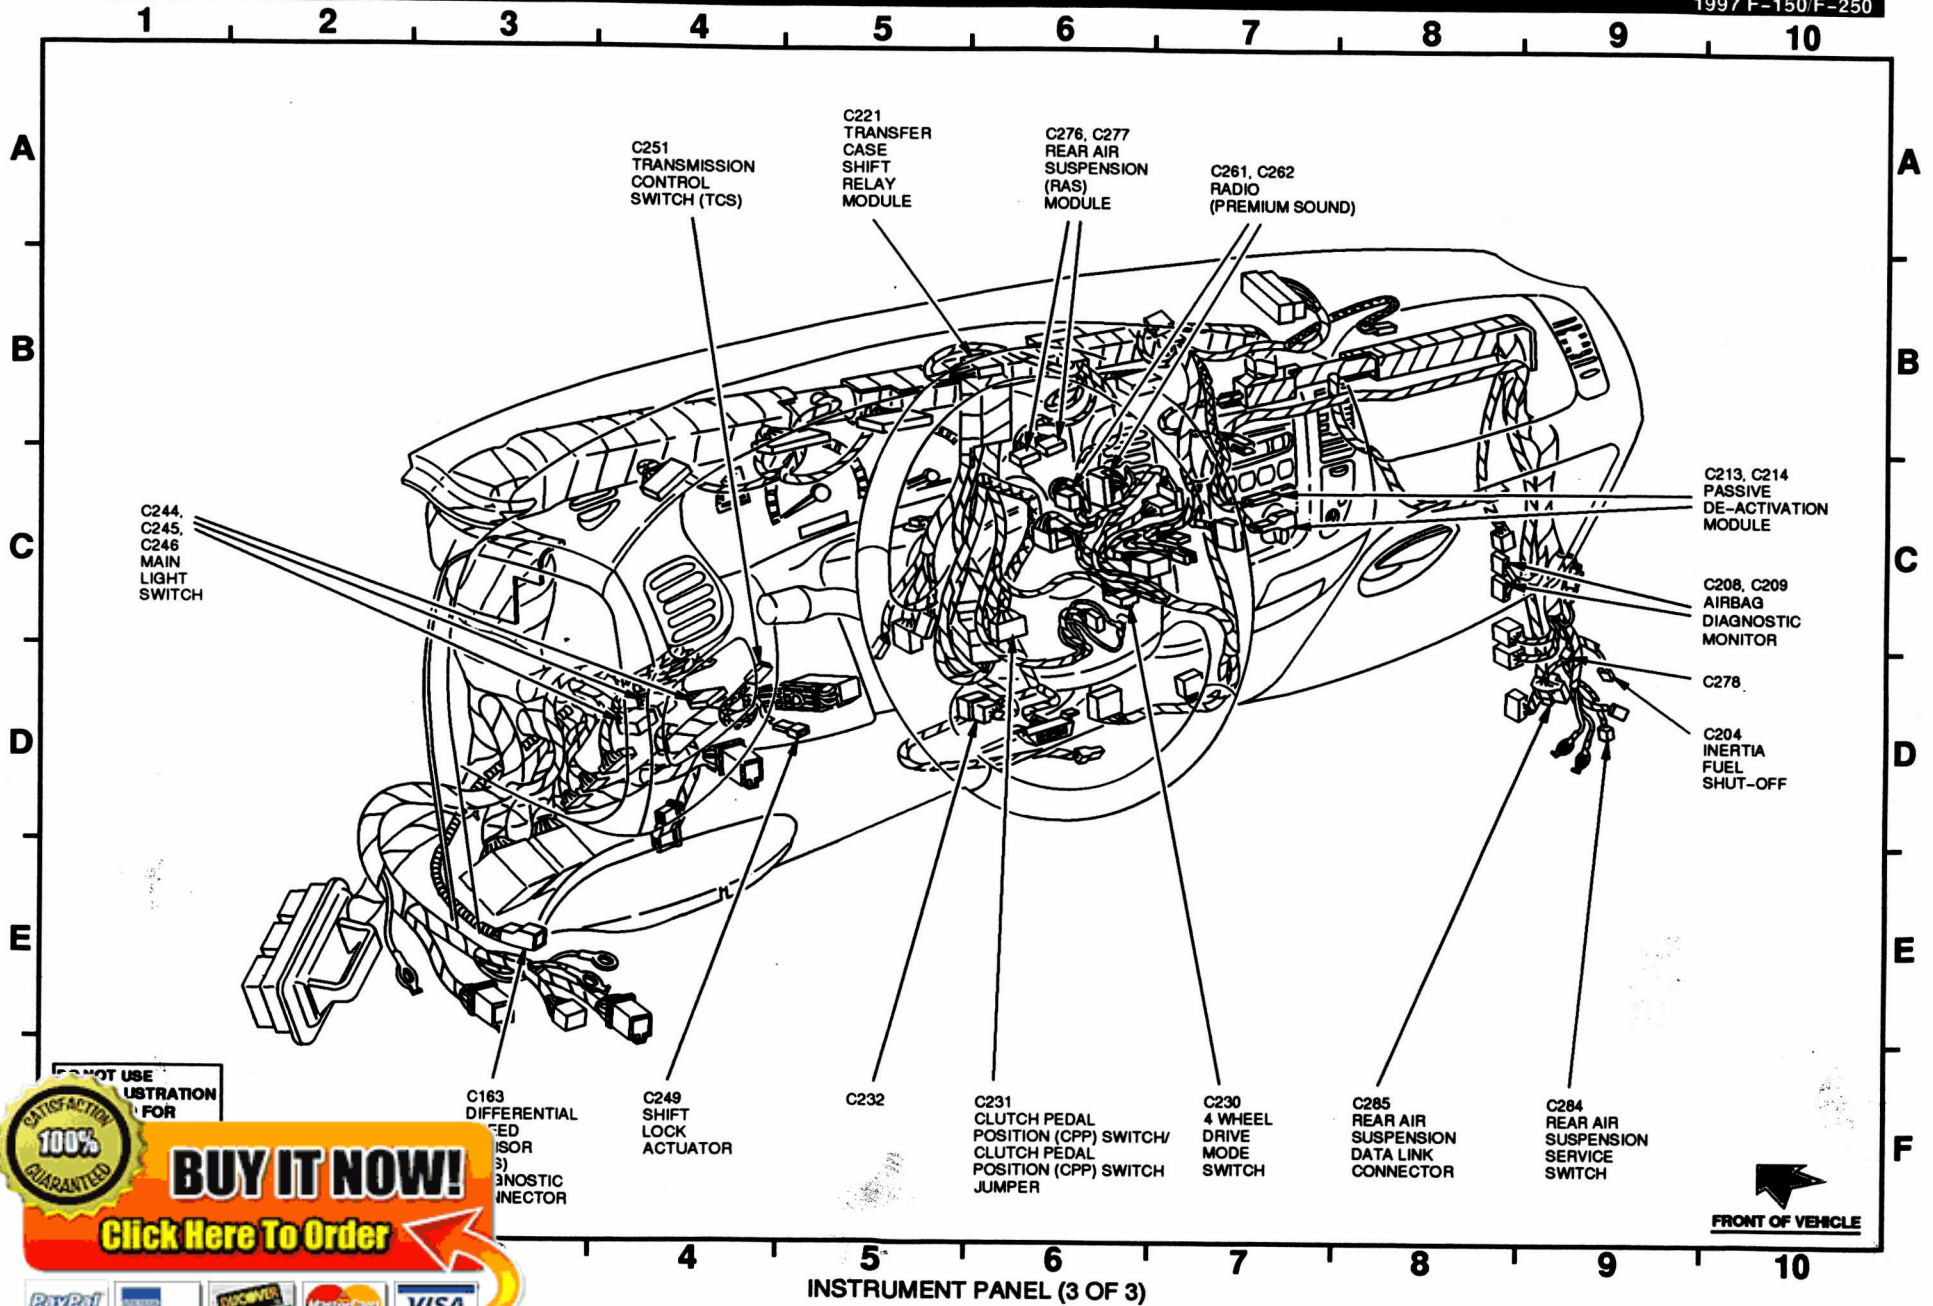

DO NOT USE THIS ILLUSTRATION FOR

100% SATISFACTION GUARANTEED

BUY IT NOW!


Click Here To Order

INSTRUMENT PANEL (3 OF 3)



151-13 COMPONENT LOCATION VIEWS

1997 F-150/F-250

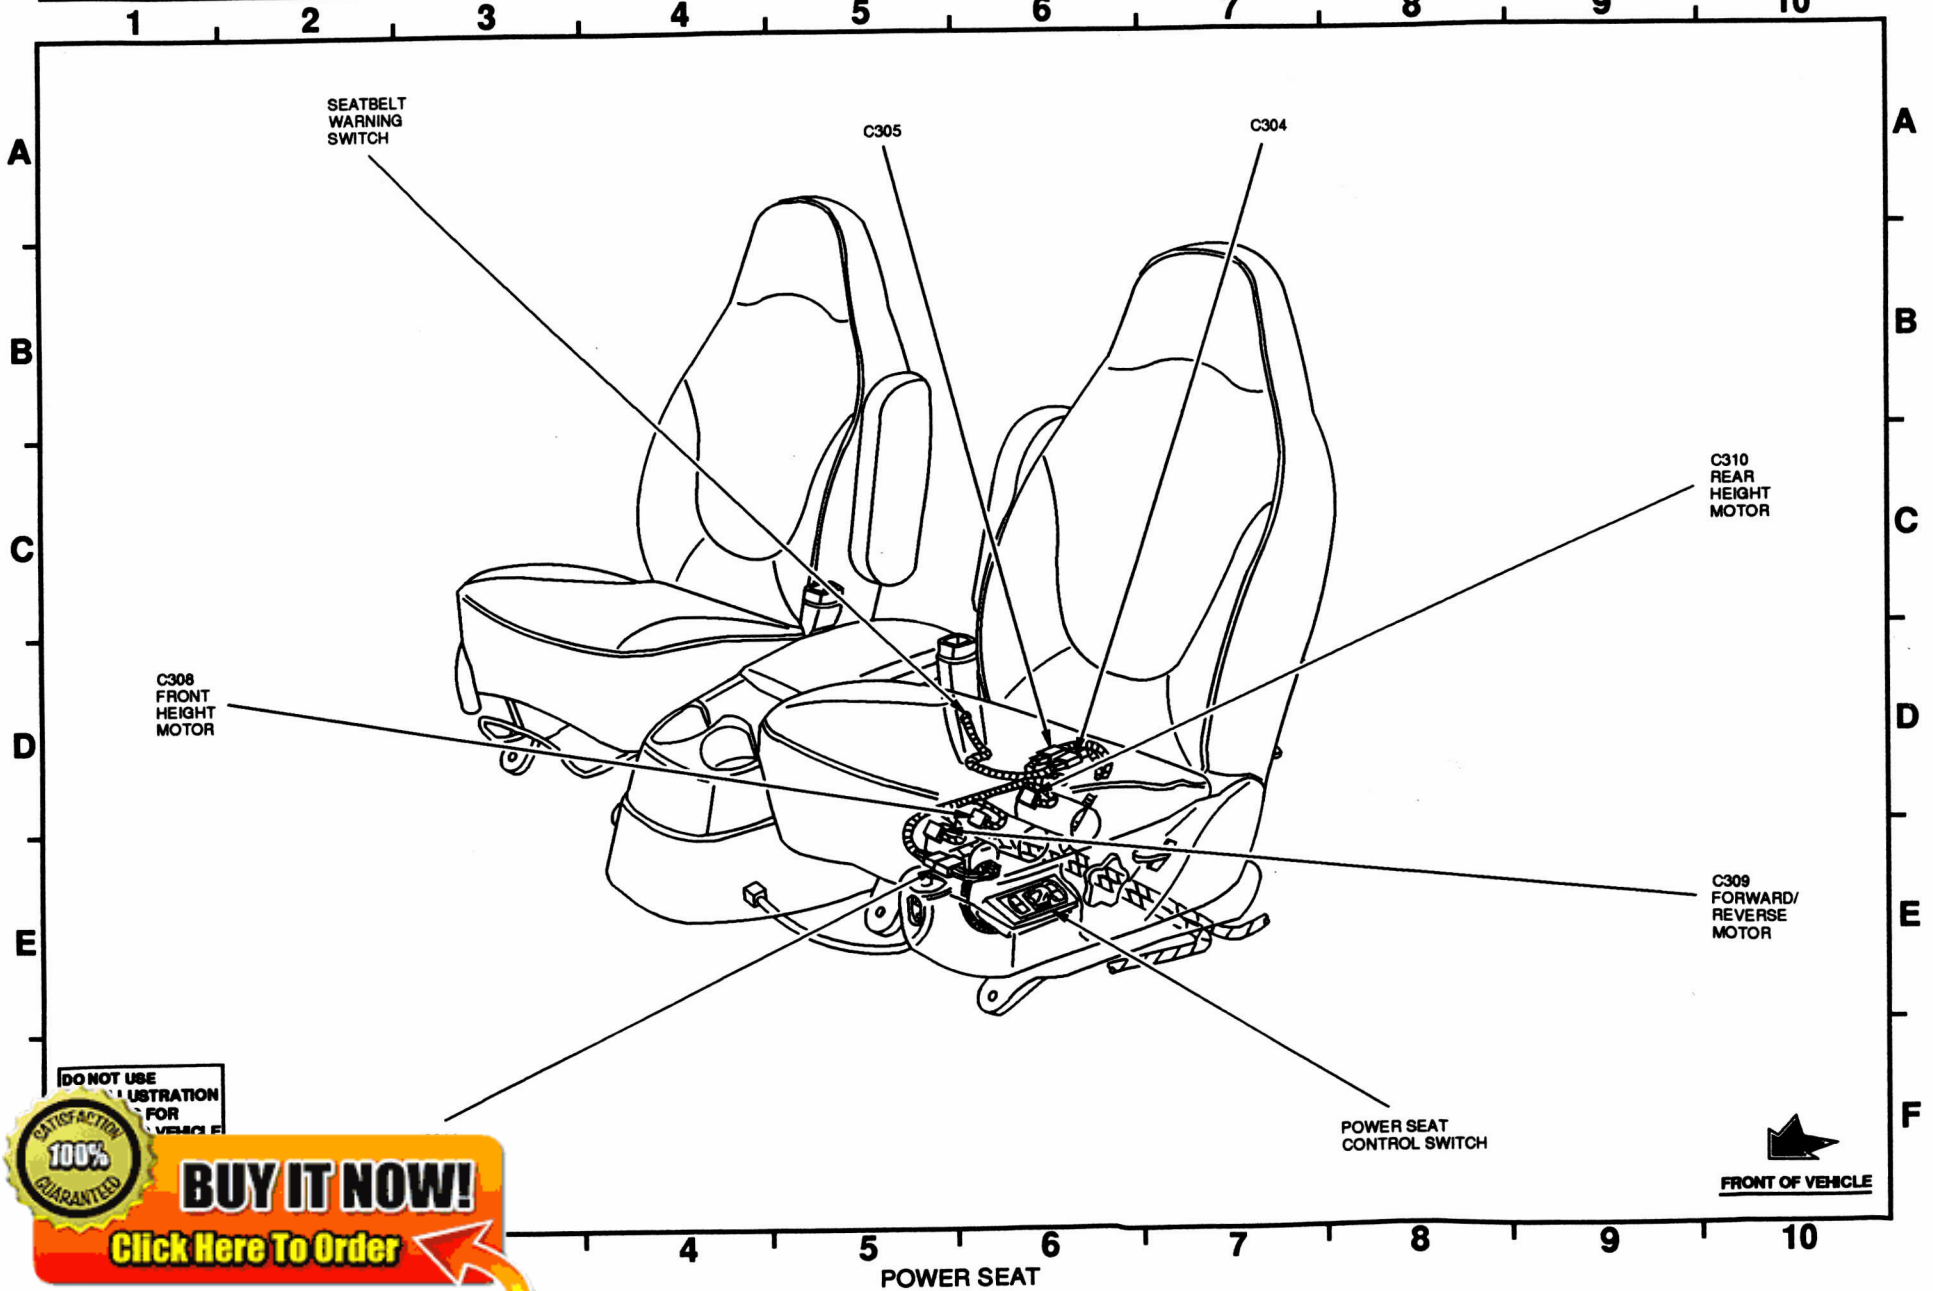

DO NOT USE
ILLUSTRATION
FOR
VEHICLE




BUY IT NOW!

Click Here To Order




COMPONENT LOCATION VIEWS 151-14

1997 F-150/F-250

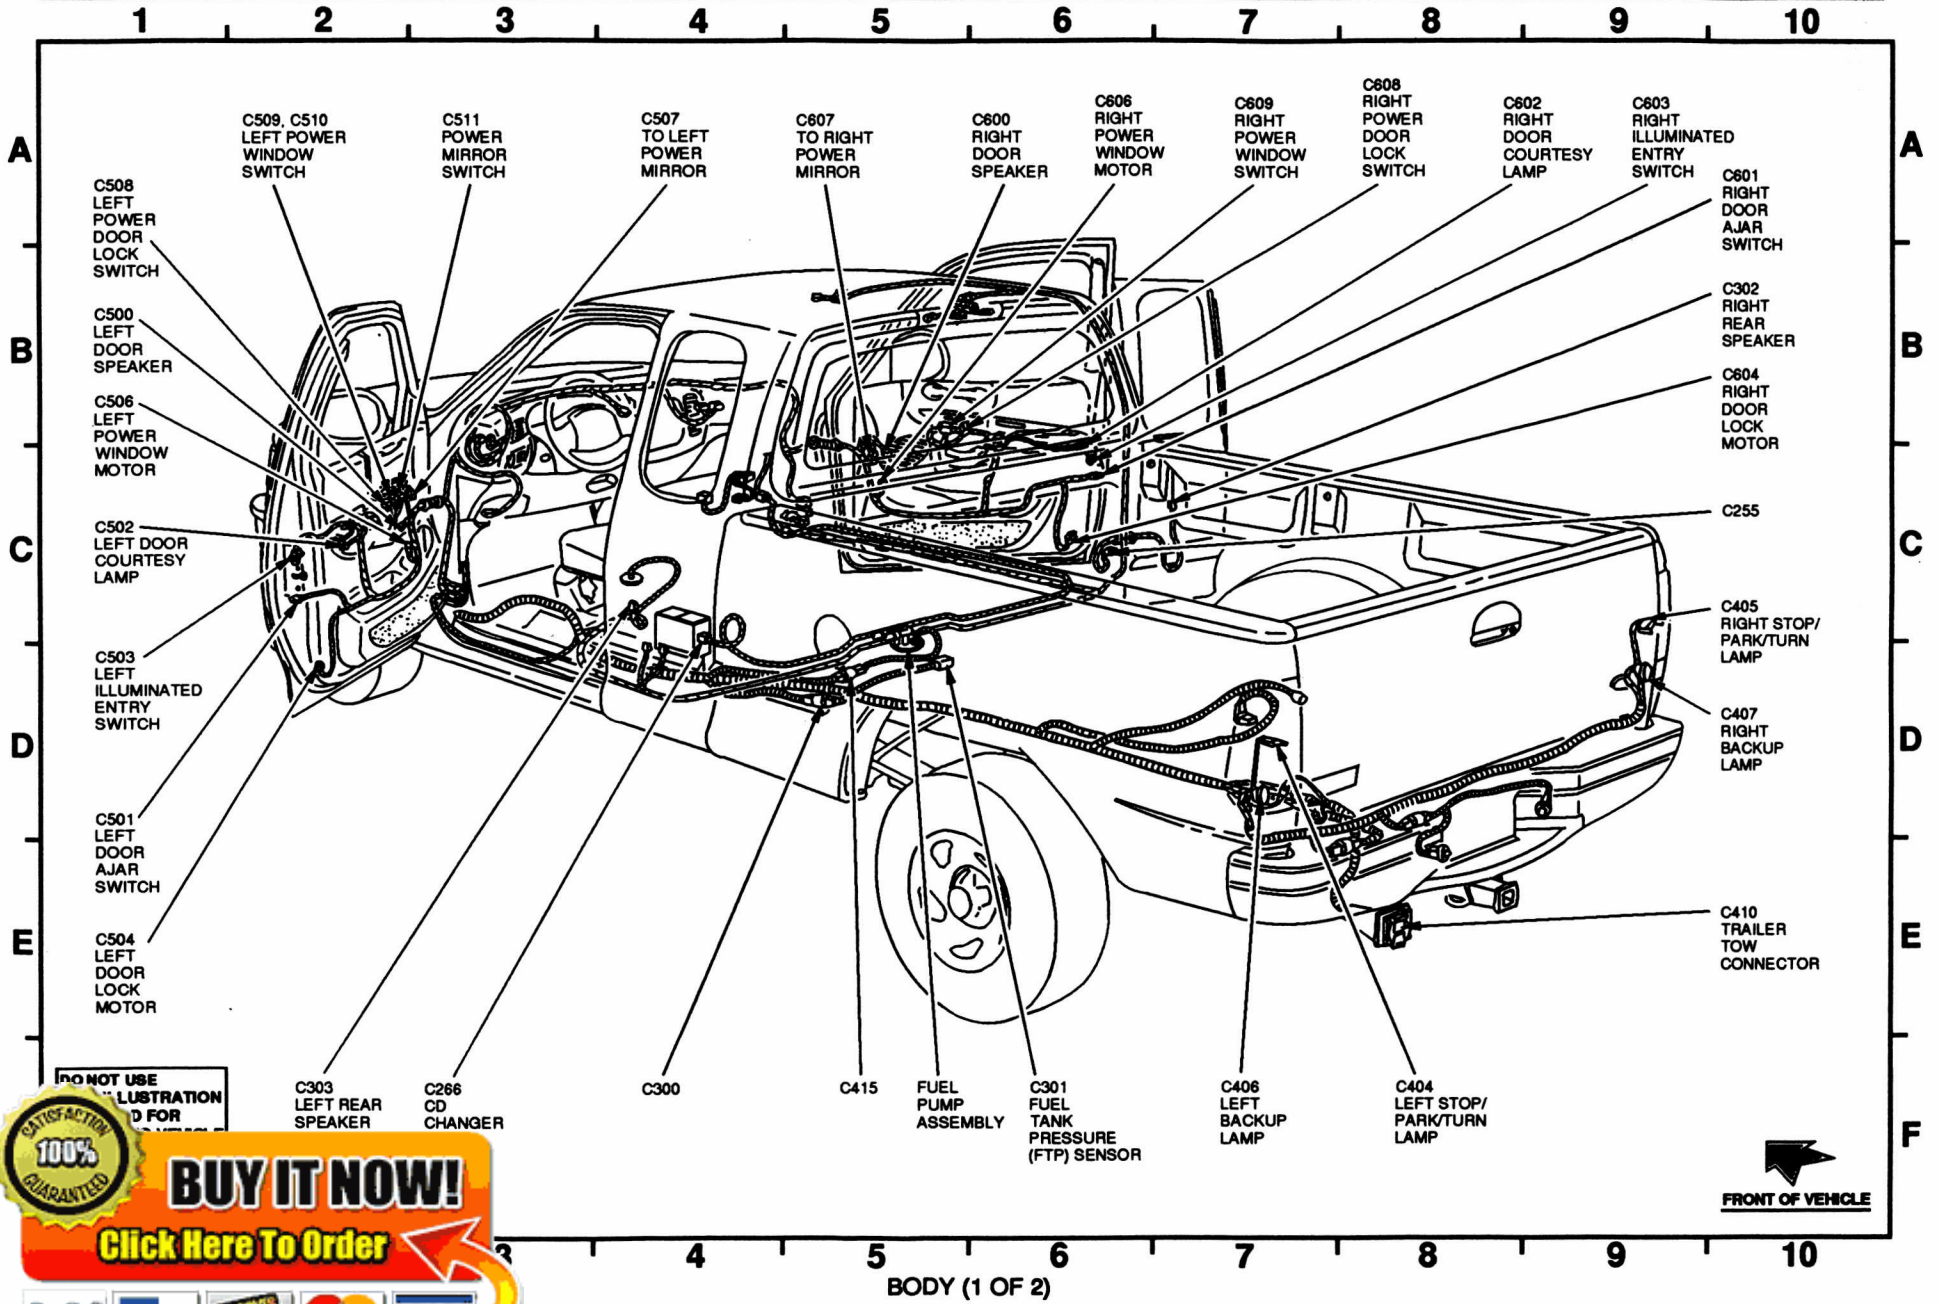

151-15 COMPONENT LOCATION VIEWS

1997 F-150/F-250

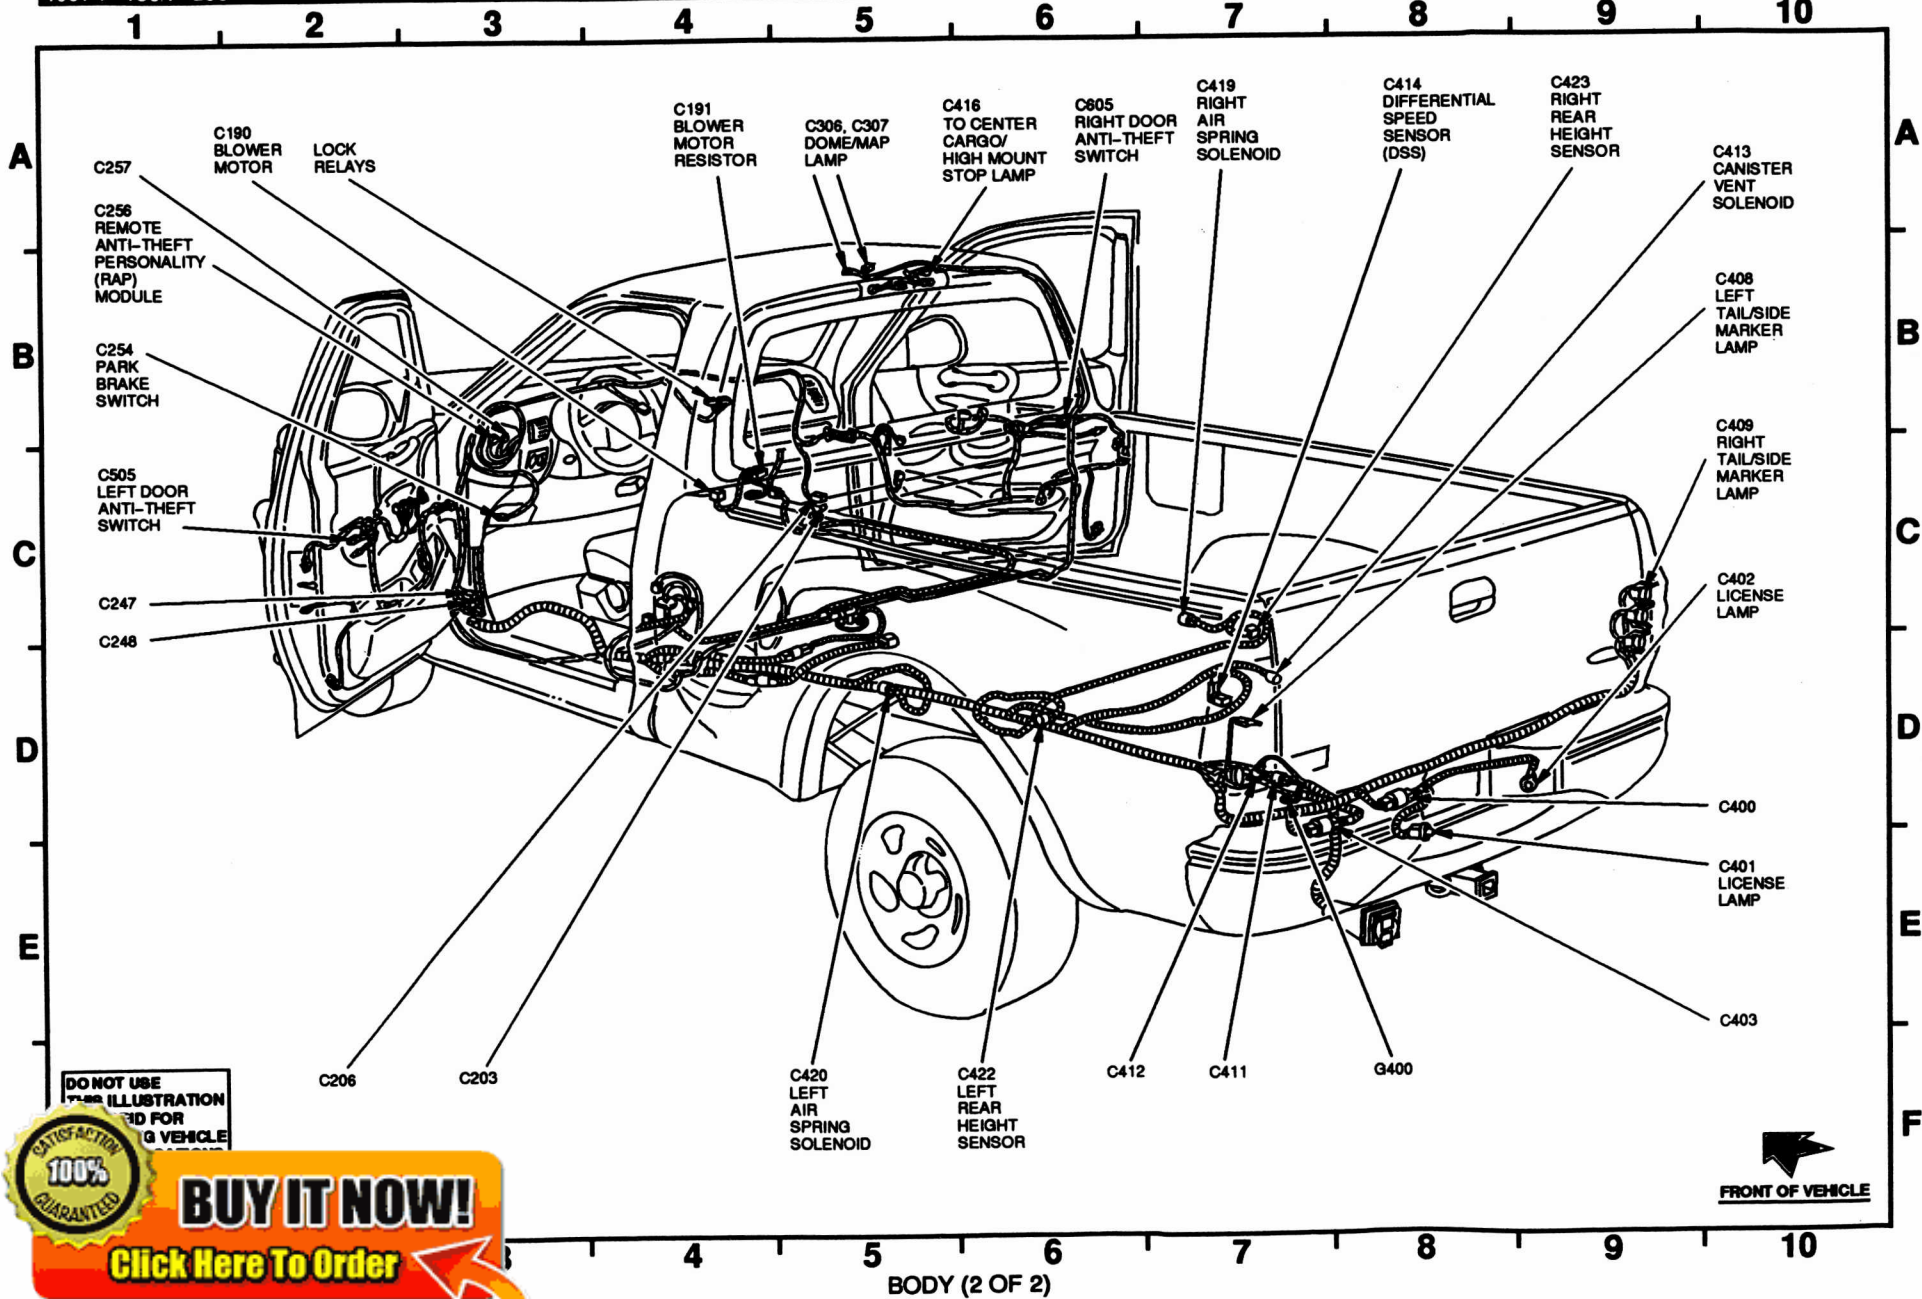

DO NOT USE THIS ILLUSTRATION TO IDENTIFY PARTS FOR YOUR VEHICLE



BUY IT NOW!

[Click Here To Order](#)



100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

LOCATION INDEX 152-2

1997 F-150 250

<u>Component</u>	<u>Base Part No.</u>	<u>Location</u>	<u>Component Connector</u>	<u>Page Zone</u>	<u>Connector Page</u>
Cargo/High Mount Stop Lamp	13776	Rear top center of cab	C416	151-15 A6	
Center Cargo/High Mount Stop Lamp	13776	Rear top center of cab	C911	151-15A6	
Central Timer Module (CTM)	18578	Behind center of I/P	C239, C267	151-11A3	59-5, 6
Central Timer Module (CTM)					
Diagnostic Connector	★	Behind center of I/P	C205	★	
Cigar Lighter	15055	Behind center of I/P	C226, C227	151-11 C10	
Clockspring Assembly (Air Bag)	★	Base of steering column	C233	151-10 A3	
Clockspring Assembly (Speed Control)	★	Base of steering column	C234	151-10 A4	31-3
Clutch Pedal Position (CPP) Switch	11A152	On clutch pedal arm	C231	151-12 F6	20-4
Clutch Pedal Position (CPP) Switch Jumper	14B155	Behind left side of I/P	C231	151-12 F6	20-4
Crankshaft Position (CKP) Sensor	9A825	Lower front of engine	C102	151-3F6	
Cylinder Head Temperature (CHT) Sensor	★	Top front of engine	C179	151-5 F8	
Data Link Connector (DLC)	★	Behind center of I/P	C228	151-11 F5	14-2
Daytime Running Lamps (DRL) Module	15A272	Left front of engine compartment	C142	151-2 E10	97-3
Differential Pressure Feedback EGR (DPFE) Sensor	★	Right side of engine	C122	151-1 F2	
Differential Speed Sensor (DSS)	6C315	On rear axle	C414	151-15 A8	
Differential Speed Sensor (DSS) Data Link Connector (DLC)	14A624	Left side of I/P panel	C163	151-12 F3	
Digital Transmission Range (DTR) Sensor	7A247	Left side of automatic transmission	C182	151-8 C6	29-4
Dome Lamp	13776	Center of cab, in roof panel	C306	151-15 A5	
Dome/Map Lamp	13776	Center of cab, in roof panel	C306, C307	151-15 A5	
Driver's Unlock Relay	★	In lock relays	★	★	13-18
E40D Transmission 7000	★	Center of vehicle, behind engine	C193	151-8 D9	
EGR Vacuum Regulator (EVR)					
Engine Compartment Lamp	9F483	Left side of engine	C121	151-1 E1	
Engine Compartment Lamp	15702	Attached to underside of hood	C161	151-3 A9	
Engine Compartment Lamp	0884	Left front corner of engine	C105	151-1 F7	
Engine Compartment Lamp	2A648	Front of engine	C104	151-1 F6	
Engine Compartment Lamp		Near power distribution box	★	151-3 A10	
Engine Compartment Lamp	610	Left front of engine	C101	151-2 F8	



BUY IT NOW!

Click Here To Order



152-3 LOCATION INDEX

1997 F-150 250

<u>Component</u>	<u>Base Part No.</u>	<u>Location</u>	<u>Component Connector</u>	<u>Page Zone</u>	<u>Connector Page</u>
Flasher Relay	13350	In blower/flasher relay block	★	★	13-18
Fog Lamp Relay	★	In power distribution box	★	★	13-18
Forward/Reverse Motor	★	Under driver's seat	C309	151-7 E10	
Front Height Motor	★	Under driver's seat	C308	151-7 D1	
Fuel Injector #1	9F593	Top of cylinder #1	C125	151-3 F2	
Fuel Injector #2	9F593	Top of cylinder #2	C126	151-3 F2	
Fuel Injector #3	9F593	Top of cylinder #3	C127	151-3 F2	
Fuel Injector #4	9F593	Top of cylinder #4	C128	151-1 A6	
Fuel Injector #5	9F593	Top of cylinder #5	C129	151-1 A6	
Fuel Injector #6	9F593	Top of cylinder #6	C130	151-1 A6	
Fuel Injector #7	9F593	Top of cylinder #7	C131	151-4 A5	
Fuel Injector #8	9F593	Top of cylinder #8	C132	151-4 A5	
Fuel Pump Assembly	★	Center of vehicle, at fuel tank	C415	151-14 F5	
Fuel Pump Relay	14N089	In power distribution box	★	★	
Fuel Tank Pressure (FTP) Sensor	★	At fuel tank	C301	151-14 F6	
Function Selector Switch (Blend Door Potentiometer)	18578	Center of I/P, near radio	C220	151-10 F9	54-4
Function Selector Switch (Blower Motor Switch)	18578	Center of I/P, near radio	C218	151-10 F9	54-4
Function Selector Switch (Illumination)	★	Center of I/P, near radio	C219	151-10 F9	54-4
Function Selector Switch (Mode Selector Switch)	18578	Center of I/P near radio	C217	151-10 F9	54-4
Generator/Voltage Regulator	10300	Right front of engine compartment	C176, C177, C178	151-3 A4	
Generic Electronic Module (GEM)	★	Behind center of I/P	C239, C240, C241, C267	151-11 A3	59-5, 6, 7
Glove Compartment Lamp	15A563	Right side of I/P, behind glove box	C211	151-10 B10	
Headlamp Relay	★	In RPO relay block	★	★	13-18
Heated Oxygen Sensor (HO2S) #11	9J433	On exhaust pipe of engine	C109	151-1 D1	
Heated Oxygen Sensor #12	9J433	On exhaust pipe of engine	C184	151-8 A5	
Heated Oxygen Sensor	433	On exhaust pipe of engine	C108	151-1 A7	
Heated Oxygen Sensor	433	On exhaust pipe of engine	C185	151-8 B5	

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal, Discover, American Express, MasterCard, VISA

<u>Component</u>	<u>Base Part No.</u>	<u>Location</u>	<u>Component Connector</u>	<u>Page Zone</u>	<u>Connector Page</u>
High Pitch Horn	13A803	On right radiator support	C136	151-2 F3	
Horn Relay	14N089	In power distribution box	★	★	
Idle Air Control (IAC) Valve	19A089	Left side of intake manifold	C110	151-3 F9	
Ignition Coil	12029	Top of engine	C111	151-1 F5	
Ignition Coil on Plug #1	★	Near its fuel injector	C1011	151-6 A6	
Ignition Coil on Plug #2	★	Near its fuel injector	C1012	151-6 A6	
Ignition Coil on Plug #3	★	Near its fuel injector	C1013	151-6 A6	
Ignition Coil on Plug #4	★	Near its fuel injector	C1014	151-6 A6	
Ignition Coil on Plug #5	★	Near its fuel injector	C1015	151-6 A6	
Ignition Coil on Plug #6	★	Near its fuel injector	C1016	151-6 A6	
Ignition Coil on Plug #7	★	Near its fuel injector	C1017	151-6 A6	
Ignition Coil on Plug #8	★	Near its fuel injector	C1018	151-6 A6	
Ignition Coils 1 and 2	★	Top right side of engine	C116	151-4 A5	
Ignition Coils 3 and 4	★	Top left side of engine	C117	151-4 A5	
Ignition Cylinder Tamper Switch	19A438	Inside steering column	C235	151-10 F7	
Ignition Switch	11572	Mounted in steering column	C250	151-10 F6	13-16
Inertia Fuel Shut-off	9341	Behind right side of I/P	C204	151-12 D10	
Inline Mini Fuse (20A)	★	Near generator/voltage regulator	★	★	
Instrument Cluster	★	Left side of I/P	C236, C237, C238	151-11 A4	62-8, 9
Intake Air Temperature (IAT) Sensor	9C674	On intake manifold	C107	151-3 D10	
Intake Manifold Runner Control (IMRC)	★	Top front of engine	C192	★	
Intake Manifold Tuning Valve	★	Right side of engine	C118	151-1 A4	
Intake Manifold Runner Control (IMRC) Monitor #1	9H465	Rear of engine	C113	151-1 A5	
Intake Manifold Runner Control (IMRC) Monitor #2	9H465	Right side of engine	C112	151-1 A5	
Interior Lamp Relay	★	In junction box fuse/relay panel	★	★	11-4
Junction Box Fuse/Relay Panel	★	Under left side of I/P	C242, C243	151-10 D1	11-4
Knock Sensor (KS)	12A699	Right side of engine	C103	151-2 F6	
Map Lamp	13416	Left rear corner of vehicle	C406	151-14 F7	
Map Lamp	★	Rear of vehicle	C911	★	
Map Lamp	★	Rear of left door	C501	151-14 E1	
Map Lamp	★	In left door	C505	151-15 B1	
Map Lamp	1776	In left door interior door panel	C502	151-14 C1	



BUY IT NOW!

Click Here To Order



<u>Component</u>	<u>Base Part No.</u>	<u>Location</u>	<u>Component Connector</u>	<u>Page Zone</u>	<u>Connector Page</u>
Left Door Lock Motor	14017	Bottom rear of left door	C504	151-14 E1	
Left Door Speaker	18808	Front of left door	C500	151-14 B1	
Left Fog Lamp	15A254	Left front of vehicle	C144	151-2 D10	
Left Front Park/Turn Lamp	13035	Left front of vehicle	C145	151- 2 C10	
Left Front Wheel 4WABS Sensor	2C204	At left front wheel	C153	151- 1 B10	
Left Headlamp	13006	Left front corner of vehicle	C143	151- 3 E10	
Left Illuminated Entry Switch	★	Rear of left door	C503	151-14 D1	
Left Power Door Lock Switch	★	In armrest of left interior door panel	C508	151-14 A1	110-4, 5
Left Power Mirror	17683	Left side of vehicle, on door	C507	151-14 A4	
Left Power Window Motor	14631	In left door	C506	151-14 B1	
Left Power Window Switch	★	In armrest of left interior door panel	C509, C510	151-14 A2	100-3
Left Primary Crash Sensor	14B004	Left front of engine compartment	★	151- 3 F7	
Left Rear Air Spring Solenoid	★	Left rear of vehicle above axle	C420	151-15 F6	
Left Rear Height Sensor	★	Left rear of vehicle	C422	151-15 F5	
Left Rear Speaker	18947	Left rear of cab	C303	151-14 F2	
Left Stop/Park/Turn Lamp	★	Left rear corner of vehicle	C404	151-14 F8	
Left Tail/Side Marker Lamp	★	Left rear corner of vehicle	C408	151-15 B10	
License Lamp	13550	Rear of vehicle	C401	151-15 E10	
License Lamp	13550	Rear of vehicle	C402	151-15 C10	
Lock Relays	★	Behind right side of I/P	★	151-15 B1	13-18
Low Pitch Horn	13A803	On right radiator support	C137	151- 2 F5	
M5R2 Transmission	★	Under center of vehicle	★	151- 8 D5	
Main Light Switch	★	Lower left side of I/P	C244, C245, C246	151- 12 C1	13-18, 19
Mass Air Flow (MAF) Sensor	128579	In air cleaner assembly	C156	151- 2 B10	
Mega Fuse (Alternator)	★	Right rear of engine compartment, upper right cowl panel	★	★	
Mega Fuse (PDB)	★	Right rear of engine compartment, upper right cowl panel	★	★	
Multi-Function Switch	13K359	Left side of steering column	C258, C259	151-10 F5	85-2, 90-4
Octane Adjust (Shorting Bar)	14A464	Right rear corner of engine	C173	151- 1 A2	
One Touch Down Relay	★	In junction box fuse/relay panel	★	★	11-4
Onboard Inertia Switch (OSS) Sensor	7H103	Left side of transmission	C187	151- 8 A3	
	352	Right side of parking brake lever	C254	151-15 B1	
		In RPO relay block	★	★	13-18
	4A74	Behind right side of I/P	C215	151-11 A9	
		Behind right side of I/P	C213, C214	151-12 C10	
		In power distribution box	★	★	



BUY IT NOW!

Click Here To Order



LOCATION INDEX 152-6

1997 F-150 250

<u>Component</u>	<u>Base Part No.</u>	<u>Location</u>	<u>Component Connector</u>	<u>Page Zone</u>	<u>Connector Page</u>
PCM Power Relay	12A646	In power distribution box	★	★	
Power Distribution Box	★	Left side of engine compartment	C175	151-3	C10
Power Distribution Box (Relays)	★	Left side of engine compartment	★	★	13-20
Power Mirror Switch	★	In armrest of left interior door panel	C511	151-14	A3 124-2
Power Seat Control Switch	★	Left side of driver's seat	C311	151-13	F8 120-2
Powertrain Control Module (PCM)	12A650	Right side of engine compartment	C174	151-1	B1 23-8
Premium Sound Amplifier	18B849	Behind center of I/P	C263, C264	151-11	F6 130-7
RABS Data Link Connector	14A624	Behind right side of I/P	C207	151-10	D10
Radio (AM/FM W/CASSETTE)	19B131	Behind center of I/P	C224, C225	151-10	A6 130-5
Radio Noise Capacitor #1	14A601	Top of engine	C115	151-3	A5
Radio Noise Capacitor #2	14A601	Right front of engine	C114	151-5	F9
Radio (Premium Sound)	19B132	Behind center of I/P	C261, C262	151-12	A7 130-6
Rear Air Suspension Compressor Motor and Vent Solenoid	★	Right front of engine compartment	C194	151-3	E1
Rear Air Suspension Compressor	★	Front right of engine compartment, behind right side of I/P	★	★	
Rear Air Suspension Compressor Relay	12A581	Left side of engine compartment	★	★	
Rear Air Suspension Data Link Connector	14401	Behind right side of I/P	C285	151-12	F8 41-4
Rear Air Suspension (RAS) Module	★	Behind center of I/P	C276, C277	151-12	A6 41-3
Rear Air Suspension Service Switch	★	Behind right side of I/P	C284	151-12	F9
Rear Anti-Lock Brake System (RABS) Module	2C018	Behind right side of I/P	C222	151-11	A6 42-5
Rear Anti-Lock Brake System (RABS) Proportioning Valve Switch Assembly	2B373	Left side of engine compartment	C152	151-2	B10
Rear Height Motor	★	Under driver's seat	C310	151-13	C10
Remote Anti-Theft Personality Module	15K602	Behind left side of I/P	C256, C257	151-15	A1 117-4
		Right rear of vehicle	C419	151-15	A7
	13416	Right rear corner of vehicle	C407	151-14	D10
	★	Rear top center of cab	C913	★	
		Rear of right door	C601	151-14	A10
		In right door	C605	151-15	A6

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

152-7 LOCATION INDEX

1997 F-150/250

<u>Component</u>	<u>Base Part No.</u>	<u>Location</u>	<u>Component Connector</u>	<u>Page Zone</u>	<u>Connector Page</u>
Right Door Courtesy Lamp	13776	In right door interior door panel	C602	151-14 A9	
Right Door Lock Motor	14017	Bottom rear of right door	C604	151-14 B10	
Right Door Speaker	18808	Front of right door	C600	151-14 A6	
Right Fog Lamp	15A254	Right front of vehicle	C134	151-3 F3	
Right Front Park/Turn Lamp	13035	Right front of vehicle	C135	151-2 D1	
Right Front Wheel 4WABS Sensor	2C204	At right front wheel	C154	151-3 B1	
Right Headlamp	13006	Right front corner of vehicle	C133	151-2 E1	
Right Illuminated Entry Switch	★	Rear of right door	C603	151-14 A9	
Right Power Door Lock Switch	★	In armrest of right interior door panel	C608	151-14 A8	110-4, 5
Right Power Mirror	17683	Right side of vehicle, on door	C607	151-14 A5	
Right Power Window Motor	14631	In right door	C606	151-14 A6	
Right Power Window Switch	★	In armrest of right interior door panel	C609	151-14 A7	100-4
Right Primary Crash Sensor	14B004	Right front of engine compartment	★	151-3 F4	
Right Rear Height Sensor	★	Right rear of vehicle	C423	151-15 A9	
Right Rear Air Spring Solenoid	★	Right rear of vehicle	C419	151-15A7	
Right Rear Speaker	18947	Right rear of cab	C302	151-14 B10	
Right Stop/Park/Turn Lamp	★	Right rear corner of vehicle	C405	151-14 C10	
Right Tail/Side Marker Lamp	★	Right rear corner of vehicle	C409	151-15 C10	
RPO Relay Block	★	Behind right side of I/P	★	151-10 A8	13-18
Seat Belt Warning Switch	14B177	In driver's seat belt buckle	C304	151-13 A2	
Shift Lock Actuator	3E723	In steering column	C249	151-12 F4	
Shift on the Fly Relay	★	In RPO relay block	★	★	13-18
Speed Control Servo/Amplifier					
Assembly	9A825	Left side of engine compartment	C157	151-3 B10	31-3
Starter Interrupt Relay	★	In RPO relay block	★	★	13-18
Starter Motor	★	Lower right side of engine	★	151-2 B1	
Starter Motor Relay	11450	Right rear of engine compartment	C166, C167	151-2 A3	
Throttle Position (TP) Sensor	9E731	Attached to throttle body	C123	151-1 F4	
Trailer Electronic Brake Control	★	Behind left side of I/P	C232	★	
Trailer Tow Backup Lamp Relay	★	In power distribution box	★	★	13-18
Trailer Tow Battery Charge Relay	★	In power distribution box	★	★	13-18
Trailer Tow Connector	★	In rear of vehicle	C410	151-14 E10	
Trailer Tow left Turn Relay	★	In power distribution box	★	★	13-18
		In power distribution box	★	★	13-18
		In power distribution box	★	★	13-18
Tr					
(E	140	Mounted on rear of transmission	C201	151-9 C5	34-5
★					

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

LOCATION INDEX 152-8

1997 F-150 250

<u>Component</u>	<u>Base Part No.</u>	<u>Location</u>	<u>Component Connector</u>	<u>Page Zone</u>	<u>Connector Page</u>
Transfer Case Assembly (Mechanical)	★	Mounted on rear of transmission	C260	151-9 A5	
Transfer Case Shift Relay Module	★	Behind center of I/P	C221	151-12 A5	34-5
Transmission Control Switch (TCS)	7G550	End of transmission selector level	C251	151-12 A4	★
Transmission Range Sensor	7A247	Left side of automatic transmission	C192	151-8 A4	29-4
Vapor Management Valve (VMV)	★	Left rear corner of engine compartment	C164	151-1 A8	★
Vehicle Speed Sensor (VSS)	9E731	Left rear of transmission	C186	151-8 C5	★
Washer Pump Assembly	17664	In washer reservoir	C138	151-2 C1	★
Washer Pump Relay	★	In power distribution box	★	★	★
Windshield Wiper Motor	17504	Behind center of cowl panel	C165	151-2 A8	81-3
Wiper Hi/Lo Relay	★	In power distribution box	★	★	★
Wiper Run/Park Relay	★	In power distribution box	★	★	★

★ Not Available

<u>Connector Number</u>	<u>Location</u>	<u>Page Zone</u>	<u>Connector Page</u>	<u>Color</u>	<u>Terminal</u>
C100	Front of engine	151-2 F7	★	BK	3
C101	Left front of engine	151-2 F8	★	BK	1
C102	Lower front of engine	151-3 F6	★	BK	2
C103	Right side of engine	151-2 F6	★	★	2
C104	Front of engine	151-1 F6	★	GY	2
C105	Left front corner of engine	151-1 F7	★	BK	2
C106	Left side of engine compartment	151-1 F8	★	BK	2
C107	On intake manifold	151-3 D10	★	BK	2
C108	On exhaust pipe of engine	151-1 A7	★	BL	4
C109	On exhaust pipe of engine	151-1 D1	★	BL	4
	Left side of intake manifold	151-3 F9	★	BK	2
	Top of engine	151-1 F5	★	BK	4
	side of engine	151-1 A5	★	BK	3
	nt side of engine	151-1 A5	★	BK	3
	front of engine compartment	151-5 F9	★	GY	1
	of engine	151-3 A5	★	GY	1
	front of engine compartment	151-4 A5	★	BK	3
	ont of engine compartment	151-4 A5	★	BK	3



BUY IT NOW!

Click Here To Order



152-9 LOCATION INDEX

1997 F-150 250

Connector Number	Location	Page Zone	Connector Page	Color	Terminal
C118	Top front of engine	151-1 A4	★	BK	2
C119	Right rear of engine compartment	151-2 A7	★	BK	8
C120	Right rear of engine compartment	151-1 C1	★	BK	42
C121	Left side of engine	151-1 E1	★	BK	2
C122	Right side of engine	151-1 F2	★	GY	3
C123	Attached to throttle body	151-1 F4	★	BK	3
C124	Top front of engine	151-C10	★	BK	4
C125	Top of cylinder #1	151-3 F2	★	GY	2
C126	Top of cylinder #2	151-3 F2	★	GY	2
C127	Top of cylinder #3	151-3 F2	★	GY	2
C128	Top of cylinder #4	151-1 A6	★	GY	2
C129	Top of cylinder #5	151-1 A6	★	GY	2
C130	Top of cylinder #6	151-1 A6	★	GY	2
C131	Top of cylinder #7	151-4 A5	★	GY	2
C132	Top of cylinder #8	151-4 A5	★	GY	2
C133	Right front corner of vehicle	151-2 E1	★	BK	3
C134	Right front corner of vehicle	151-3 F3	★	BL	2
C135	Right front corner of vehicle	151-2 D1	★	BK	3
C136	Left front of radiator support	151-2 F3	★	BK	1
C137	Left front of radiator support	151-2 F5	★	BK	1
C138	In washer reservoir	151-2 C1	★	BK	2
C139	Right rear corner of engine compartment	151-2 A5	★	★	4
C140	Right front corner of engine compartment	151-2 F4	★	W	4
C141	Left front corner of engine compartment	151-2 F9	★	W	4
C142	Left front corner of engine compartment	151-2 E10	★	BK	8
C143	Left front corner of vehicle	151-3 E10	★	BK	2
C144	Left front corner of vehicle	151-2 D10	★	BL	2
C145	Left front corner of vehicle	151-2 C10	★	BK	2
C146	Left front corner of engine compartment	151-1 F9	★	BK	24
C147	Left front corner of engine compartment	151-1 F9	★	BK	2
C148	Left side of engine compartment	151-1 D10	★	BK	16
C149	Left side of engine compartment	151-1 C10	★	BK	4
C150	Left side of engine compartment	151-1 C10	★	GY	4
C151	Right front corner of engine compartment	151-3 A6	★	BK	2
C152	Left side of engine compartment	151-2 B10	★	BK	4
C153	Front wheel	151-1 B10	★	BK	2
C154	Front wheel	151-3 B1	★	BK	2
C155	Front wheel	151-2 B10	★	BK	4

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

*N

LOCATION INDEX 152-10

1997 F-150 250

Connector Number	Location	Page Zone	Connector Page	Color	Terminal
C157	Left side of engine compartment	151-3 B10	31-3	BK	10
C158	Left rear of engine compartment	151-1 A10	150-3	BK	35
C159	Left rear of engine compartment	151-1 A10	150-4	BR	35
C160	Left rear of engine compartment	151-1 A10	150-5	GY	35
C161	Attached to underside of hood	151-3 A9	*	GY	2
C162	Mounted on master cylinder	151-3 A7	*	BK	3
C163	Behind left side of I/P	151-12 F3	42-2	BK	2
C164	Left rear corner of engine compartment	151-1 A8	*	BK	2
C165	Behind center of cowl panel	151-2 A8	81-3	*	5
C166	Right rear of engine compartment	151-2 A3	*	*	1
C167	Right rear of engine compartment	151-2 A3	*	*	1
C169	Right rear of engine compartment	151-1 A3	*	GY	4
C170	Right side of engine compartment	151-3 D1	*	BK	4
C171	Right side of engine compartment	151-2 A2	*	BK	4
C172	Right rear of engine compartment	151-2 A6	150-6	GY	38
C173	Right side of engine compartment	151-1 A2	*	BK	2
C174	Right side of engine compartment	151-1 B1	*	GY	104
C175	Left side of engine compartment	151-3 C10	*	*	1
C176	Right front of engine compartment	151-3 A4	*	BK	3
C177	Right front of engine compartment	151-3 A4	*	GY	1
C178	Right front of engine compartment	151-3 A4	*	BK	1
C179	Top front of engine	151-5 F8	*	*	2
C180	Right side of engine compartment	151-3 A1	*	BK	2
C181	Right side of engine compartment	151-3 A2	*	BK	2
C182	Left side of transmission	151-8 C6	29-4	BK	8
C183	Left side of transmission	151-8 C4	29-4	BK	10
C184	On exhaust pipe of engine	151-8 A5	*	BL	4
C185	On exhaust pipe of engine	151-8 A8	*	BL	4
C186	Left side of transmission	151-8 C5	*	BK	2
C187	Left side of transmission	151-8 A3	*	BK	2
C188	Left side of transmission	151-8 F4	*	*	2
C189	Left side of transmission	151-9 F5	*	BK	2
C190	Right side of engine compartment	151-15B1	53-4	BK	2
	Near blower motor	151-15 A4	53-4	BK	4
	Left side of transmission	151-8 A4	29-4	BK	8
	Right side of transmission	151-8 D9	*	*	*
	Right side of engine compartment	151-3 E1	43-4	*	*
	Center front of engine compartment	*	*	*	*
	Behind left side of I/P	151-11 F4	150-7	BK	16



BUY IT NOW!

Click Here To Order



152-11 LOCATION INDEX

1997 F-150 250

Connector Number	Location	Page Zone	Connector Page	Color	Terminal
C201	On transfer case assembly	151-9 C5	34-5	BK	16
C202	Behind right side of I/P	151-10 D10	★	GY	2
C203	Behind right side of I/P	151-11 F7	150-7	BK	16
C204	Behind right side of I/P	151-12 D10	★	GY	3
C205	Behind center of I/P	★	★	★	2
C206	Behind right side of I/P	151-11 F7	150-8	GY	16
C207	Behind right side of I/P	151-10 D10	★	BK	1
C208	Behind right side of I/P	151-12 C10	46-3	BK	12
C209	Behind right side of I/P	151-12 C10	46-3	GY	12
C210	Behind right side of I/P	151-10 B10	150-8	GY	6
C211	Behind glove box	151-10 B10	★	BK	2
C212	Behind ashtray	151-11 B10	★	GY	2
C213	Behind right side of I/P	151-12 C10	★	GY	3
C214	Behind right side of I/P	151-12 C10	★	BR	3
C215	Behind right side of I/P	151-11 A9	★	BK	3
C216	Behind center of I/P	151-11 A7	87-4	BK	5
C217	Behind center of I/P	151-10 F9	53-3	R	4
C218	Behind center of I/P	151-10 F9	53-3	BK	4
C219	Behind center of I/P	151-10 F9	53-3	BK	2
C220	Behind center of I/P	151-10 F9	53-3	W	3
C221	Behind center of I/P	151-12 A5	34-5	BK	10
C222	Behind center of I/P	151-11 A6	42-5	BK	14
C223	Behind center of I/P	151-11 A8	★	BK	2
C224	Behind center of I/P	151-10 A6	130-5	BK	8
C225	Behind center of I/P	151-10 A6	130-5	BK	8
C226	Behind cigar lighter	151-11 C10	★	BK	1
C227	Behind cigar lighter	151-11 C10	★	★	1
C228	Behind center of I/P	151-11 F8	14-2	BK	16
C229	Behind center of I/P	151-10 F8	53-4	W	8
C230	Behind center of I/P	151-12 F7	34-6	GY	4
C231	On clutch pedal arm	151-12 F6	20-4	BK	6
C232	Behind left side of I/P	151-12 F5	150-9	GY	6
C233	Base of steering column	151-10 A3	★	BK	3
C234	Base of steering column	151-10 A4	31-3	BR	6
C235	Base of steering column	151-10 F7	★	GY	2
C236	Behind left side of I/P	151-11 A4	62-8	BK	12
C237	Behind left side of I/P	151-11 A4	62-8	W	16
C238	Behind left side of I/P	151-11 A4	62-9	W	12
C239	Behind left side of I/P	151-11 A3	59-5	GY	26

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

LOCATION INDEX 152-12

1997 F-150 250

Connector Number	Location	Page Zone	Connector Page	Color	Terminal
C240	Behind left side of I/P	151-11 A3	59-6	GY	16
C241	Behind left side of I/P	151-11 A3	59-7	GY	22
C242	Under left side of I/P	151-10 D1	13-22	GY	34
C243	Under left side of I/P	151-10 D1	13-21	BK	34
C244	Behind left side of I/P	151-12 C1	13-16	GY	4
C245	Behind left side of I/P	151-12 C1	13-17	GY	6
C246	Behind left side of I/P	151-12 C1	13-17	BK	6
C247	Behind left side of I/P	151-11 F3	150-9	GY	16
C248	Behind left side of I/P	151-11 F3	150-10	BK	8
C249	In steering column	151-12 F4	*	BK	3
C250	In steering column	151-10 F6	13-16	BK	15
C251	End of transmission selector lever	151-12 A4	*	BK	3
C252	Behind left side of I/P	151-10 F4	*	BK	2
C253	Behind left side of I/P	151-10 F4	150-10	BK	16
C254	Right side of parking brake lever	151-15 B1	*	BK	1
C255	Right lower rear of cab	151-14 C10	*	GY	2
C256	Behind left side of I/P	151-15 A1	117-4	BK	26
C257	Behind left side of I/P	151-15 A1	117-4	BK	22
C258	Left side of steering column	*	90-4	GY	10
C259	Left side of steering column	*	81-3	GY	7
C260	Left side of transfer case	151-9 A5	*	BK	1
C261	Behind center of I/P	151-12 A7	*	BK	16
C262	Behind center of I/P	151-12 A7	130-6	BK	8
C263	Behind center of I/P	151-11 F6	130-7	BK	8
C264	Behind center of I/P	151-11 F6	130-7	BK	14
C265	Behind right side of I/P	151-10 D10	150-11	BK	10
C266	Left rear of cab	151-14 F3	130-8	BK	12
C267	In junction box fuse/relay panel	*	59-6	*	18
C271	Behind center of I/P	*			
C273	Behind center of I/P	*	*	*	*
C274	Behind center of I/P	151-10 A5	*	*	10
C276	Behind center of I/P	151-12 A6	*	*	*
C277	Behind center of I/P	151-12 A6	*	*	*
	Right side of I/P	151-12 F10	*	*	*
	Behind right side of I/P	151-12 F8	*	*	*
	Behind right side of I/P	151-12 F8	*	*	*
	Left side rail, center of vehicle	151-14 F4	*	GY	4
	Left side rail tank	151-14 F6	*	BK	3
	Left rear of cab	151-14 B10	*	GY	2
	Left rear of cab	151-14 F2	*	GY	2

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

152-13 LOCATION INDEX

1997 F-150 250

Connector Number	Location	Page Zone	Connector Page	Color	Terminal
C304	Under driver's seat	151-13 A7	★	GY	2
C305	Under driver's seat	151-13 A5	★	GY	2
C306	Center of cab, in roof panel	151-15 A5	★	GY	1
C307	Center of cab, in roof panel	151-15 A5	★	GY	1
C308	Under driver's seat	151-13 D1	★	GY	2
C309	Under driver's seat	151-13 E10	★	GY	2
C310	Under driver's seat	151-13 C10	★	GY	2
C311	Under driver's seat	151-13 F3	120-2	BK	8
C400	Rear center of vehicle	151-15 D10	★	GY	4
C401	Rear center of vehicle	151-15 E10	★	W	2
C402	Rear center of vehicle	151-15 C10	★	W	2
C403	Left rear of vehicle	151-15 F10	150-11	BK	8
C404	Left rear corner of vehicle	151-14 F8	★	T	3
C405	Right rear corner of vehicle	151-14 C10	★	T	3
C406	Left rear corner of vehicle	151-14 F7	★	GN	3
C407	Right rear corner of vehicle	151-14 D10	★	GN	3
C408 (Flareside)	Left rear corner of vehicle	151-15 B10	★	★	3
C409 (Flareside)	Right rear corner of vehicle	151-15 C10	★	★	3
C410	Rear of vehicle, under bumper	151-14 E10	★	BK	7, 4
C411	Left rear of vehicle	151-15 F7	★	GY	4
C412	Left rear of vehicle	151-15 F6	★	BK	2
C413	Rear of body, near fuel tank	151-15 A10	★	BK	2
C414	On rear axle	151-15 A8	★	BK	2
C415	Center of vehicle, near fuel tank	151-14 F5	★	BK	4
C416	Rear top center of cab	151-15 A6	★	GY	3
C419	Rear right side of axle	151-15 A7	★	★	★
C420	Rear left side of axle	151-15 F5	★	★	★
C422	Rear left side of axle	151-15 F6	★	★	★
C423	Rear right side of axle	151-15 A9	★	★	★
C500	Front of left door	151-14 B1	★	GY	2
C501	Rear of left door	151-14 E1	★	BK	2
C502	In left door interior door panel	151-14 C1	★	N	2
C503	Rear of left door	151-14 D1	★	GY	2
C504	Bottom rear of left door	151-14 E1	★		2
C505	top rear of left door	151-15C1	★	GY	4
C506	In left door	151-14 B1	★		2
C507	In left door	151-14 A4	★	GY	3
C508	In left door	151-14 A1	110-4,5	BK	7
C509	left interior door panel	151-14 A2	100-3	BK	4
C510	left interior door panel				

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

LOCATION INDEX 152-14

1997 F-150 250

<u>Connector Number</u>	<u>Location</u>	<u>Page Zone</u>	<u>Connector Page</u>	<u>Color</u>	<u>Terminal</u>
C510	Behind left interior door panel	151-14 A2	100-3	BK	5
C511	Behind left interior door panel	151-14 A3	124-2	N	8
C600	Front of right door	151-14 A6	*	GY	2
C601	Rear of right door	151-14 A10	*	BK	2
C602	In right door interior door panel	151-14 A9	*	N	2
C603	Rear of right door	151-14 A9	*	GY	2
C604	Bottom rear of right door	151-14 B10	*	*	2
C605	Top rear of right door	151-15 A6	*	GY	4
C606	In right door	151-14 A6	*	*	2
C607	In right door	151-14 A5	*	GY	3
C608	Behind right interior door panel	151-14 A8	110-4,5	BK	7
C609	Behind right interior door panel	151-14 A7	100-4	BK	7
C911	Center of cab, in roof panel	*	*	*	
C912	Center of cab, in roof panel	*	*	*	
C913	Center of cab, in roof panel	*	*	*	
C1011	Top of cylinder #1	151-6 A6	*	BK	2
C1012	Top of cylinder #2	151-6 A6	*	BK	2
C1013	Top of cylinder #3	151-6 A6	*	BK	2
C1014	Top of cylinder #4	151-6 A6	*	BK	2
C1015	Top of cylinder #5	151-6 A6	*	BK	2
C1016	Top of cylinder #6	151-6 A6	*	BK	2
C1017	Top of cylinder #7	151-6 A6	*	BK	2
C1018	Top of cylinder #8	151-6 A6	*	BK	2

★ Not Available



BUY IT NOW!
Click Here To Order



152-15 LOCATION INDEX

1997 F-150 250

<u>Ground</u>	<u>Location</u>	<u>Page Zone</u>
G100	Lower right rear of engine, on starter motor mounting bolt ... *	★
G101	Rear of engine compartment, right side of cowl panel	151-2 A4
G102	Rear of right fender apron	151-2 A4
G103	Right front radiator support	151-2 B1
G104	Left front radiator support	151-1 D10
G200	Lower right cowl panel inner	151-11 D10
G201	Lower left cowl panel inner	151-10 F3
G202	Upper left cowl panel inner	151-11 E1
G400	Left rear of frame	151-15 F8

★ Not Available

<u>Splice</u>	<u>Location</u>
S100	Engine control sensor harness, in T/O to powertrain control module
S101	Engine control sensor harness, in T/O to powertrain control module
S102	Engine control sensor harness, near T/O to starter motor relay
S103	Fuel charge harness, near T/O to C120
S104	Engine control sensor harness, 195mm from T/O to right headlamp
S105	Engine control sensor harness, in T/O to power distribution box
S106	Engine control sensor harness, 225mm from T/O to left headlamp
S107	Engine control sensor harness, near T/O to starter motor relay
S108	Engine control sensor harness, in T/O to power distribution box
S109	Engine control sensor harness, near T/O to C148
S110	Engine control sensor harness, in T/O to engine fuse module
S111	Engine control sensor harness, in T/O to engine fuse module
S112	Engine control sensor harness, near T/O to power distribution box
S113	Engine control sensor harness, near T/O to power distribution box
S114	Engine control sensor harness, near T/O to left headlamp
S115	Engine control sensor harness, near T/O to C148
S116	Engine control sensor harness, near T/O to engine fuse module
S117	Fuel charge harness, near T/O to idle air control valve
S118	ss, near T/O to C120
S119	ss, near T/O to C120
S120	ss, near T/O to radio noise capacitor C115
S121	ss, near T/O to radio noise capacitor C114
S122	or harness, in T/O to C160
S123	or harness, in T/O to 4 wheel anti-lock brake system (4WABS) module
S124	ensor harness, 215mm from T/O to right headlamp

Splice **Location**

S123	Engine control sensor harness, near T/O to starter motor relay
S124	Engine control sensor harness, near T/O to 4 wheel anti-lock brake system (4WABS) module
S125	Heater blower motor feed harness, in T/O to blower motor resistor
S126	Engine control sensor harness, near T/O to mega fuse (PDB)
S127	Engine control sensor harness, near T/O to vapor management valve
S128	Engine control sensor harness, near T/O to powertrain control module (PCM)
S129 (4.2L)	Fuel charge harness, between takeout for C126 and C123
S129 (4.6L)	Fuel charge harness, near T/O to fuel injector #3
S129 (5.4L)	Fuel charge harness, near T/O to coil on plug #3
S130	Engine control sensor harness, near T/O to G101
S131(4.2L)	Fuel charge harness, near T/O to intake manifold runner control monitor #1
S131 (4.6L)	Fuel charge harness, near T/O to fuel injector #8
S131 (5.4L)	Fuel charge harness, near T/O to coil on plug #3
S132	Fuel charge harness, in T/O to intake manifold runner control (IMRC) monitor #2
S133	Fuel charge harness, in T/O to intake manifold runner control (IMRC) monitor #1
S134	Engine control sensor harness, near T/O to G101
S135 (4.2L)	Fuel charge harness, near T/O to fuel injector #4
S135 (4.6L)	Fuel charge harness, near T/O to knock sensor
S135 (5.4L)	Fuel charge harness, near T/O to radio noise capacitor
S136 (4.2L)	Fuel charge harness, near T/O to fuel injector #2
S136 (5.4L)	Fuel charge harness, near T/O to knock sensor
S137	Engine control sensor harness, near T/O to starter motor relay
S138	Engine control sensor harness, near T/O to C172
S139	Engine control sensor harness, near T/O to C158
S140	Backup lamp switch to rear lamp feed harness, in T/O to C172
S141	Backup lamp switch to rear lamp feed harness, in T/O to C172
S142	Engine control sensor harness, near T/O to mega fuse (PDB)
S143	Engine control sensor harness, near T/O to vapor management valve
S144	Engine control sensor harness, near T/O to power distribution box
S145	Engine control sensor harness, in T/O to horns
S146	Engine control sensor harness, in T/O to C159
	Engine control sensor harness, in T/O to left foglamp
	Engine control sensor harness, near T/O to high mount stop lamp
	Engine control sensor harness, in T/O to engine fuse module
	Engine control sensor harness, in T/O to C160
	Engine control sensor harness, in T/O to wiper motor
	Engine control sensor harness, near T/O to speed control servo
	Engine control sensor harness, near T/O to fuel injector #3



BUY IT NOW!

Click Here To Order



152-17 LOCATION INDEX

1997 F-150 250

<u>Splice</u>	<u>Location</u>
S162 (5.4L)	Fuel charge harness, near T/O to fuel injector #7
S199	Fuel charge harness, near T/O to C120
S200	Main harness, near T/O to C210
S201	Main harness, near T/O to transfer case shift relay
S202	Main harness, in T/O to blower/flasher relay block
S203	Main harness, near T/O to passenger's airbag
S204	Main harness, near T/O to instrument cluster
S205	Main harness, near T/O to radio
S206	Seat belt retractor switch harness, in T/O to right rear speaker
S207	Main harness, near T/O to junction box fuse/relay panel
S208	Main harness, near T/O to G202
S209	Radio speaker jumper harness, in T/O to premium sound amplifier
S210	Radio speaker jumper harness, near T/O to radio
S211	Main harness, in T/O to main light switch
S212	Main harness, near T/O to brake on/off (BOO) switch
S213	Main harness, in T/O to transfer case shift relays
S214	Main harness, near T/O to brake on/off (BOO) switch
S215	Main harness, in T/O to ignition switch
S216	Body main harness, near T/O remote anti-theft personality (RAP) module
S217	Main harness, in T/O to rear anti-lock brake system (RABS) module
S218	Main harness, near T/O to C159
S219	Main harness, near T/O to transfer case shift relay
S220	Body main harness, near T/O to park brake switch
S221	Main harness, near T/O to C210
S222	Main harness, near T/O to instrument cluster
S223	Main harness, near T/O to instrument cluster
S224	Main harness, in T/O to main light switch
S225	Main harness, near T/O to instrument cluster
S226	Main harness, in T/O to passenger's airbag
S227	Main harness, in T/O to clutch pedal position (CPP) switch
S228	Main harness, in T/O to junction box fuse/relay panel
S229	Main harness, near T/O to radio
S230	Main harness, in T/O to clockspring assembly
S231	T/O to instrument cluster
S232	T/O to instrument cluster
S233	T/O to instrument cluster
S234	near T/O to remote anti-theft personality (RAP) module
S235	near T/O to remote anti-theft personality (RAP) module

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

<u>Splice</u>	<u>Location</u>
S236	Main harness, near T/O to differential
S237	Speed sensor (DSS) data link conector
S238	Main harness, in T/O to 4 wheel drive mode switch
S239	Body main harness, near T/O to lock relays
S242	Main harness, near T/O to clutch pedal position (CPP) switch
S243	Body main harness, 400 mm from left door grommet
S244	Main harness, near T/O to main light switch
S245	Main harness, in T/O to passenger's airbag
S246	Main harness, near T/O to C253
S247	Main harness, near T/O to C253
S248	Body main harness, near T/O to park brake switch
S249	Body main harness, near T/O to remote anti-theft personality (RAP) module
S256	Body main harness, near T/O to lock relays
S265	Main harness, near T/O to C242
S268	Main harness, near T/O to rear air suspension module
S278	Main harness, near T/O to C247
S286	Main Harness, near T/O to C246
S287	Main harness, near Connector C163
S288	Main harness, near Connector C163
S290	Main harness, near T/O to C236
S291	Main harness, near T/O to rear anti-lock brake system (RABS) module
S293	Main harness, near T/O to passenger's airbag
S294	Main harness, near T/O to airbag diagnostic monitor
S295	Main harness, near T/O to air suspension connector
S296	Main harness, near T/O to air suspension connector
S300	Seat belt retractor switch right harness, in T/O to dome lamp
S400	Rear lamp harness, near T/O to fuel pump assembly
S401	Rear lamp connector harness, near T/O to right backup lamp
S402	Socket assembly-rear license assembly, in T/O to license lamps
S403	Rear lamp connector harness, near T/O to C403
S404	Socket assembly-rear license assembly, in T/O to license lamp
S406	Rear lamp harness, near T/O to differential speed sensor (DSS)
	Rear lamp harness, near T/O to differential speed sensor (DSS)
	Rear lamp harness, near T/O to fuel pump module
	harness, near T/O to fuel pump module
	harness, near T/O to fuel pump assembly
	harness, near T/O to left power door lock switch
	harness, near T/O to left door lock motor
	harness, near T/O to left power window motor
	harness, near T/O to left power window motor

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

152-19 LOCATION INDEX

1997 F-150 250

Splice **Location**

S504	Body main harness, near T/O to lock relays
S600	Body main harness, near T/O to right power window switch
S601	Body main harness, near T/O to right power window switch
S602	Body main harness, near T/O to right power window switch
S604	Body main harness, 550 mm from left door grommet
S911	High mount stop lamp harness, near T/O to C416

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Cards Discover NOVUS MasterCard VISA


153-1 HARNESS CAUSAL PART NUMBER

1997 F-150 250


HOW TO IDENTIFY A BASIC HARNESS NUMBER BY USING A "C" NUMBER

Understand these symbols before using the following listing:


HARNESS TO HARNESS CONNECTION

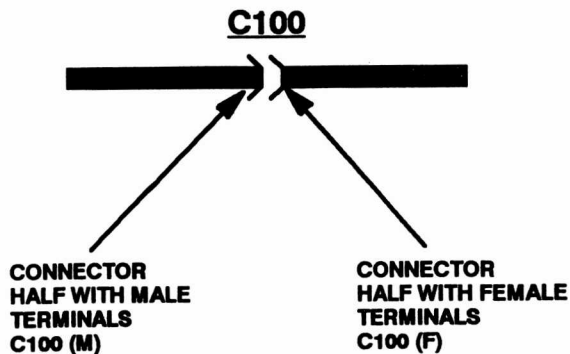

DASHED LINES INDICATE TERMINALS OF SAME CONNECTOR

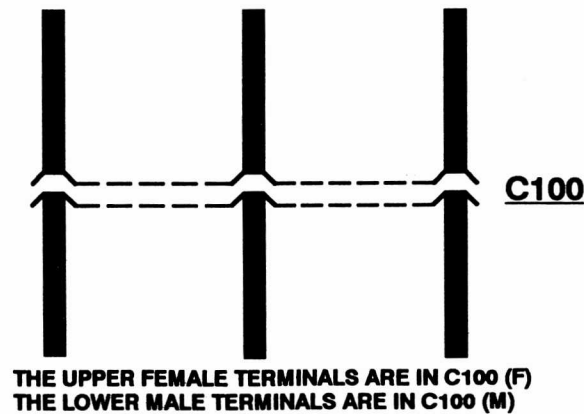

COMPONENT CONNECTION

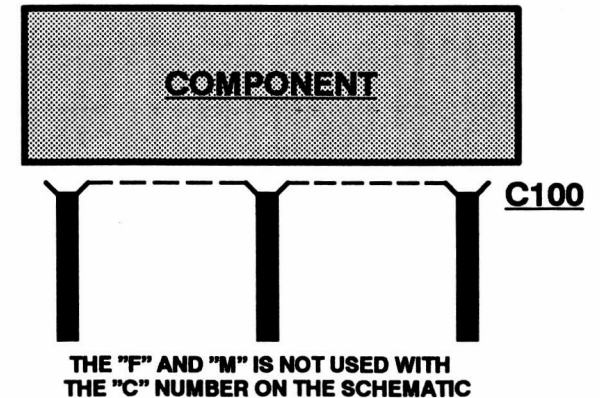

Identify the basic harness part number by:

1. Find the connector "C" number in the EVTM schematics. Then locate the "C" number in the following listing and identify the harness part number.

2. If a problem is identified (such as a short or a broken wire), then choose a connector located on the same harness that has the problem. Then locate the "C" number in the following listing and read the base part number of the harness that has the problem.

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Discover MasterCard VISA

HARNES CAUSAL PART NUMBER 153-2

1997 F-150 250

<u>Connector</u> <u>Number</u>	<u>Wire</u> <u>Assembly</u>	<u>Connector</u> <u>Number</u>	<u>Wire</u> <u>Assembly</u>	<u>Connector</u> <u>Number</u>	<u>Wire</u> <u>Assembly</u>	<u>Connector</u> <u>Number</u>	<u>Wire</u> <u>Assembly</u>
C100 (4.2L)	9D930	C120 (M) (4.6L) (5.4L)	12A581	C148 (F)	14405	C177	14305
C100 (4.6L) (5.4L)	12B637	C121 (4.2L)	9D930	C148 (M)	12A581	C178	14305
C101 (4.2L)	9D930	C121 (4.6L) (5.4L)	12B637	C149 (F)	14405	C179	14B102
C101 (4.6L) (5.4L)	12B637	C122 (4.2L)	9D930	C149 (M)	12A581	C180	14B110
C102 (4.2L)	9D930	C122 (4.6L) (5.4L)	12B637	C150 (F)	14405	C181	14B110
C102 (4.6L) (5.4L)	12B637	C123 (4.2L)	9D930	C150 (M)	12A581	C182	15525
C103 (4.2L)	9D930	C123 (4.6L) (5.4L)	12B637	C151	12A581	C183	15525
C103 (4.6L) (5.4L)	12B637	C124 (F) (4.6L) (5.4L)	12B637	C152	12A581	C184	15525
C104 (4.2L)	9D930	C124 (M) (4.6L) (5.4L)	14B102	C153	12A581	C185	15525
C104 (4.6L) (5.4L)	12B637	C125 (4.2L)	9D930	C154	12A581	C186	15525
C105 (4.2L)	9D930	C125 (4.6L) (5.4L)	12B637	C156	12A581	C187	15525
C105 (4.6L) (5.4L)	12B637	C126 (4.2L)	9D930	C157	12A581	C188	15525
C106 (4.2L)	9D930	C126 (4.6L) (5.4L)	12B637	C158 (F)	14401	C189	15525
C107 (4.2L)	9D930	C127 (4.2L)	9D930	C158 (M)	12A581	C190	18B574
C107 (4.6L) (5.4L)	12B637	C127 (4.6L) (5.4L)	12B637	C159 (F)	14401	C191	18B574
C108 (4.2L)	9D930	C128 (4.2L)	9D930	C159 (M)	12A581	C192	15525
C108 (4.6L) (5.4L)	12B637	C128 (4.6L) (5.4L)	12B637	C160 (F)	14401	C193	15525
C109 (4.2L)	9D930	C129 (4.2L)	9D930	C160 (M)	12A581	C194	12A581
C109 (4.6L) (5.4L)	12B637	C129 (4.6L) (5.4L)	12B637	C161	12A581	C196	12A581
C110 (4.2L)	9D930	C130 (4.2L)	9D930	C162	12A581	C200 (F)	14401
C110 (4.6L) (5.4L)	12B637	C130 (4.6L) (5.4L)	12B637	C163	14401	C200 (M)	7A786
C111 (4.2L)	9D930	C131 (4.6L) (5.4L)	12B637	C164	12A581	C201	7A786
C112 (4.2L)	9D930	C132 (4.6L) (5.4L)	12B637	C165	12A581	C203 (F)	14401
C113 (4.2L)	9D930	C133	12A581	C166	14305	C203 (M)	14A504
C114 (4.6L) (5.4L)	12B637	C134	12A581	C166	12A581	C204	14401
C115 (4.2L)	9D930	C135	12A581	C167	12A581	C205	14401
C115 (5.4L)	12B637	C136	12A581	C169 (F)	12A581	C206 (F)	14401
C116 (4.6L)	12B637	C137	12A581	C169 (M)	14305	C206 (M)	14A005
C117 (4.6L)	12B637	C138	12A581	C170	12A581	C206 (M)	14630
C118 (4.2L)	9D930	C139	12A581	C171 (F)	14B110	C207 (F)	14401
C119 (4.6L) (5.4L)	12B637	C140	12A581	C171 (M)	12A581	C207 (M)	14401
C120 (M) (4.2L)	12A581	C141	12A581	C172 (F)	15525	C208	14401
		C142	12A581	C172 (M)	12A581	C209	14401
		C143	12A581	C173	12A581	C202 (F)	14401
		C144	12A581	C174	12A581	C202 (M)	14A504
		C145	12A581	C175	12A581	C210 (F)	14401
		C146	12A581	C176	14305	C210 (M)	18B574
		C147	12A581				

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal Discover MasterCard VISA

153-3 HARNESS CAUSAL PART NUMBER

1997 F - 150 250

<u>Connector Number</u>	<u>Wire Assembly</u>	<u>Connector Number</u>	<u>Wire Assembly</u>	<u>Connector Number</u>	<u>Wire Assembly</u>	<u>Connector Number</u>	<u>Wire Assembly</u>
C211	14401	C246	14401	C300 (M)	14405	C422	14405
C212	14401	C247 (F)	14401	C301	9F759	C423	14405
C213	14401	C247 (M)	14A005	C302 (Regular Cab)	14A504	C500	14A005
C214	14401	C247 (M)	14631	C302 (Super Cab)	14632	C500	14631
C215	14401	C248 (F)	14401	C303	14A504	C501	14A005
C216	14401	C248 (M)	14A005	C304	14A504	C501	14631
C217	14401	C249	14401	C305 (F)	14A504	C502	14A005
C218	14401	C250	14401	C305 (M)	14B084	C503	14A005
C219	14401	C251	14401	C306	14A504	C504	14A005
C220	14401	C252	14401	C307	14A504	C505	14A005
C221	14401	C253 (F)	14401	C308	14B084	C506	14A005
C222	14401	C253 (M)	14A320	C309	14B084	C507	14A005
C223	14401	C254	14A005	C310	14B084	C508	14A005
C224 (F)	14401	C254	14631	C311	14B084	C509	14A005
C224 (M)	19A170	C255 (F) (Super Cab)	14632	C400 (F)	13412	C510	14A005
C225 (F)	14401	C255 (M)	14A504	C400 (M)	13A409	C511	14A005
C225 (M)	19A170	C256	14A005	C401	13412	C600	14A005
C226	14401	C257	14A005	C402	13412	C600	14630
C227	14401	C258	14A320	C403 (F)	13A409	C601	14A005
C228	14401	C259	14A320	C403 (M)	14405	C601	14630
C229	14401	C260	15525	C404	13A409	C602	14A005
C230	14401	C261	19A170	C405	13A409	C603	14A005
C231	14401	C262	19A170	C406	13A409	C604	14A005
C232 (F)	14A348	C263	19A170	C407	13A409	C605	14A005
C232 (M)	14401	C264	19A170	C408 (Flareside)	13A409	C606	14A005
C233	14401	C265 (F)	19A170	C409 (Flareside)	13A409	C607	14A005
C234	14401	C265 (M)	19B113	C410	13A576	C608	14A005
C235	14401	C266	19B113	C411 (F)	13A576	C609	14A005
C236	14401	C267	Junction	C411 (M)	14405	C1001 (4.6L) (5.4L)	12B637
C237	14401	Box Fuse/Relay Panel		C412 (F)	13A576	C1011 (5.4L)	12B637
C238	14401	C271	14A005	C412 (M)	14405	C1012 (5.4L)	12B637
C239	14401	C273	14401	C413	14405	C1013 (5.4L)	12B637
C240	14401	C274	14401	C414	14405	C1014 (5.4L)	12B637
C241	14401	C276	14401	C415	14405	C1015 (5.4L)	12B637
C242	14401	C277	14401	C416 (F)	13A625	C1016 (5.4L)	12B637
C243	14401	C278	14401	C416 (M)	14A504	C1017 (5.4L)	12B637
C244	14401	C285	14401	C419	14405	C1018 (5.4L)	12B637
C245	14401	C300 (F)	9F759	C420	14405		

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order

PayPal American Express Cards Discover MasterCard VISA


VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.


FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE IS: **A5/FU** - (UNDER THE FLOOR OF THE DRIVER'S LEFT FOOT.)


FRONT/REAR DIRECTION
FRONT

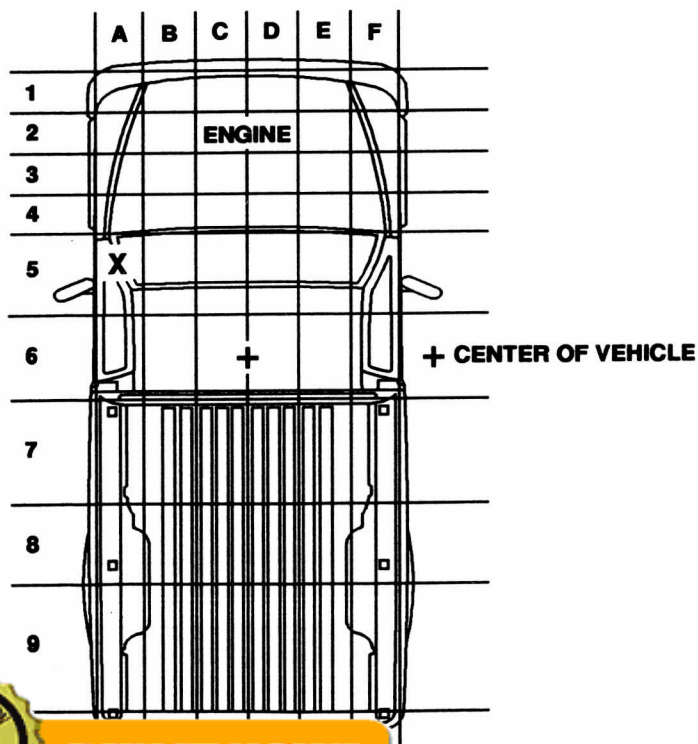

OVER/UNDER DIRECTION

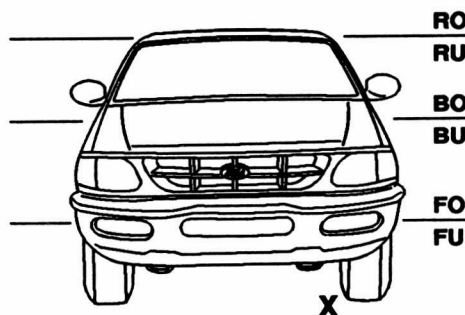

- R = ROOF LINE
- RO = ROOF OVER
- RU = ROOF UNDER
- B = BELT LINE
- BO = BELT OVER
- BU = BELT UNDER
- F = FLOOR PAN
- FO = FLOOR OVER
- FU = FLOOR UNDER

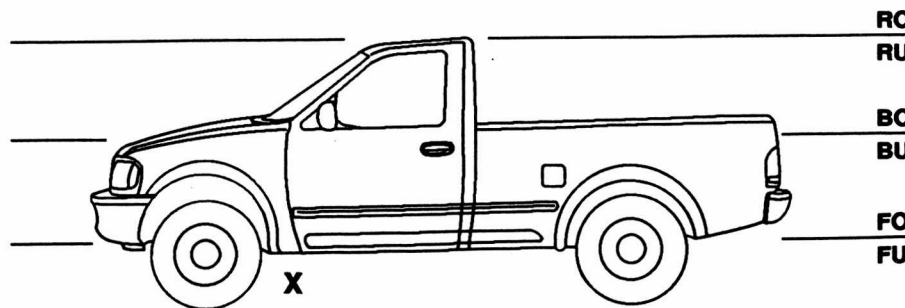

SIDE VIEW

F-150/F-250
FCS-12263-97

100% SATISFACTION GUARANTEED

BUY IT NOW!

Click Here To Order


100% SATISFACTION GUARANTEED
BUY IT NOW!
 Click Here To Order

100th ANNIVERSARY



TECHNICAL SERVICE
SUPPORT OPERATIONS
 Ford Customer Service Division



FCS-12263-97-R

COPYRIGHT © 1996
 FORD MOTOR COMPANY